 




INSTRUCTION MANUAL

APTDVD808PR

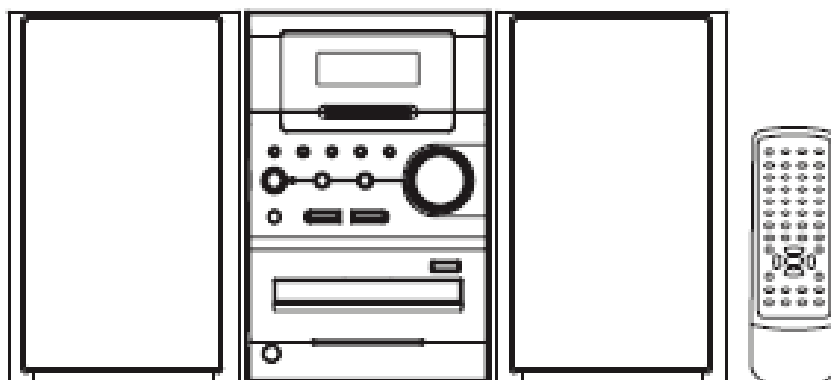

DVD/MP3/CD/Radio Micro System

 
Customer Help Line: 01422 263313

Opening Hours: Mon-Fri 8am-8pm, Sat 9am-4pm, Sun 11am-4pm

Or visit our website at www.ekey.co.uk

WARNING

TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

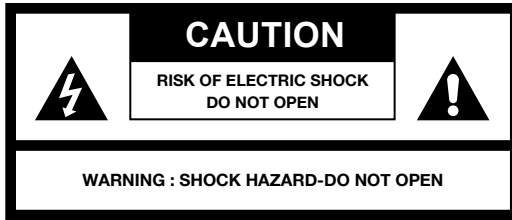


LIGHTNING FLASH WITH ARROWHEAD SYMBOL -
within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



EXCLAMATION POINT - within an equilateral triangle, is used to indicate that a specific component shall be replaced only by the component specified in that documentation for safety reason.

 The following label has been affixed to the unit, listing the proper procedure for working with the laser beam:

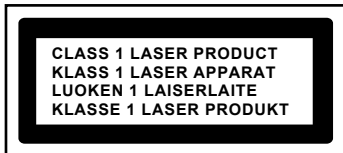

CLASS 1 LASER PRODUCT LABEL -

This label is attached to the place as illustrated to inform that the apparatus contains a laser component.



WARNING LABEL INFORMING OF RADIATION -

This label is placed inside the unit. As shown in the illustration. To warn against further measures on the unit. The equipment contains a laser radiating laser rays according to the limit of laser product of class 1.

SAFETY INSTRUCTIONS

1. **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the appliance is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instruction should be retained for future reference.
3. **HEED WARNINGS** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS** - All operating instructions should be followed.
5. **WATER AND MOISTURE** - The appliance should not be used near water, for example, near a bathtub, washbowl, kitchen sink, laundrytub, swimming pool or in a wet basement.
6. **VENTILATION** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. Do not place on bed, sofa, rug or similar surface that may block the ventilation openings, in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. **HEAT** - The appliance should be situated away from heat sources such as radiators, stoves, or other appliances (including amplifiers) that produce heat.
8. **POWER SOURCE** - The appliance should be connected to power supply only of the type described in the operating instructions or as marked on the appliance.
9. **GROUNDING** - Precautions should be taken to ensure that the grounding means of an appliance is not defeated.
10. **POWER CORD PROTECTION** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
11. **POWER LINES** - An outdoor antenna should be located away from power lines.
12. **OBJECT and LIQUID ENTRY** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
13. **ESD WARNING** - The display does not function properly or no reaction to operation of any the control may due to the electrostatic discharge. Switch off and unplug the set. Reconnect after a few seconds.
14. **DAMAGE REQUIRING SERVICE** - The appliance should be serviced by qualified service personnel when:
 - a. The power-supply cord or plug has been damaged.
 - b. Objects have fallen into, or liquid has been spilled into the appliance enclosure.
 - c. The appliance has been exposed to rain.
 - d. The appliance has been dropped, or the enclosure damaged.
 - e. The appliance does not appear to operate normally.
15. **SERVICING** - The user should not attempt to service the appliance beyond that described in the user operating instructions. All other servicing should be referred to qualified service personnel.

Notes:

- a. Dirty or scratched CD may cause a skipping problem. Clean or replace the CD.
- b. If an error display or malfunction occurs, disconnect the AC cord and remove all the batteries. Then turn the power back on.

BEFORE OPERATION

Notes: CONCERNING COMPACT DISCS.

Since dirty, damaged or warped discs may damage the appliance, care should be taken of the followings items:
Usable compact discs. Use only compact disc with the mark shown below.

 


BEFORE CONNECTION

CAUTION

1. Turn off the power of all equipment before making connections.
2. Read instructions of each component you intend to use with this appliance.
3. Be sure to insert each plug securely. To prevent hum and noise, do not bundle the connection cords of speaker cord.

CONNECTION

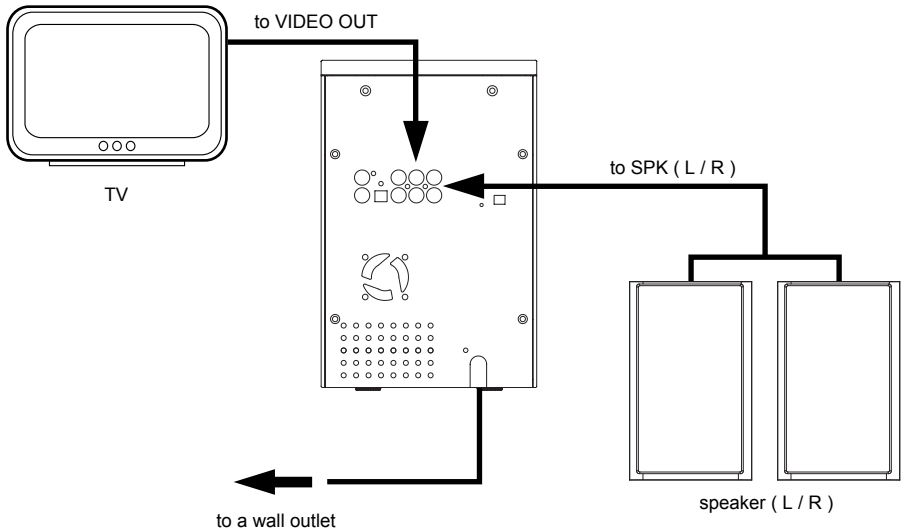


AC POWER


You can power your appliance by plugging the AC power cord at the back of the appliance into a wall AC power outlet. Check that the rated voltage of your appliance matches your local voltage.

LOCATION OF CONTROL

 1. LCD DISPLAY
2. CLOCK
3. ALARM / FM ST. / MONO
4. MEMORY
5. FUNCTION
6. MUTE
7. EQ
8. DOWN (MEMORY)
9. UP (MEMORY)
10. STANDBY
11. PLAY / PAUSE
12. STOP / BAND
13. VOLUME CONTROL
14. REMOTE SENSOR
15. DOWN (SCAN)
16. UP (SCAN)
17. OPEN / CLOSE
18. CD / DVD DOOR
19. POWER

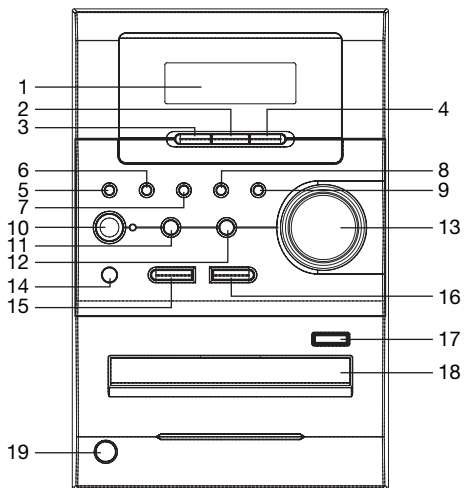


 20. COAXIAL
21. S-VIDEO
22. OPTICAL
23. Cb
24. Cr
25. Y
26. VIDEO
27. SPK-R
28. SPK-L
29. FM ANTENNA
30. AM ANTENNA
31. AC CORD

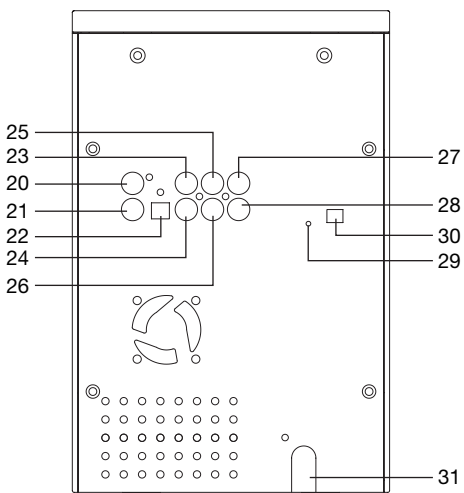

REMOTE CONTROL

- | | |
|---------------------|------------------------|
| 1. OPEN / CLOSE | 21. SHIFT ▲▼◀▶ , ENTER |
| 2. POWER | 22. ZOOM |
| 3. TIME | 23. RETURN |
| 4. CLOCK | 24. ST. / MO. / PS |
| 5. 1 - 10+ | 25. REPEAT |
| 6. OSD | 26. EQ |
| 7. SLOW | 27. MODE |
| 8. MENU | 28. AUDIO |
| 9. SLEEP | 29. ANGLE |
| 10. SETUP | 30. SUBTITLE |
| 11. RESUME | 31. P/N |
| 12. STOP / BAND ■ | 32. PROGRAM |
| 13. REV ◀◀ | 33. MUTE |
| 14. PLAY / PAUSE ▶▶ | 34. FUNCTION |
| 15. PREVIOUS ◀◀ | 35. ALARM / RESET |
| 16. NEXT ▶▶ | |
| 17. VOLUME DOWN | |
| 18. FORWARD ▶▶ | |
| 19. VOLUME UP | |
| 20. TITLE | |

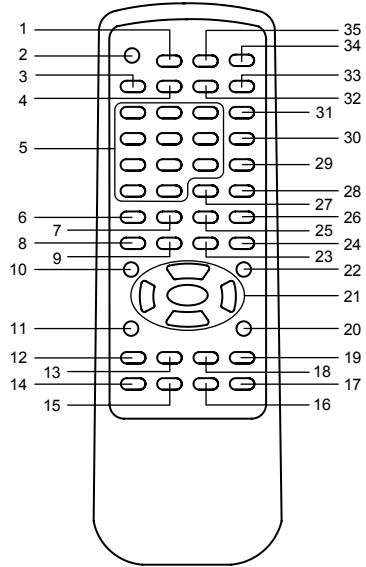 

BATTERY INSTALLATION

Insert 2 x "AAA" size batteries into the battery compartment. Be sure that the batteries are inserted correctly to avoid damage to the remote control. Always remove the batteries when the remote control will not be used for a long period of time, as this will cause leakage to the batteries and subsequently damage to your set.

Notes:

- Use batteries of the same type. Never use different types of batteries together.
- If the distance required between the remote control and the appliance decreases, the batteries are exhausted. In this case replace the batteries with new one.

SENSOR WINDOW OF THE RECEIVER

- Even if the remote control is operated within the effective range, its operation may be impossible if there are any obstacles between the appliance and the remote control.
- If the remote control is operated near other appliances which generate infrared rays, or if other remote control devices using infrared rays are used near the appliance, it may operate incorrectly.

RADIO OPERATION

GENERAL OPERATION

1. Set the "FUNCTION" selector to "RADIO" mode.
2. Select desired band by using the "BAND" selector.
3. Adjust radio frequency to your desired station by using the "TUNING" control.
4. Adjust the "VOLUME" control to the desired level.

FM / FM-STEREO RECEPTION

- Set the "BAND" selector to FM mode for MONO reception.
- Set the "BAND" selector to FM ST. mode for FM STEREO reception. The Stereo indicator light up to show FM ST. mode.




 
FOR BETTER RECEPTION

FM - This appliance has a FM antenna located at the rear cabinet. This wire is completely unraveled and extended for better reception.

AM - This appliance is equipped with a built - in directional ferrite AM antenna. Rotate the appliance to get better reception.

CD / MP3 OPERATION

GENERAL OPERATION

- PLAY / PAUSE  Press to start playing CD / MP3 disc.
Press again to stop playing CD / MP3 operation temporarily.
Press again to resume playback.
- SKIP +  &
SKIP -  Press to go to the next track or back to the previous track.
Press and hold while playing until you find the point of the sound.
- STOP  Press to stop all CD / MP3 operation.

PLAYBACK

 
1. Set the "FUNCTION" selector to "CD / MP3" mode.
2. Open the CD door and place a CD / MP3 disc with the label up in the CD compartment.
3. Close the CD door.
4. Focus search is performed if disc is inside.
For CD disc - Total number of tracks is read and appears on the display.
For MP3 disc - "MP3" appears on the display.
5. Press the "PLAY / PAUSE" button to start playing CD / MP3 disc.
6. Adjust the "VOLUME" control to the desired level.
7. Press the "PLAY / PAUSE" button again when you want to stop playback temporarily.
8. Press the "STOP" button when finished.

CD / MP3 OPERATION


PROGRAM

It is possible to program the tracks you wish to play in sequence of your choice. Program mode is activated while in stop mode. If the unit is playing, press the "STOP" button first and turn on the TV set.

1. Press the "PROGRAM" button on the remote control, the TV screen will show:

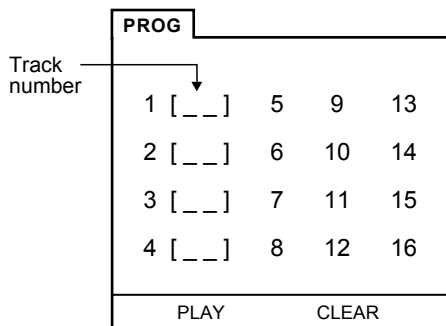

For CD

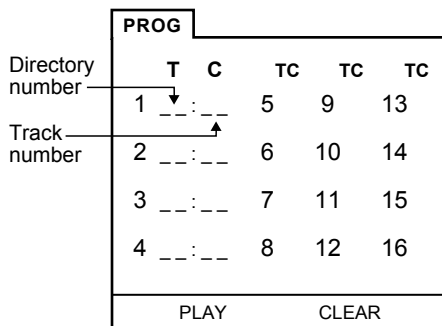 


For MP3 Disc

2. Press the numeric buttons to select the directory number (if applicable) and track number.
3. Press the "PLAY / PAUSE" button to start the program play.
4. Press the "STOP" button to cancel the program play.

REPEAT

Press the "REPEAT" button before or during playing CD / MP3 disc, each press switches the mode function as follows:

 - 1 - REPEAT 1
- 2 - REPEAT ALBUM (*MP3 ONLY)
- 3 - REPEAT ALL
- 4 - NORMAL PLAYBACK

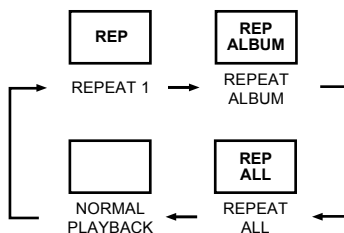

DVD / VCD OPERATION

GENERAL OPERATION

1. PLAY / PAUSE BUTTON

Under the stop mode, press it once to start playing.

- A. During the play mode, press it once to interrupt the playing and show the static picture.
- B. Press it again to continue playing

2. PREV / NEXT BUTTON

Under the state of play or pause, press it once to skip one chapter or one music forward or backward, then continue playing.

3. REV / FWD BUTTON

- A. During play, press the "REV" button or the "FWD" button on remote control repeatedly and the disc will go fast forward or backwards at 2, 4, 8 or 20 times the normal speed.
- B. Under the fast forward/backward mode, press the "PLAY / PAUSE" button, it will resume to normal playback.

4. REPEAT

- A. Press the "REPEAT" button once, repeat chapter or track.
- B. Press it again, repeat title or disc.
- C. Press it once more to cancel the repeat function.

5. ZOOM (CD not valid)

- A. Press this button on the remote control once to enlarge 2 times the original size.
- B. Press it again and again, the picture will be enlarged 3, 4, 1/2, 1/3 and 1/4 times the original size.
- C. While playing with enlarged picture, press the 4 shift buttons ▲ ▼ ◀ ▶ on remote to move the picture.

6. MENU (CD not valid)

- A. Press the "MENU" button on the remote control to show the main contents of the DVD.
- B. Use the 4 shift buttons on the remote control to choose the content or music you want.
- C. Press the "PLAY / PAUSE" button or the "ENTER" button on the remote control to confirm playing.

In addition, if there are subtitles, using the above steps (A-B) to choose your desired subtitles. If the disc has no contents to display, this function will not be available.

7. TITLE (CD not valid)

- A. Press the "TITLE" button on the remote control to show the main contents of the DVD.
- B. Use the 4 shift buttons ▲ ▼ ◀ ▶ on the remote control to select your desired content or number.
- C. Press the "PLAY / PAUSE" button or the "ENTER" button to confirm playing.

Note: The TITLE button does not work with discs that have no contents.

8. SUBTITLE (CD not valid)

Press the "SUBTITLE" button on the remote control repeatedly to select your desired subtitles (as to those DVD recorded without subtitles, not.valid).

DVD / VCD OPERATION

9. ANGLE (CD not valid)

Press the "ANGLE" button on the remote control in sequence to choose the angle of the scenes. (As to those DVD recorded without multi- angular, not valid).

10. LANGAUGE

When playing DVD disc

A. Press the "AUDIO" button on the remote control to select audio channel 1 output.

B. Press it again to select audio channel 2 output.

Note: Audio channel 1,2... is the music style recorded in disc, if the disc does not has such characteristic, "NOT VALID" will appear.

11. PBC & RETURN (CD not valid)

A. During playing VCD, press the "PBC" button first to "MENU PLAY ON", the main menu show on the screen, select the deired music. Press the "RETURN" button to go back to main menu.

B. During playing, after pressing the "SETUP" button to enter setup function, press the "RETURN" button to exit "SETUP" and start playing again.

12. AUDIO

- In VCD Mode, Press the "AUDIO" button on remote to choose the audio channel:

STEREO → MONO L → MONO R

(The L/R button on the unit has the same function)

13. SETUP

A. Press the "SETUP" button on the remote control, "...SETUP MENU...MAIN PAGE..." appears on the TV screen.

B. During the setup mode, using the 4 shift keys ▲ ▼ ◀ ▶ and the "ENTER" button on the remote control to complete your desired functional setting.

 
FUNCTION AND OPERATION EXPLANATION

A LIST OF MENU SETTING ITEMS

SETUP MENU.....MAIN PAGE




SYSTEM SETUP

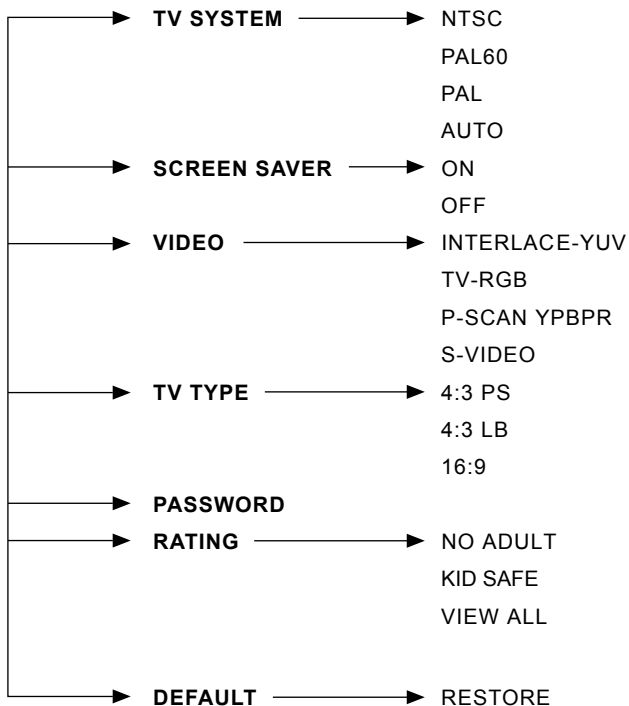

FUNCTION AND OPERATION EXPLANATION

 LANGUAGE SETUP PAGE

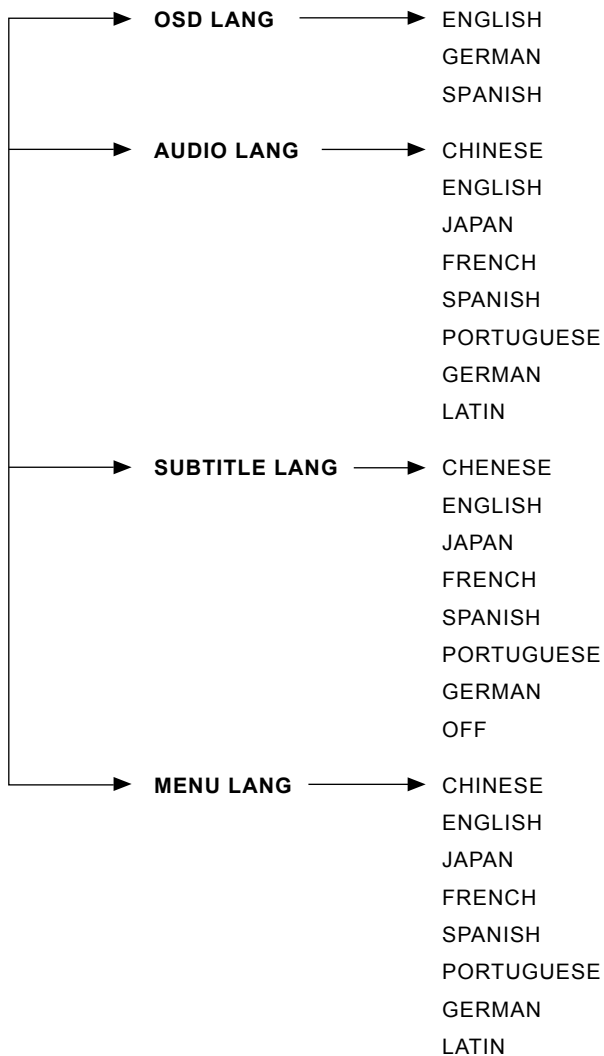

FUNCTION AND OPERATION EXPLANATION

AUDIO SETUP

AUDIO OUT → SPDIF/OFF
SPDIF/RAW
SPDIF/PCM

VIDEO SETUP

BRIGHTNESS

CONTRAST

HUE

SATURATION

SPEAKER SETUP

DOWNMIX → LT/RT
STEREO
VSS

DIGITAL SETUP

OP MODE → LINE OUT
RF REMOD

DYNAMIC RANGE

DUAL MODO → STEREO
MONO L
MONO R
MIX MONO

FUNCTION AND OPERATION EXPLANATION

Explanation for each setup

1). SYSTEM SETUP

The setup structure is as following:

• TV SYSTEM

There are four types of TV system setting in this system: NTSC, PAL60, PAL and AUTO. Select a different setting according to your TV system.

• SCREEN SAVER

There are two modes of ON or OFF in this unit. Under the ON mode, if the stop state is more than four minutes during DVD function, the SCR, screen saver picture appears. There are initial pictures on the TV screen during CD disc playing. The purpose of SCR SAVER is to protect the display screen from damage.

• VIDEO

- A. INTERLACE-YUV: when you use Y, Cb, Cr cable to connect this unit to the TV set, please select this item.
- B. P-SCAN YPBPR: when you use Y, Pb, Pr cable to connect this unit to the TV set, and convert the TV system to progressive scan, please select this item.
- C. S-VIDEO: Choose this setting if your DVD is connected to a TV with S-VIDEO cable.

 
• TV TYPE

Select the screen format to fit your TV screen.

NORMAL/PS (4:3 Pan Scan): Select this screen when this system is connected to normal TV set. The wide-screen picture displays on the full screen, but some parts of the video picture are cut off automatically.

NORMAL/LB (4:3 Letter-box): Select this screen when this system is connected to normal TV set. When display wide-screen picture, there are black strips on upper and bottom.

WIDE (16:9): To select this screen when this system is connected to wide-screen TV set.

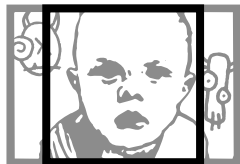

NORMAL/PS



NORMAL/LB



WIDE

Note: Some DVD may select "NORMAL/LB" automatically, but not "NORMAL/PS" and vice versa.

FUNCTION AND OPERATION EXPLANATION

• PASSWORD

The initial setting for this item is "Password lock-in" that means you cannot carry out the "RATING" selection or change the password at present. If you want to carry out RATING setup, you must first enter the initial password "0000" by using the number keys on the remote control, then press ENTER button to confirm; To change the password, you need to enter the initial password first, then enter the new password (four numbers).

• RATING

The rating feature is a rating limit system, like movie ratings. It works with DVD discs that have been assigned a rating. This helps you control the types of DVDs that your family watches.

There are 3 rating options: NO ADULT, KID SAFE, VEIWI ALL.

Notes: If the password option is locked, you cannot set the ratings limit; the rating limit does not work when the password option is unlocked.

• DEFAULT

Choose this option to resume all the setup options to default settings.

2). LANGUAGE SETUP

-After entering OSD LANGUAGE setting, select your desired OSD language by using the direction button, then press ENTER button to confirm it. There are three modes for you to select: English, German and French.

-After entering AUDIO LANG setting, select your desired AUDIO language by using the direction button, then press ENTER button to confirm it. There are eight modes for you to select: Chinese, English, Japanese, French, Spanish, Portuguese, Latin and German.

-After entering SUBTITLE LANG setting, select your desired SUBTITLE language by using the direction keys, then press ENTER button to confirm it. There are eight modes for you to select: Chinese, English, Japanese, French, Spanish, Portuguese, German, off.

-After entering MENU LANG setting, select your desired MENU language by using the direction button, then press ENTER button to confirm it. There are eight modes for you to select: Chinese, English, Japanese, French, Spanish, Portuguese, German and Latin.

Note: if the disc does not have the language you select, it can be played only with the disc menu language recorded.

FUNCTION AND OPERATION EXPLANATION

3). AUDIO SETUP

The setup structure is as follows:

-AUDIO OUT

Press the direction button to select the audio out mode you want, then pressing the ENTER key to confirm it. There are three kinds of audio out mode in this unit: SPDIF/OFF, SPDIF/RAW and SPDIF/PCM. To set the audio out according to your audio output connection mode, for instance, if you want the audio out from the SPEAKER terminals, the audio out must be set to SPDIF/OFF; if you want the audio out from the COAXIAL OUT, it must be set to SPDIF/RAW or SPDIF/PCM. SPDIF/RAW this means that if the audio input signal from the disc being playing in this unit is 5.1CH or 2CH, then the audio output is 5.1CH or 2CH. SPDIF/PCM means that no matter the audio input signal from the disc being played in this unit is 5.1CH or 2CH, the audio output is always 2CH.

4). VIDEO SETUP

The setup structure is as follows:

Press the direction button (▲ ▼) to move the slide, you can carry out the BRIGHTNESS, CONTRAST, HUE and SATURATION setting separately.

5). SPEAKER SETUP

The setup structure is as follows:

-DOWNMIX

Use the (▲ ▼) buttons to move the scroll and adjust the saturation.

6). DIGITAL SETUP

The setup structure is as follows:

-OP MODE

To select OP mode among LINE OUT, RF REMOD.

-DYNAMIC RANGE

To select the dynamic range between Full to off.

-DUAL MONO.

To select DUAL MONO among stereo, mono L, mono R and Mix mono.

OTHER FEATURE

JPEG PICTURE PLAYING

Use the ◀▶▲▼ buttons to enter the Directory Region and highlight the desired directory, then choose the desired JPEG picture and press the "ENTER", the picture will be show full screen on TV. Press the "RETURN" to go back to the Directory serene.

ZOOM

1. When playing JEPG pictures, press the "ZOOM" button to enlarge or reduce the picture from "ZOOM 2" → "ZOOM 3" → "ZOOM 4" → "ZOOM 1/2" → "ZOOM 1/3" → "ZOOM 1/4" → "ZOOM OFF".
2. When a picture is playing or pausing, press the ◀▶▲▼ buttons to change the display angle:
 - ▲ : flip vertical
 - ▼ : flip horizontal
 - ◀ : rotate 90° counter-clockwise
 - ▶ : rotate 90° clockwise