



COLOUR TV AND DVD COMBINATION
Operating Instructions



- ON SCREEN DISPLAY
- REMOTE CONTROL
- MULTI BAND TUNER
- SCART CONNECTION
- SIDE AV INPUT
- BUILT IN DVD PLAYER

Customer Help Line: 01422 26 33 13

Website: www.ekey.co.uk

Table of Contents

Safety Instructions	2	User Help Guide	15
Features	4	Specifications	16
Installation	4	Disc Care and Handling	16
Remote Control Battery	4	Main Plug Rewiring	16
Optional Equipment Connections	5		
Front Control Panel	5		
Remote Control Operation	6		
Menu Navigation Tv	10		
Menu Navigation DVD	12		

Warning


	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN		 The lightning flash with arrow head within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.
WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.			 The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE AND OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHOULD NOT BE PLACED ON THIS APPARATUS.


CAUTION

Changes or modifications not expressly approved by the party responsible for compliance with the CE Rules could void the user's authority to operate this equipment.

The following illustrations represent the precautions to be taken when using and moving your television:

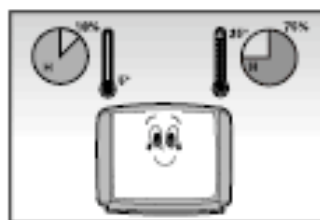 

1. Do NOT expose the television to extreme temperature conditions (below 5° C and above 35° C) or to extreme humidity conditions (less than 10% and more than 75%).

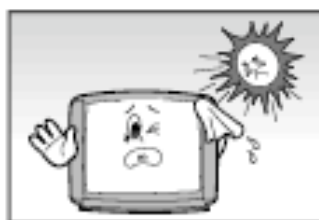

2. Do NOT expose the television to direct sunlight. Or other heat sources such as radiators or fanheaters.




3. Do NOT expose the Tv to any liquids or place vases on top of the Tv or use in wet or damp locations. Do not operate with wet hands.



4. If the television is broken, do not try to repair it yourself. Contact qualified service personnel.



5. During a thunderstorm or when going on holiday, disconnect the mains supply and aerial (if external).

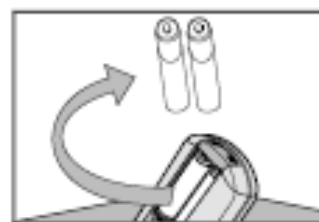

6. If the remote control is not used for a long period of time, remove the batteries and store it in a cool, dry place.

Warning

7. POWER-CORD PROTECTION - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

8. OVERLOADING - Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

9. OBJECT AND LIQUID ENTRY - Do not push objects through any openings in this unit as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid into the unit.

10. SERVICING - Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

11. DAMAGE REQUIRING SERVICE - Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power-supply cord or plug is damaged.
- B. If liquid has been spilled, or objects have fallen into the unit.
- C. If the unit has been exposed to rain or water.
- D. If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.
- E. If the unit has been dropped or the cabinet has been damaged.
- F. When the unit exhibits a distinct change in performance, this indicates a need for service.

12. REPLACEMENT PARTS - When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

13. SAFETY CHECK - Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.

14. HEAT - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

PLACING THE TV

Do not place the TV on an unstable surface or shelf. If placing in a cabinet ensure there is adequate ventilation. Do not cover ventilation slots and do not place the TV on a blanket or fabric which could inhibit ventilation.

STANDBY

Do NOT leave the TV in standby or operating when leaving the house. Do not leave in standby for long periods such as overnight, as this TV uses 18W in standby mode.

Discoloured patches may appear on the screen if the TV is not turned off via the mains switch.



CLASS 1 LASER PRODUCT
DANGER: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.



Correct disposal of this Product (Waste Electrical & Electronic Equipment (WEEE))

The crossed out "Wheeled bin" is intended to show that this appliance must not be placed with ordinary household waste at the end of its useful life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please keep separate from other household waste and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where you purchased the product, or their local government office for details of where and how you can take this item for environmentally safe re-cycling.

Business users should contact their supplier and check the terms and conditions of their purchase contract.

This product must not be mixed with other commercial wastes for disposal.

Features

TV Mode:

TV MODE.

Infrared Remote Control. Allows easy control of the Tv from your armchair.

On Screen optional Display. This Tv can display the OSD language in English, Spanish, Portuguese, German, Danish, Swedish.

Picture Adjustments. The OSD allows precise adjustment of Brightness, Contrast, Colour, Tint (NTSC only) and Sharpness.

Sleep Timer. You may set the Tv to switch off to Stand-by in 30 minute segments up to 180 minutes. When the timer reaches (0) the tv will switch to stand by automatically.

Memory Backup. This Tv uses a "non volatile" memory which stores all your settings even when power is interrupted.

No Signal. If the "Blue Background" is set "ON" and no signal input is received, the Tv will switch to stand-by after a 10 minute duration. This is applicable to Tv and *AV* modes.

TELETEXT.

Teletext. This Tv can display all European languages in current use, providing the programme provider is transmitting teletext.

DVD MODES.

Random Playback. Tracks may be selected to play back randomly.

Programmable Playback. You may programme tracks or chapters to play in the order you require.

DVD menus in a desired language. You can display DVD menus in a desired language, providing the DVD disc supports that language.

Sub Title Languages. You may select any Sub Title language on a DVD disc, providing the disc supports that language.

Screen Saver/Auto Power off. The screen saver programme starts when there is no "Moving" input from the DVD player for 3 minutes, such as in "Pause" mode or "No Disc". If the screen saver is active for 20 minutes the Tv will switch to Stand-by.

Selecting an Angle. Some DVD's provide different views of a scene. This player allows you to select the angles available. This is discontinued provided only.

Search. Chapter search, Title search, Track search, Time search.

Repeat. Chapter, Title, Track, Group, ALL, A-B

Resume Play. You can stop a DVD and resume playback from the same point, if you do not remove the disc or switch to Tv and back to DVD.

Dynamic range control. The volume range may be controlled.


Audio Language and Sound mode. You may select any language or Sound Mode on a DVD disc if they are authored on that disc.

Installation

Power Source

This apparatus is designed to operate from a 90 - 240V AC 50Hz source. It is supplied with a standard UK 3 pin (13A) plug. If for any reason the plug is damaged and requires replacing, please see page 18 for wiring details. If you are unsure please seek professional advice.


Antenna Connection. Any Tv is only as good as the signal it receives. In poor or fringe areas an outdoor or loft aerial is recommended. In strong signal areas a "set top" aerial may be sufficient.

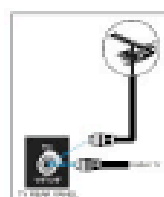

Other apparatus such as a "set top" box or VCR may also be connected to the Aerial socket.

Remote Control Battery Installation

Requires two AAA Batteries (supplied).

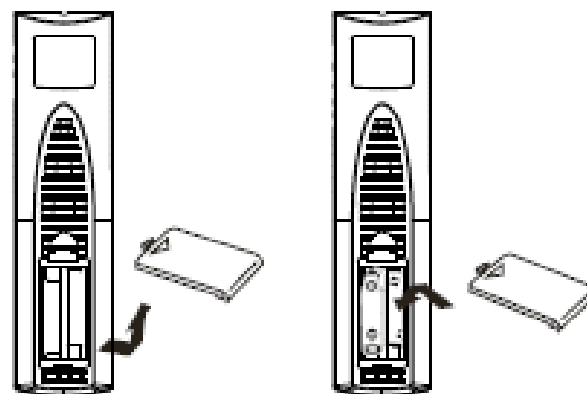

Remove the battery cover and place the batteries (2x AAA) cells into the space, making note of the polarities. Replace the battery cover. Do not mix batteries of different types.

If not using the Remote control for a long period, remove the batteries to prevent leakage.


Exhausted Batteries.

Do not break open or throw on a fire. Contact the local waste disposal agency for advice.


Optional Equipment Connections

Connection Panels


Side AV

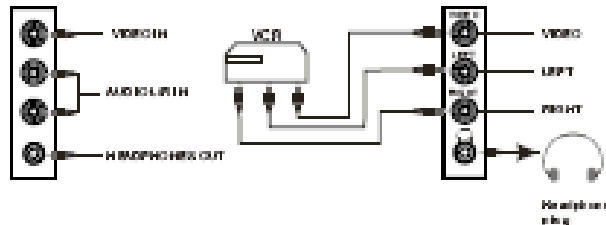

Rear of TV

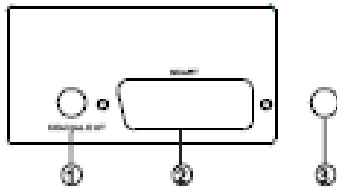

1. Coaxial digital sound output
2. SCART AUDIO / VIDEO INPUT / OUTPUT connector.
3. 750hm coaxial connector for Aeria / Cable network.

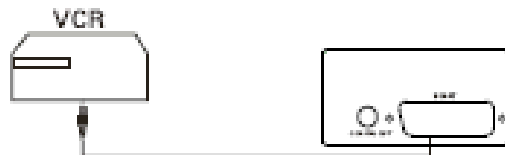

SCART Procedure


- Connect equipment as shown to rear SCART connect.
- TV will check SCART signal Automatically and change to SCART status.

COAXIAL Procedure

- Connect coaxial signal to sound equipment .
- Press AV/DVD on the remote control to change DVD status.

Note: Coaxial output is effective in DVD mode.

Front Control Panel

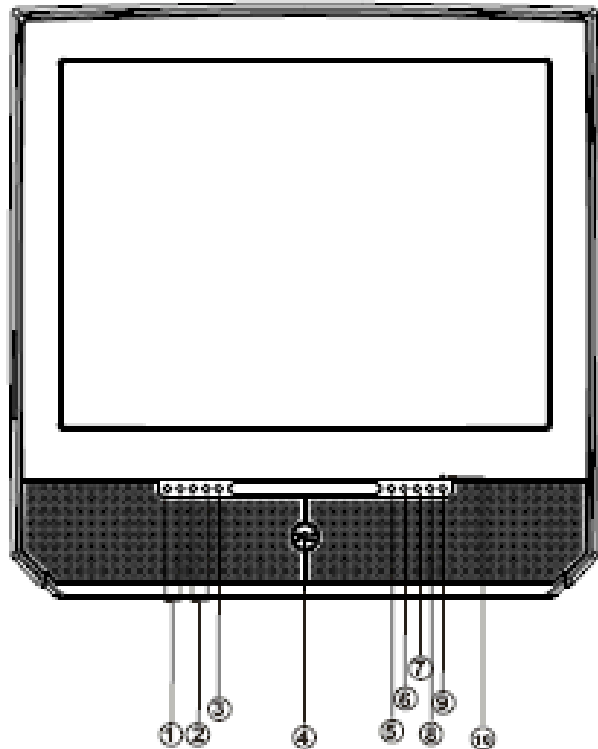

1. Volume adjustment.
2. Program selection.
3. Menu display.
4. Power
5. TV/DVD change.
6. DVD player pause.
7. Stop.
8. Open/Close.
9. Remote control sensor.
10. Power indicator.

Remote Control Operation



TV MODE:

POWER

Press this button to switch television on or off.

MUTE Button

To turn off the sound, press this button once. The TV will be silenced and the symbol MUTE will appear on the screen. The mute feature can be released by pressing the MUTE button again or one of the VOL > or VOL < buttons.

TV/AV/DVD Button

Selects TV/AV(side)/SCART/DVD.

Direct Channel Selection Button

Allows direct access to any channel.

P.P Button

Press the PP button to select <custom>, <dynamic>, <mild> or <standard> mode.

DISPLAY Button

When you press this button, the channel number will appear in the upper right corner of the screen. Press the button again to remove display from the screen.

SLEEP Button

To set TV turn off after a preset amount of time, press the SLEEP button on the remote control. The shut off time can be determined each time the button is pressed in order of 0, 30, 60, 90, 120, 150 or 180 minutes.

Q.VIEW Button

This button allows you to go to back the previous channel selected by just pressing the Q.VIEW button. Press this button again to return to the channel you were watching.

LOCK Button

Press this button to lock the front control buttons of the TV. Note :- this function is for TV only. In DVD mode the 3 DVD buttons active are Open /Close, Stop and Play/Pause

MENU Button

Press to display the On-Screen menu function.

PROG +/- Button

Press the PROG +/- button to change to a higher/lower numbered channel into memory.

Remote Control Operation



TV Mode:

VOL +/- Button

Press the VOL + button to increase, or the VOL - button to decrease the volume level.

SYS. Button

Press to select PAL or NTSC Colour modes (Select PAL in UK).

TELETEXT MODE:

REVEAL Button

Press this button to reveal the hidden information for some Teletext pages.

SIZE Button

Press this button to change the Teletext screen display mode among the following: (1) Upper half screen enlarged; (2) Lower half screen enlarged; (3) Normal screen state.

STOP Button

Press this button to stop teletext.

CLOCK Button

Press this button to display teletext clock.

INDEX Button

Press this button to display the index page.

OFF Button

Press this button to turn off the teletext.

ON/MIX Button

Press this button to turn on the teletext.

SUB.PAGE BUTTON

Press this button to display subpages.

FAST TEXT (Red, Green, Yellow, Blue) buttons.

When in Text mode, use the coloured buttons to select pages named at the bottom of the page.

Remote Control Operation



DVD Mode:

POWER

Press this button to switch television on or off.

OPEN/CLOSE Button

Press OPEN/CLOSE button to load disc on disc tray. Hold the disc without touching either of its surfaces, position it with the printed title side facing up, align it with the guides, and place it in its proper position. In case of interactive DVD with playback control, a menu appears on the TV screen.

DVD MENU Button.

When playing some DVD discs, press this button to return to the root menu.

PROGRAM Button.

Music track selection.

SUBTITLE Button

To select a subtitle language (disc dependant). Press once to change each language. To turn "OFF" keep pressing until "Subtitle OFF" is shown.

DVD SETUP Button.

To set the DVD player parameters see page 12

AUDIO Button. Press this button to select any language available on the DVD disc.

GOTO Button.

Press this button to go to a desired position on the disc. There are 2 search modes. You can select from "Chapter" and "Time". If you input a number greater than the disc capacity the player will revert to its original position.

DISPLAY Button.

Press this button to display the disc status. Current Track, Current Chapter and Time Played can be seen.

PREV/NEXT Button

Press these button to go to the previous/next chapter (DVD).

FR/FF Button

These buttons allow skipping ahead/back at 5-level speed. Press "PLAY" button to return to normal playback.

Remote Control Operation



DVD Mode :

REPEAT Button

To press this button you can repeatedly play a title(DVD) or all tracks(CD) when "ALL" appears on TV screen, you can repeatedly play a chapter (DVD) or a single track(CD) when "Repeat chapter" appears on TV screen, you can cancel repeat functions when "Repeat off" appears on TV screen.

PLAY/PAUSE Button

Press this button to start playback. Press this button again to pause playback.

STOP Button

When this button is pressed once, the player memorises the stopping point. Playback will resume from this point if the Play button is pressed. If the Stop button is pressed twice the player will not resume Play. Also if the player is switched to Tv the memory is cleared.

TITLE button

DVD disc:

Press TITLE button, then the DVD menu or titles available on the disc will be displayed. Then you can use " " and ENTER button to select programs.

ZOOM button

1. Press ZOOM during playback or still playback to activate the Zoom function. The square frame appears briefly in the right bottom of the picture.

2. Each press of the ZOOM button changes the TV screen in the following sequence:

2X size → 3X size → 4X size → 1/2 size → 1/3 size → 1/4 size → normal size

3. Use the " " buttons to move through the zoomed picture.

4. To resume normal playback, press ZOOM button until screen becomes 1X.

Note: Zoom may not work on some DVDs.

ANGLE button

If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback. Press ANGLE repeatedly during playback to select a desired angle. Note that the number of the current angle appears on screen.

Note:

The angle indicator will blink on the TV screen during scenes recorded at different angles as an indication that angle switching is possible.

SLOW Button

Press this button during playback to activate slow playback. Each press of the button will change the playback speed. The speeds available are 1/2, 1/4, 1/8, 1/16, Normal

Menu Navigation

TV PARTS:

Menu Navigation

Press the MENU button to enter the following menu's. Each press will select PRESET :> PICTURE :> SYSTEM :> TIME. To exit the menu's press the button again. In each menu press PROG +/- to select each function. Press VOL +/- to adjust the function values.



PRESET Menu.

CHANNEL. This displays the current channel selected.

SKIP. This turns ON and OFF the Skip function. When 'ON' the channel will be 'skipped' when using the PRPG +/- buttons, but not when using the numeric buttons. When Skip is 'OFF' normal operation is resumed.

ASM.SIF. This function selects the 'Sound system' for the country you are viewing in. In UK this MUST be set to '6.0'. The other selections are as follows (4.5 USA), (5.5 Western Europe), (6.5 Eastern Europe).

FINE. This function is to allow for 'Fine Tuning' in most circumstances this is not necessary.

SEARCH. This is a 'Manual Search' function. It is used to add single stations that may have been added to the transmitter listing.

AUTOSEARCH. This function is used to install the Tv when using for the first time.




PICTURE Menu.

BRIGHTNESS. Adjusts the general brightness of the picture.

CONTRAST. Adjusts the Black to White contrast ratio

COLOUR. Adjusts the Colour level.

SHARPNESS. Adjusts the clarity of the picture.

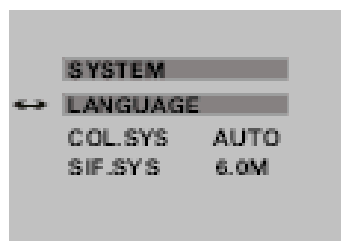

SYSTEM Menu.

LANGUAGE. Selects the OSD (On Screen Display) language.

COL.SYS. Selects the Colour system. In the UK PAL is used. NTSC 1 and NTSC 2 are for USA systems. AUTO auto detects the colour system.

SIF.SYS. 'see ASM SIF in PRESET menu'.

Menu Navigation

TIME	
← CLOCK	00:00:00
TIMING	OFF
TVON	--:--
TVOFF	--:--
AWOKE	OFF
AWTIMR	--:--

TIMER Menu.

TIME. The 'Real' time must be entered before the other Timers will work. To set the time use the VOL+ button to set the Hours and the VOL- button to set the minutes.

TIMING. Set to 'ON' or 'OFF'

TV ON. Set the 'ON' time. Use the VOL+/- buttons to adjust.

TV OFF. Set the 'OFF' time. Use the VOL+/- buttons to adjust.

AWOKE. Set the 'AWAKE' time to 'ON' or 'OFF'

AWTIME. Set the Awake time. Use the VOL+/- buttons to adjust.

TV OPERATION

1. Ensure that all the connections are made and the power is turned on.
2. Turn on the Tv with the Power button. The Power led will light Red. Press the P- button on the Tv or the POWER button on the Remote Control. The power led will turn Green and the screen will light up.
3. If the Tv is used for the first time, it will need to be tuned in to the local stations.

PRESET	
← CHANNEL	000
SKIP	OFF
ASM.SIF	6.0M
FINE	
SEARCH	
AUTO SEARCH	
36.31 MHz	

MANUAL TUNING. 'It is useful to have a current Tv guide when tuning'

4. Select CHANNEL. Use the Vol + button to select 001

5. Select SEARCH. Use the VOL + button to start searching. This may take some time to reach BBC1. The Tv may stop at some stations that are not required, press the Vol + again to continue searching. The Tv will automatically store BBC1 in Location 1

6. Select CHANNEL. Use the Vol + button to select 002

7. Select SEARCH. Use the VOL + button to start searching. This may take some time to reach BBC2. The Tv will automatically store BBC2 in Location 2.

Continue to search for all local Stations until you have what you require. Once this has been done it will not be necessary to do it again unless moving areas.

AUTO SEARCH. This is used to search automatically for Tv stations. However the stations received will be stored in 'Found' order. The 'found' order will not be necessarily the correct order for your requirements.

Menu Navigation

DVD Mode:

OPEN/CLOSE BUTTON

Press OPEN/CLOSE button to load disc on disc tray. Hold the disc without touching either of its surfaces, position it with the printed title side facing up, align it with the guides, and place it in its proper position.

In case of interactive DVDs with playback control, a menu appears on the TV screen.

NUMERIC BUTTONS(0-9):

You can select desired titles(DVD) by pressing these buttons directly only if the title or track number is less than 10.

If the title or track number is over 10. For instance, if *28* is wanted, press *10+* twice, and then press the 2-digit number *8*.

GO TO BUTTON

Press this button to go to desired position. The player provides 3 search mode.



[CD]

When the above items are showed on TV screen, you can input numbers to locate desired sector, then press PLAY to commence play.

The number you input is invalid if it is beyond the track's capacity.

AUDIO BUTTON

Press this button to change the Audio Language from the default language to a different one, if supported on the disc.

SUBTITLE BUTTON

Press this button to change the Sub Title language from the default language. You can also turn * OFF* the Subtitles by pressing the button a number of times

DISPLAY BUTTON

Press this button once to show main playback information on TV screen and press it again to show playback time. Press this button at the fifth time, and then the display will be cancelled.

DVD SETUP BUTTON

If playing some DVD discs, press this button back to root menu screen .

If playing DVDs you can use the functions of MENU, PROGRAM and RANDOM.

Menu Navigation

REPEAT BUTTON

DVD SET UP Button. If there is a disc playing, fully stop playback. Press this button once and you will see the first menu, GENERAL. Press again to see the AUDIO menu, then DOLBY, VIDEO and REF. To navigate the menu's use the ▲▼◀▶ buttons. To return to playing press DVD Set Up again. The descriptions of the functions are below :-

General	Audio	Dolby	Video	Pre f..
- GENERAL SETUP PAGE -				
TV DISPLAY	PS			
ANGLE MARK	ON			
OSD LANGUAGE	ENG			
DIGITAL OUTPUT	RAW			
Closed Captions	ON			
SCREEN SAVER	ON			
GOTO GENERAL SETUP PAGE				

General Menu.

TV Display. PS cannot be changed.

Angle Mark. Use the navigation buttons to select ON or OFF and enter to confirm.

OSD Language. Use the navigation buttons to select your preference.

Digital Output. This is to select the type of output from the Digital Audio Output Coaxial socket, to be compatible with your HiFi system.

Captions. Select ON or OFF

Screen Saver. Select ON or OFF.

General	Audio	Dolby	Video	Pre f..
- ANALOG AUDIO SETUP PAGE -				
DOWNMIX	STR			
GOTO SPEAKER SETUP PAGE				

Audio Menu.

Downmix. Select Stereo or LT/RT. When using an external amplifier select LT/RT. If using the TV sound select Stereo.

General	Audio	Dolby	Video	Pre f..
- DOLBY DIGITAL SETUP -				
DUAL MONO	STR			
DYNAMIC				
GOTO DOLBY DIGITAL SETUP				

Audio Compression (Dolby) Menu.

Dual Mono. Selects the type of Audio output required, select from Stereo, Left Mono, Right Mono, Mixed Mono.

Dynamic. Adjusts the dynamic range of Audio compression.

General	Audio	Dolby	Video	Pre f..
- VIDEO SETUP PAGE -				
SHARPNESS	LO			
BRIGHTNESS	00			
CONTRAST	00			
GOTO VIDEO SETUP PAGE				

Video Menu.

Sharpness. Sets the level of clarity, from High to Medium to Low.

Brightness. "00" is set as a medium level, you may increase or decrease from this value.

Contrast. "00" is set as a medium level, you may increase or decrease from this value.

General	Audio	Dolby	Video	Pre f..
- PREFERENCE PAGE -				
AUDIO	ENG			
SUBTITLE	ENG			
DISC MENU	ENG			
PARENTAL				
PASSWORD				
DEFAULT				
GOTO PREFERENCE PAGE				

Preference Menu.

Audio. Audio language. (Disc dependant).

Sub Titles. Sub Title language. (Disc dependant).

Disc Menu. Disc Menu language (Disc dependant).

Parental Control. You may set the level of Parental control depending on the age of the person watching the disc.

Password. This is necessary to set the Parental Control. You may change the password to an easily remembered 4 digit number.

Default. Selecting this resets the analog settings such as Brightness etc, this does not reset the tuning memory though.



Menu Navigation

PROGRAM BUTTON

When you want to play only partial tracks/chapters of a disc(DVDs) or to arrange the tracks/chapters playback order, you need program functions. Do as following:

Press PROG button. Then "PROGRAM" will appear on TV screen.

Press the track number in the order you want. For example, if the track numbers you want to play are 1, 3 and 8, just input in the order of 1-3-8.

You can press CLEAR button to cancel and input again if you mis input track numbers. Now you can press   and "ENTER" button to select "START" option and enjoy the desired tracks.

STOP BUTTON(■)

When this button is pressed once, the unit records the stopped point, from where playback will resume (resume function) if PLAY is pressed afterwards.

But if STOP button is pressed again instead of PLAY button, there will be no resume function.

PREV/NEXT BUTTON(◀▶ / ▶▶)

Press these buttons to go to the previous/next chapter(DVD) When Playing CD disc ,Press "◀▶" button twice to select previous song.

FR/FF BUTTON(⏮ / ⏭)

These buttons allow skipping ahead/back at 5-level speeds. Press PLAY button to return to normal playback.

Password.

To change the password, select PASSWORD in the Pref menu. Enter the factory default number (1369).

The cursor will jump to NEWPASSWORD. Using the decimal buttons enter a new 4 digit number. Enter the number again to confirm..

Should you forget your number, reenter the factory default number.

HELP GUIDE

Should the Tv or DVD player start mal-functioning, please try the following before returning the Tv to the point of purchase

Symptom	Possible Cause	Remedy
GENERAL		
Dead. No led lit	No power to the Tv	Check your mains connection.
	Mains switch not pushed in	Check the button is pushed in
Dead. Led lit Red.	Tv in Standby	Press either the P- button on the Tv or Power button on the Remote control
No picture. Led green	DVD in stop mode and DVD setup menu timed Out.	Press DVD Setup button, the menu will re appear
	AV selected with no input	Connect an AV input or select Tv
Noisy screen. No picture	Aerial not connected	Check aerial connections
	Tv not tuned to a signal	Tune the Tv to a local signal
Noisy or Ghosting picture	Poor signal	Check the condition of your aerial. If using an indoor aerial consider using an external aerial
DVD		
DVD door will not open	DVD not selected	Select DVD
Message says "No disc".	Disc may be placed upside down	Disc must be placed Label side up
Disc will not play	Disc may be damaged or dirty.	Check condition of disc, if dirty or damaged clean or replace
Picture freezes or breaks up	See above	See above
Remote Control		
No Remote Control functions	Batteries may be exhausted	Replace batteries every 6 months.
	Remote receiver window restricted	Ensure the path to the tv is not restricted
Intermittent operation.	As above or high incident light.	As above, or reduce incident light in the room.

Customer Help Line: 01422 26 33 13

Website: www.ekey.co.uk

SPECIFICATIONS (design and specifications may change in the life of production)

Mains supply	AC 90 240V 50Hz @ 50W
Screen size	21" diagonal
Tuner	VHF/UHF Multiband
Sound system (TV)	1". (*M* / *BG* and *DK* are also available)
Colour system	*AL* (NTSC is also available)
External In/Out	Scart, AV in (phono) CVBS and Audio
Speakers	2 x 8 ohm
Audio output	≤3W
Dimensions	W 504mm, D 480mm, H 510mm
Net weight	23.4Kg's
DVD	Accepts 12 cm and 8 cm discs
Remote control	Range approx 3m. Batteries 2 x *AAA* cells

Disc care and Handling.

Keep discs clean and free from sticky marks.

If they become dirty, lightly dust with a soft duster or if the disc is sticky use a damp cloth with mild detergent and wipe from the center outwards not in a circular motion. DO NOT clean with Vinyl record cleaner or petrol based fluids.


Storing Discs.

Keep discs flat, either vertically or in a stand, do not store out of the case. Scratches will impair the quality of playing. Keep discs away from heaters or in direct sunlight.

Handling discs.

Do not touch the disc surface. Place a finger into the center hole and the outer diameter.

Mains Plug Replacement

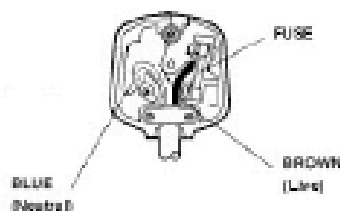

IMPORTANT

For your safety. If the mains plug needs replacing, proceed as follows :-
DO NOT CONNECT THE CENTRE PIN (EARTH).

Connect the Blue wire to the (N) terminal (this may be coloured blue).

Connect the Brown wire to the (L) terminal adjacent to the fuse (this may be coloured brown).

This appliance must have a 5A fuse fitted.

The image shows the Acura logo, which consists of the word "ACURA" in a bold, black, sans-serif font. Above the letter "U", there is a red triangle pointing to the right. The entire logo is centered on a white background.

ACURA