



Please read this manual carefully before using this TV set and keep it for future reference.

AODV151R-S

COMBINED 14" CTV AND DVD PLAYER

OWNER'S MANUAL



If you experience any difficulty in setting up or operating this product. Please contact our Helpline on 01422 203676 (normal rates apply).

CAUTION

RISK OF ELECTRIC SHOCK



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock of persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Warning do not leave your TV in standby when leaving the house



Correct disposal of this Product

(Waste Electrical & Electronic Equipment (WEEE))

The crossed out "Wheeler bin" is intended to show that this appliance must not be placed with ordinary household waste at the end of its useful life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please keep separate from other household waste and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where you purchased the product, or their local government office for details of where and how you can take this item for environmentally safe re-cycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product must not be mixed with other commercial wastes for disposal

CONTENTS

Before Operation

Warning and cautions	2
Installation	3
Aerial connection.....	3
Preparation of the remote control.....	3
Function buttons and external sockets	4
Front panel of the TV set.....	4
Rear panel of the TV set.....	4
Using the remote control	5

Basic operation

Switching the TV set on/off	6
Watching TV	7
Watching TV program.....	7
Program swap and auto scan functions.....	8
Searching channels	9
Full automatic mode.....	9
Semi-automatic search.....	10
Manual fine tune.....	11
Program skip	12
Convenient picture and sound control functions	13
Multiple picture modes	13
Black stretch and noise reduce.....	14
Mute and Fade	15
Time functions	16
Clock setting and timer on/off functions.....	16
Sleep timer and program preset	17
Setup function	18
Screen saver and Calendar.....	18
AVL	19
Organise function	20
Setting the lock	21

DVD Operation

Basic Playback	23
Advanced Playback	24
Special Function Playback - JPEG	25
DVD System Setup	27
Playable Discs	31
Disc Protection and DVD Characteristics	32

Others

Connection to the external audio and video equipment	33
Trouble shooting guide	34
Specifications	35

Warning and cautions

 
1. When you clean the TV set, please pull out the power plug from AC outlet. Don't clean the cabinet and the screen with benzene, petrol and other chemicals.




4. Do not allow the Tv to become wet or be used in a humid atmosphere. The set must only be used in dry locations. Allowing water or fluid to enter the cabinet could result in " Electric shock " or " Fire ".




2. In order to prolong the life of the product, ensure that it is well ventilated. Do NOT cover any ventilation slots.

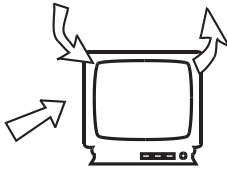

 
5. Do NOT remove the cabinet back, this could result in an " Electric shock ". If the TV should become faulty, it must only be serviced by a qualified technician.

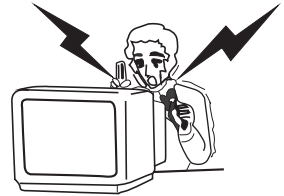

 3. Don't place the TV set in direct sunlight or near a heat source.

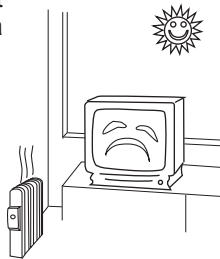

 6. If the Tv is not going to be used for a long time, or there is an Electrical storm in the area, unplug the External antenna and Mains supply.

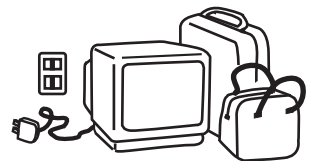


Cleaning the tube

If the picture tube requires cleaning, disconnect the power and use a dry soft cotton cloth. Do not use any cleaner or abrasive cloths.

Installation

Aerial Connection

 If the picture is not clear or is snowy, it is recommended that an External Aerial is used, this is usually mounted outside.

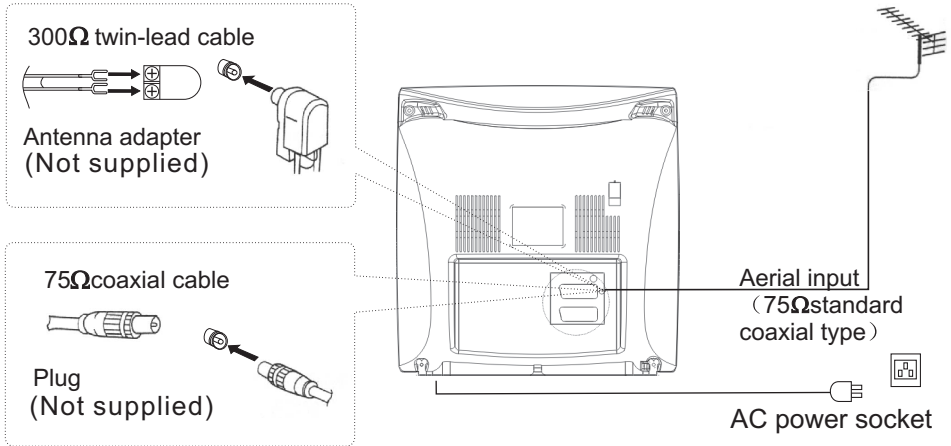

Note:

- * It is recommended that a 75 ohm coaxial antenna is used to avoid interference.
- * To avoid interference from electrical signals, do not bind the antenna cable together with any mains lead.

Preparation for the remote control

Battery installation

Remove the battery cover.

Insert two size AAA batteries matching the +/- polarities of the battery to the +/- marks inside the battery compartment.

Tips for remote operation

 
When the remote control is not to be used for a long period, or the batteries are worn out, remove them to stop leakage and corrosion.

Do NOT throw used batteries in the fire. Dispose of batteries in a responsible manner.


Do not drop or dismantle the remote control.

Function Buttons and External Sockets

Front panel of the TV set

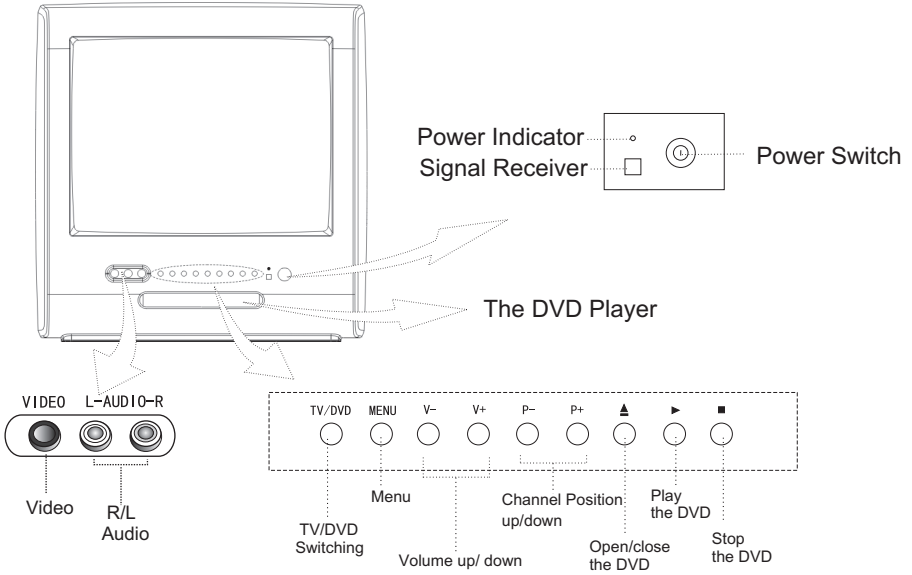


Rear panel of the TV set

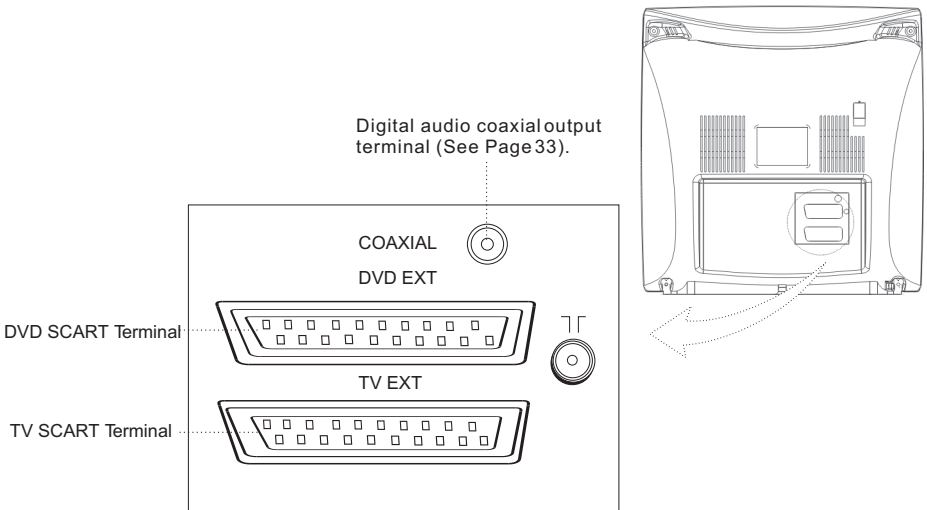 


Using the Remote Control

 Buttons on the remote control

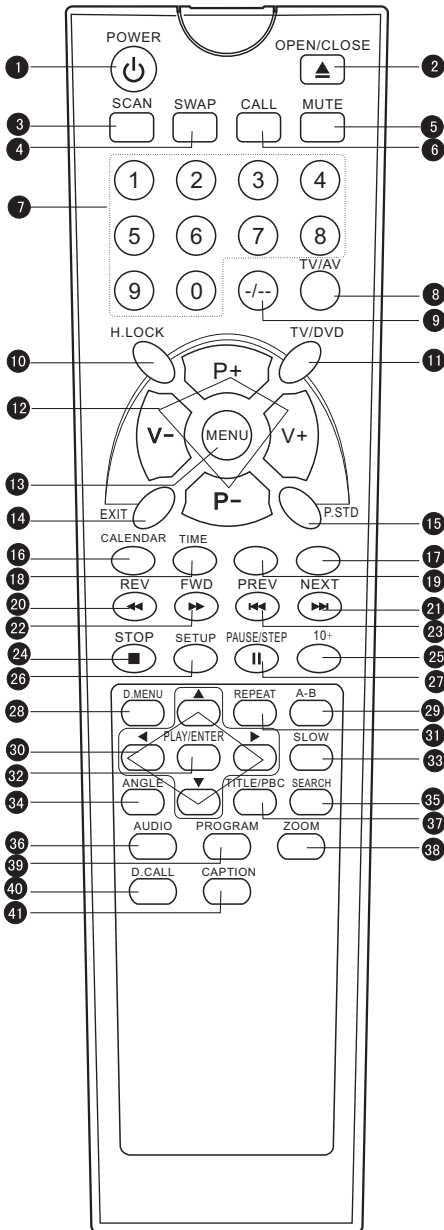


- 1 Stand By
- 2 DVD Open/close
- 3 Scan
- 4 Former Program
- 5 Mute
- 6 Call Screen Display
- 7 Program Number
- 8 TV/AV Exchange
- 9 Digital Selector
- 10 H.LOCK
- 11 TV/DVD
- 12 Volume/Channel Selection
- 13 MENU
- 14 Exit Screen Display
- 15 Picture Mode
- 16 Calendar
- 17 (Not available)
- 18 Time
- 19 (Not available)
- 20 DVD PREVIOUS
- 21 DVD NEXT
- 22 DVD FAST FORWARD
- 23 DVD FAST REVERSE
- 24 DVD STOP
- 25 10+
- 26 DVD SETUP
- 27 DVD PAUSE/STEP
- 28 DVD MENU
- 29 DVD A-B REPEAT
- 30 DVD Cursor Move button
- 31 DVD REPEAT
- 32 DVD PLAY/ENTER
- 33 DVD SLOW
- 34 DVD ANGLE
- 35 DVD SEARCH
- 36 DVD AUDIO
- 37 DVD TITLE
- 38 Zoom
- 39 DVD PROGRAM
- 40 DVD CALL
- 41 DVD CAPTION (SUBTITLE)

 

Switching on/ off the TV set


- This section explains the use of the power button and remote handset to turn your unit on and off.

 Switching the TV set on/ off

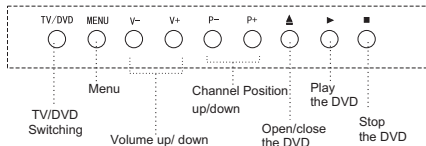


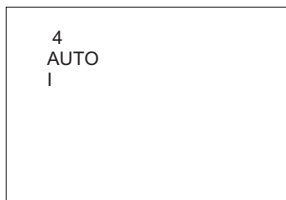 
Switching on/ off the TV set

1 Press the Power switch on. The power indicator will light.

2 If the indicator is "Red" press the button  on the remote control. Alternatively you can turn the TV on with P+ or P- buttons, if the "Child lock" is not set .

Note:

1 To turn the set off to "Standby" press  button on the remote control.



 
2 To turn off the TV fully, press the Power button and release.

Auto switch-off function

Should the signal input from the aerial be interrupted for more than 5 minutes, the TV will automatically switch to "Standby".

If the Tv is in A/V mode or the "background" is set to off (see page 18), the set will not switch to standby.

Watching TV programs

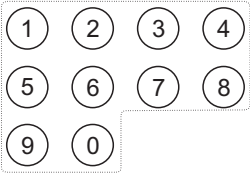

How to select a TV programme

 
Select the desired program

1 Using number buttons

- Directly enter the channel number with the numeric keypad on the remote control.
- To select channel numbers between 10 ~ 99 press [-/--] button and enter the two digit channel number
- To select channel numbers between 100 ~ 218 press [-/--] button twice and enter the 3 digit channel number


2 Using the P+/- buttons

- Press the P+ button to increase channel number.
- Press the P- button to decrease channel number.

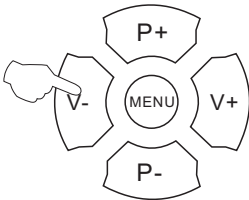


Adjust the Volume level

 Press the V-/+ buttons on the remote or the front of the TV set to adjust the volume level. The range is 0~100. When the volume buttons are pressed the volume level is displayed automatically on the TV screen.

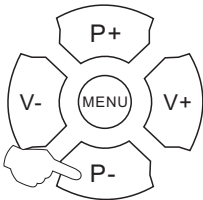

How to select the menu

 Press the MENU button and the menus will appear at the bottom of the screen. The PIC icon will initially be flashing. Each subsequent press of the menu button will highlight SOU (sound), FUN (function), TUN (tuning) icons respectively. Press the P- button to display the appropriate menu. Press EXIT to exit.

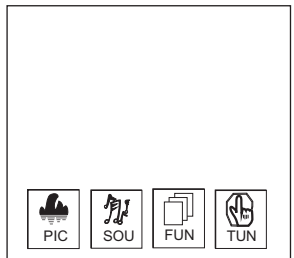



Watching TV (continued)

- Press the SWAP button to select the channel you were watching previously.
- Auto scan function scans through all programs in memory including those with "skip" set to "off" (see "Program skip" on page 12).

Program swap and auto scan functions


Program swap

  Press the SWAP button to select the channel you were watching previously.

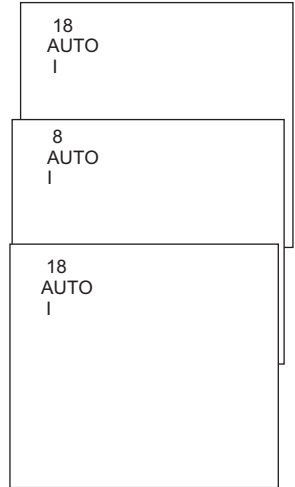

Auto program scan

 1 Press the SCAN button to scan through all the memorised TV programs. The scan will pause for about 2 seconds on each channel.


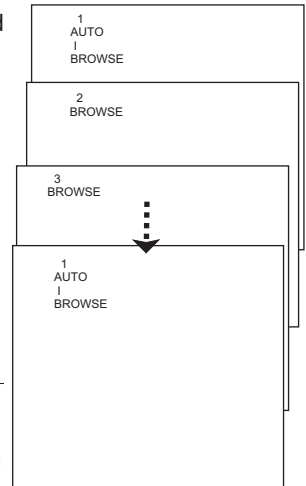


2 If you want to stop the function during auto tuning, simply press the SCAN button again.

Searching channels

- This TV set has three methods to set the channels, which are respectively full automatic, semi-automatic and manual fine tune.
- In this section, how to use the remote control to set the channel is explained. You can also use the buttons on the TV to set the channel.

  Full automatic mode

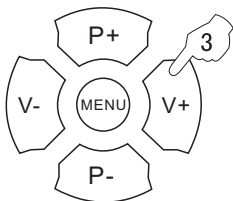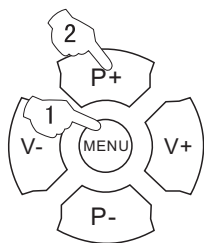


Automatic search


1 Press the **MENU** button. The *MAIN MENU* will appear with the *PIC* (picture) icon flashing. Press the **MENU** button a further 3 times until the *TUN* (tuning) icon is flashing. Press **P-** to enter the *TUNING* menu.



 2 Press the **P+/-** buttons to select "AUTO SEARCH".

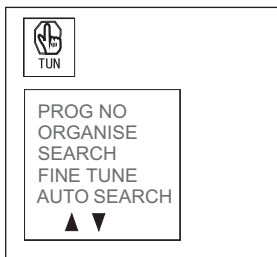


 3 Press **V+** to start the Auto search. All channels will be stored in the order they are received. After the search has finished, the first channel received will be displayed. Please see page 20 (Organise).

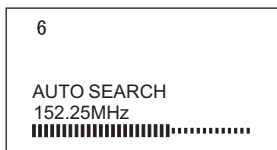

Display function

 Press the **CALL** button, then the channel number and the systems will be displayed on the screen.

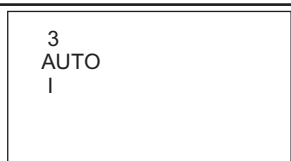



Searching channels

(Continued)

Semi-automatic search

Semi-automatic search

  1 Press the P+/- buttons or the PROGRAMME NUMBER (0-9) to choose the desired channel (e.g. Channel 1).

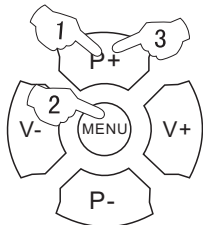



2 Press the **MENU** button. The *MAIN MENU* will appear with the *PIC* (picture) icon flashing. Press the **MENU** button a further 3 times until the *TUN* (tuning) icon is flashing. Press **P-** to enter the *TUNING* menu.

3 Press the P+/- buttons to select "SEARCH".



4 Press the V- /V+ buttons to start search.

  Press the V- to search down the scale and V+ to search up the scale.

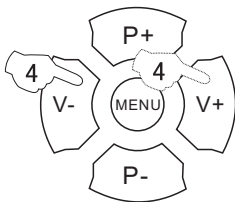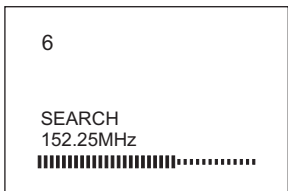

To turn off the on-screen menu

In general, after you press the MENU button, the menu item display (PIC, SOU, FUN, TUN) will automatically disappear within 30 seconds. If you want to eliminate these contents immediately, please press the EXIT button.



 
Searching channels

(Continued)


Manual fine tune

Manual fine tune

If the picture and/or sound are poor, try using the **FINE TUNE** feature. Do not use this feature unless reception is poor.


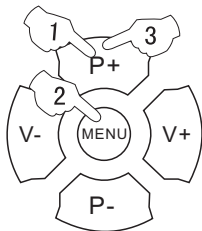


 1 Press the P+/- buttons or PROGRAM NUMBER (0-9) button to choose the desired channel (e.g. channel 1).

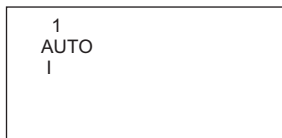


2 Press the **MENU** button. The **MAIN MENU** will appear with the **PIC** (picture) icon flashing. Press the **MENU** button a further 3 times until the **TUN** (tuning) icon is flashing. Press **P-** to enter the **TUNING** menu.

  3 Press the P+/- buttons to select "FINE TUNE".

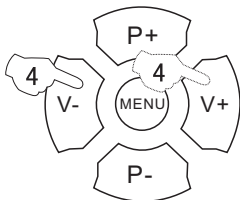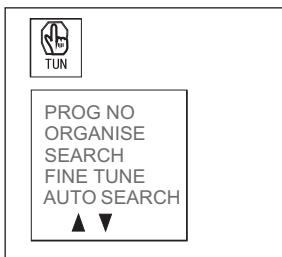

 
4 Use the V-/+ buttons to manually fine tune the station until the best picture and sound are obtained.

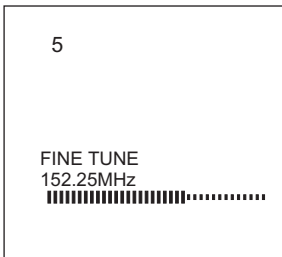

Searching channels

(Continued)

 Program skip

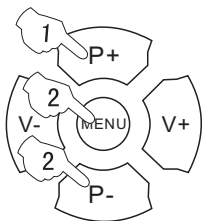


Program skip

Channels can be set so that they are skipped during program selection.

1 Press the P+/- buttons or PROGRAM NUMBER (0-9) button to choose the desired channel (e.g. channel 1).

1
AUTO
I

 
2 Press the **MENU** button. The *MAIN MENU* will appear with the *PIC* (picture) icon flashing. Press the **MENU** button a further 3 times until the *TUN* (tuning) icon is flashing. Press **P-** to enter the *TUNING* menu.

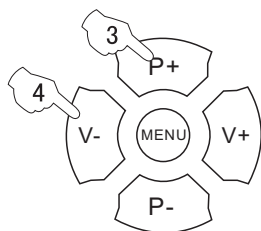


3 Press the P+/- buttons to select "SKIP".



 4 Press the V-/+ buttons to turn the SKIP function "ON".

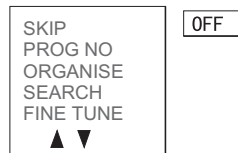

 5 Press the EXIT button to close the menu. When you use the P+/- buttons to select channel, this channel will be skipped. However, you can still use the PROGRAM NUMBER buttons to select the skipped channel numbers.

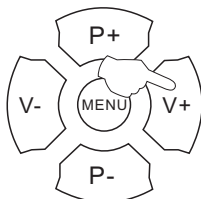

If you want to recover the skipped channel

- 1 Use the PROGRAM NUMBER buttons to select the channel number to be recovered.
- 2 Repeat steps 1-3 above.
- 3 Press the VOL-/+ buttons to turn the SKIP function "OFF".

 
Convenient picture and sound control functions

Multiple picture modes



How to select picture modes

You can quickly select the desired picture mode from four preset modes and one customized mode. Press the P.STD button to select the desired picture quality. Five kinds of picture modes (i.e., "STANDARD", "RICH", "USER", "LISTEN", "SOFT") can be selected in turn.


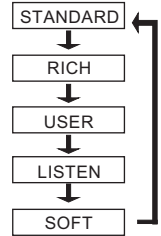


The 5 modes are


- Listen-This is a new feature that blacks out the TV screen when listening to music only channels;
- Soft-Designed for night time low light viewing;
- Standard -Designed for rooms that have good all round lighting;
- Rich-Designed for rooms with high ambient lighting such as daytime sport;
- User-A spare setting that can be adjusted to personal tastes.

How to customize your own picture status

  1 Press the **MENU** button. The *MAIN MENU* will appear with the *PIC* (picture) icon flashing. Press **P-** to enter the *PICTURE* menu.

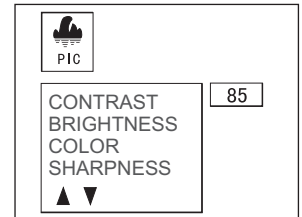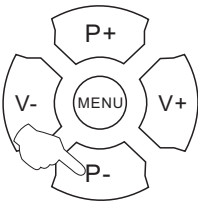

 2 Press the P+/- buttons to select the item to adjusted, then press the V-/+ buttons to obtain the desired effect.

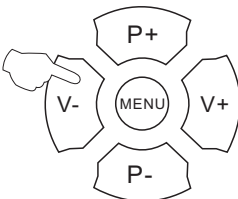

ITEM	Press V-	Press V+
CONTRAST	Weak	Strong
BRIGHTNESS	Dark	Bright
COLOUR	Shallow	Deep
SHARPNESS	Soft	Sharp
*Hue	lean to purple	lean to green

Note:The "Hue" item only appears when the colour system is NTSC.

Convenient picture and sound control functions

 
(Continued)

- Black Stretch Automatically increases the contrast range
- Noise Reduce Picture Noise & Grain Reduction Circuit. (Use only on poor reception)

Black stretch and noise reduce

How to select BLACK STRETCH


1 Press the **MENU** button. The *MAIN MENU* will appear with the *PIC* (picture) icon flashing. Press the **MENU** button a further 2 times until the *FUN* (function) icon is flashing. Press **P-** to enter the *FUNCTION* menu.

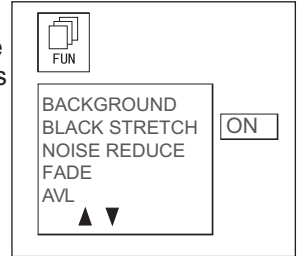



2 Press the **P+/-** button to select "BLACK STRETCH". Press the **V-/+** buttons to turn it "ON" or "OFF".

How to select NOISE REDUCE

 1 Press the **MENU** button. The *MAIN MENU* will appear with the *PIC* (picture) icon flashing. Press the **MENU** button a further 2 times until the *FUN* (function) icon is flashing. Press **P-** to enter the *FUNCTION* menu.

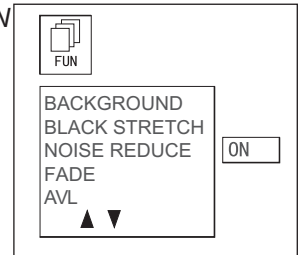

  
2 Press the **P+/-** buttons to select "NOISE REDUCE". Press the **V-/+** buttons to turn it "ON" or "OFF".

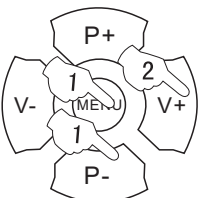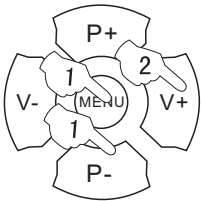

Convenient picture and sound control functions

(Continued)

 Mute and Fade



Sound mute

 
1 Press the MUTE button on the remote control to turn off the sound. MUTE will appear on the top left of the display.





2 Press MUTE again to turn the sound back on.

Fade

When FADE is turned on, the TV will protect the tube by fading the picture in when the TV is switched on, and fading the picture out when the TV is switched off.

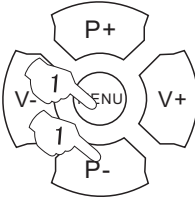

  1 Press the **MENU** button. The *MAIN MENU* will appear with the *PIC* (picture) icon flashing. Press the **MENU** button a further 2 times until the *FUN* (function) icon is flashing. Press **P-** to enter the *FUNCTION* menu.

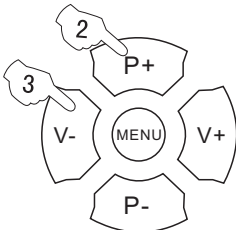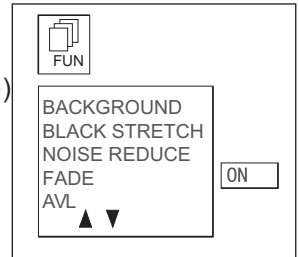

2 Press the P+/- buttons to select FADE.

3 Press the V-/+ button to turn the FADE function "ON" or "OFF."

 
Clock setting and timer on/off functions

Clock setting

The clock will only work if the TV set is left turned on or in standby. When the set is disconnected from the power supply or is turned off by the main power on the front panel, the clock loses power and will need to be reset when the power is reconnected.



1 Press the TIME button, and the TIME menu appears on the screen.

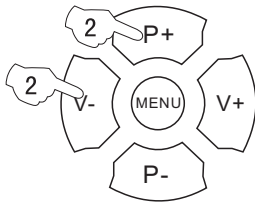

2 Press the P+/- buttons select "CLOCK", then press the V -/+ buttons to adjust the time in hour position; press again the P+/- buttons to select the time in minute position, then press the V-/+ buttons to adjust the value of minutes .


TIME	
CLOCK	17:18
ON TIME	18:00
ON PROG	1
OFF TIME	--:--
SLEEP TIME	0
REMIN TIME	--:--
REMIN PROG	1

On/off timer On-off time setting is cleared after timer operates.

Using on/off timer function, the TV set can automatically turn on to a preset program or shut down at a preset time.



 1 Press the TIME button, and the TIME menu display on the screen.

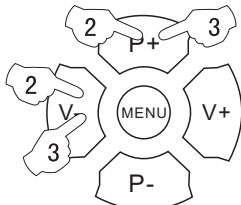

2 Press the P+/- buttons to select "ON TIME", then press the V-/+ buttons to set the value in hour position; press again the P+/- buttons to select the minute position and set the value of the minute (take 18:00 as an example).

TIME	
CLOCK	17:18
ON TIME	18:00
ON PROG	1
OFF TIME	--:--
SLEEP TIME	0
REMIN TIME	--:--
REMIN PROG	1

3 Press the P+/- buttons to select "ON PROG", then press the V -/+ or program number buttons to select your desired channel (take 8 as an example).

TIME	
CLOCK	17:18
ON TIME	18:00
ON PROG	8
OFF TIME	23:00
SLEEP TIME	0
REMIN TIME	--:--
REMIN PROG	1

4 Repeat step 1-2 to set OFF TIME (take 23:00 as an example).

 
Time functions

(Continued)

Sleep timer and program preset

Sleep timer

The sleep timer switches the set to stand-by after the sleep time has elapsed. Sleep time can be set in 10 minute intervals up to 180 minutes, as shown in the illustration. Setting the sleep time to zero turns off the sleep timer.

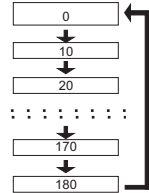

1 Press the TIME button, and the TIME menu appears on the screen.

2 Press the P+/- buttons to select "SLEEP TIME".

3 Press the V-/+ buttons to set the value of the SLEEP TIME.

TIME	
CLOCK	17:18
ON TIME	18:00
ON PROG	8
OFF TIME	23:00
SLEEP TIME	120
REMIND TIME	--:--
REMIND PROG	1

REMIND PROG function

Program remind timer, that can automatically change channel when a program on a different channel is due to start.

1 Press the TIME button, and the TIME menu display on the screen.



2 Press the P+/- buttons to select "REMIND TIME", then press the V-/+ buttons to set the value in hour position; press again the P+/- buttons to select the minute position, and then set the value of the minute (take 19:00 as an example).

3 Press the P+/- buttons to select "REMIND PROG", then press the V-/+ buttons or the program direct number buttons to set the desired channel (take 18 as an example).

NOTE: For REMIND PROG to operate CHILD LOCK must be turned off.

TIME	
CLOCK	17:18
ON TIME	18:00
ON PROG	8
OFF TIME	23:00
SLEEP TIME	120
REMIND TIME	19:00
REMIND PROG	1

TIME	
CLOCK	17:18
ON TIME	18:00
ON PROG	8
OFF TIME	23:00
SLEEP TIME	120
REMIND TIME	19:00
REMIND PROG	18

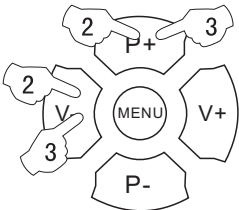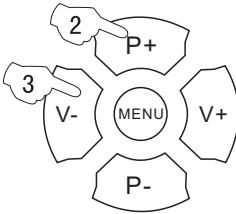  


Set up function

Screen saver and Calendar

How to start screen saver function

When the background function is ON a bouncing 'NO SIGNAL' will be displayed on a blue background.

 NO SIGNAL

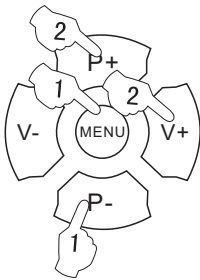

1 Press the **MENU** button. The *MAIN MENU* will appear with the *PIC* (picture) icon flashing. Press the **MENU** button a further 2 times until the *FUN* (function) icon is flashing. Press **P-** to enter the *FUNCTION* menu.

2 Press the **P+/-** buttons to select **BACKGROUND**. Then press **V+/-** to turn the **BACKGROUND** function ON or OFF.



BACKGROUND
BLACK STRETCH
NOISE REDUCE
FADE
AVL

ON



CALENDAR



Calendar function

1 Press the **CALENDAR** button. The calendar menu will be displayed on the screen.


The date on the top line is in Year/ Month /Day format.

SOLAR 2001 11 14

S	M	T	W	T	F	S
				1	2	3
4	5	6	7	8	9	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	




2 Press the **P+/-** buttons to highlight the year, month or day number. Press the **V+/-** buttons to set or change each number.

 Press EXIT or wait a minute for the calendar to disappear.

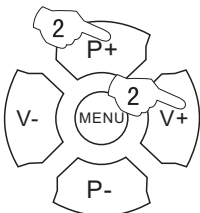

Set up function (Continued)

   
AVL

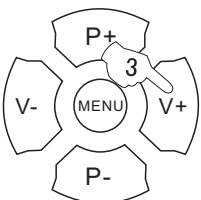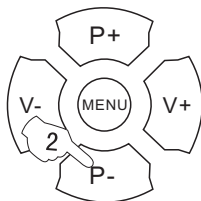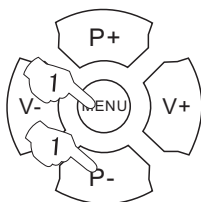


AVL function

Automatic Volume Level control reduces the effect of large volume changes. For instance, when advertisements come on.

 1 Press the **MENU** button. The *MAIN MENU* will appear with the *PIC* (picture) icon flashing. Press the **MENU** button a further 2 times until the *FUN* (function) icon is flashing. Press **P-** to enter the *FUNCTION* menu.

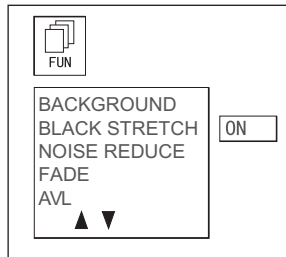

 2 Press the P+/- button to select "AVL" .

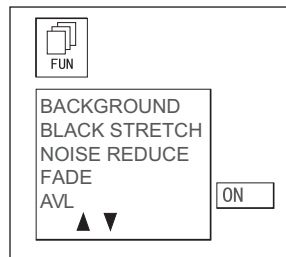

3 Press V-/+ button to turn the AVL function "ON" or "OFF".

ORGANISE

This feature enables TV programmes that may be on a wrong program number to be moved to another number. This feature is very useful when Automatic Search Tuning has been used because programmes are stored in the order they are found, which is usually not the desired order. When organising, it is best to start from the lowest programme number first.

 
1. Press the MENU button. The MAIN MENU will appear with the PIC icon flashing. Press the MENU button a further 3 times until the TUN icon is flashing. Press P- to enter the TUNING menu.



2. Press P+ or P- buttons to select ORGANISE. Press V+ to enter the menu.

(For Example) If the Automatic Search function has placed BBC1 on programme position 6 and you would like to move this so it appears on programme position 1.

3. Use P+ or P- to select "FROM".
4. Press V+ or VL- to change the "FORM" programme number to 6.
5. Use P+ or P- to select "TO".
6. Press V+ or V- to change the "TO" programme number to 1.
7. Use P+ or P- to select "MOVE CHANNEL".
8. Use V+ or V- to perform the action.

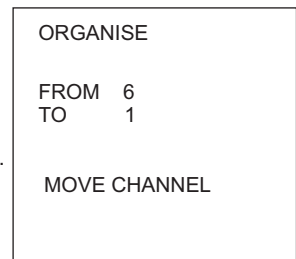

The diagrams below explain how the ORGANISE function affects other channels when position 6 is moved to position 1.

Start Position

Move FROM 6, TO 1

Other programmes move down to allow for space

P 01	Contents	P 01	Contents	Contents	P 01	Contents	↓	←
P 02	Contents	P 02	Contents		P 02	Contents	↓	
P 03	Contents	P 03	Contents		P 03	Contents	↓	
P 04	Contents	P 04	Contents		P 04	Contents	↓	
P 05	Contents	P 05	Contents		P 05	Contents	↓	
P 06	Contents	P 06			P 06	Contents	↓	

 
 
 
- What was on programme position 6 is now on programme position 1.
- All the other stored channels have now moved down 1 position so that now...
- What was on programme position 1 is now on programme position 2.
- What was on programme position 2 is now on programme position 3.
- What was on programme position 3 is now on programme position 4.
- What was on programme position 4 is now on programme position 5.
- What was on programme position 5 is now on programme position 6.

Note: It needs some time to move two channels, please wait till the TV finishes the process.

Setting the Lock

- This TV set provides the option of locking various parts of the TV to guard against unauthorised viewing.


Changing your password

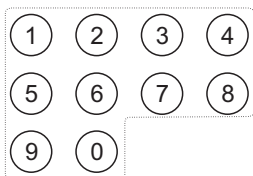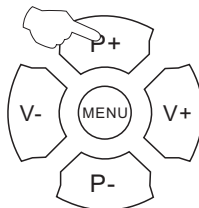


Changing your password

This TV set can set a four digit password, the original one is 0000, if you want to reset it, please follow the instructions below.

 
1 Press H.LOCK button, the screen will show as the form on the right.

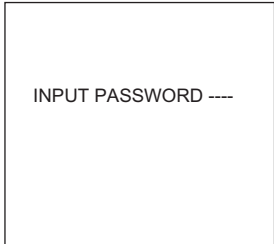

 2 Press the 0 button four times, and enter the menu of LOCK setting. Press P+/- button and move the indicator to CHANGE PW., and press V+ button to enter the sub-menu of change password.

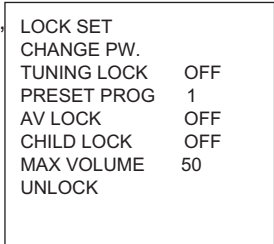



 
3 Press the PROGRAM NUMBER (0-9) button and input a four-digits password.

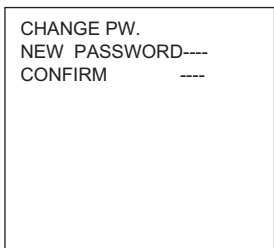

4 After inputting your new password, please confirm it by keying it in again. You can now enter the lock settings using your new password.

Setting the Lock(continued)

   
Setting the Lock

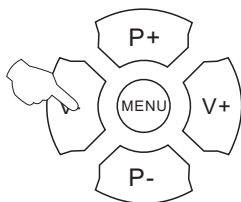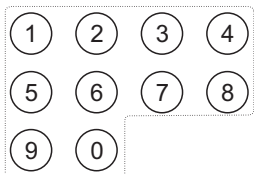


Setting the Lock

There is Tuning Lock, AV Lock and Child Lock. And you can set each to your needs.

 1 Press the H.LOCK button, the screen will show as the form on the right.

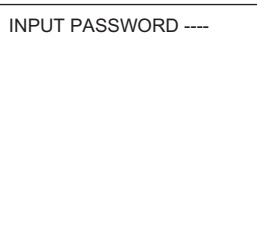

 2 Press the PROGRAM NUMBER (0-9) button 0 for four times(or input the password you set), and enter the LOCK menu.

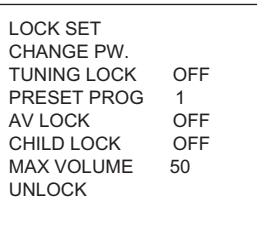

3 Press P+/- button, move the indicator to the lock function you require and press V+ or V- button to set it ON or OFF, change setting or activate it.

Description of each lock function

1. When the TUNING LOCK is set ON, if you want to enter the TUNING menu, you will have to type the password.
2. The PRESET PROG allows the TV to always be on the same channel when you turn it on.
3. When AV LOCK is set ON the AV channel cannot be used, hence the screen will indicate that AV has been locked.
4. When the CHILD LOCK is set ON, if the buttons on the TV are pressed, the screen will indicate that the TV set is in the status of CHILD LOCK, and the buttons won't work.
5. The MAX VOLUME allows you to set a figure for the top limit of volume. Volume control still shows 1- 100 but volume level is scaled down.
6. The UNLOCK allows you to set all the lock to OFF and set the MAX VOLUME to 100.
7. If you forget your password or a password is accidentally set enter 9443 as the password. This will enable you to regain control.

Basic Playback

Basic Playback

Preparations

- Press the DVD/TV button on the remote control or the TV to turn on the DVD player.

Basic playback

1. Press OPEN/CLOSE to open the disc tray, place a disc on the disc tray.
There are two different disc sizes. Place the disc in the correct guide on the disc tray. If the disc is out of the guide, it may damage the disc and cause the DVD player to malfunction.
 - Do not place a disc which is unplayable in this DVD player (see "Playable discs").
2. Press OPEN/CLOSE to close the disc tray, the playback will automatically start.
 - Some discs do not start automatically. Press PLAY/ENTER to start playback.
3. Some discs may start playback with a menu. Use the cursor buttons on the remote control to select menu options and press PLAY/ENTER to start. You may also press the digit buttons to select a menu option directly. Many DVDs will not allow this during start-up.

Pause playback

1. Press PAUSE/STEP to pause playback (still mode).
The sound will be muted during still mode.
2. Press PLAY/ENTER to resume normal playback.

Stop playback

1. Press STOP ■ button to stop the disc playing. With some discs the player will memorize the stop position, such as DVD's and audio CD's.
2. Press PLAY/ENTER to playback to resume playback from the location where playback is stopped or from the beginning of the disc.
3. Press STOP twice to stop completely.

Previous and Next

During Playing, pressing the PREV ◀ key will restart the current chapter and skip chapters backwards with each subsequent press until the start of the disc is reached.
Each press of NEXT ▶ key during playing will skip the current chapter and play the next one. In the case of CD audio, MP3 and photo discs the next track, song or photo is selected.

Fast forward and Fast reverse

1. Press FWD ►► to fast forward through the disc. Each time the FWD ►► button is pressed, the fast forward motion speed changes.
2. Press PLAY/ENTER to resume normal playback.
3. Press REV ◀◀ to fast reverse through the disc. Each time the REV ◀◀ button is pressed, the fast reverse motion speed changes.
4. Press PLAY/ENTER to resume normal playback.

Single step playback

To "single step" press the "Pause" button, then press "Pause/Step" in continuous steps to view the next frame.

Advanced Playback

Advanced Playback

IMPORTANT NOTE:

ALL DESCRIBED FUNCTIONS ARE FOR DVD DISCS. IF YOU PLAY OTHER FORMATS, THE OPERATION AND DISPLAY ON SCREEN MAY VARY.

CAPTION

Press "CAPTION", the screen will display "SUBTITLE 01/XX XXXXX", "01" indicates the ordinal number of this language; "XX" indicates total number of language; "XXXXXX" indicates the language of country. (the number of language depends on disc). This function can select up to 32 languages displayed on screen.

REPEAT

Press "REPEAT" and Chapter repeat will be displayed on screen, the second press will display Title repeat, the third press will display All repeat, the fourth press will cancel this function.

A-B

Press A-B to select the Start point. Press again to select the End point. A third press will cancel the function.

ANGLE

When enjoying sports, concert or theatre, press this key to watch same actions in different angles. (Valid for discs possessing this function. Using a disc recorded in multi-angle you can view the scene from different angles, for example, front, side, whole view and exterior scene).

D.MENU

Press this key to display root menu, select item according to your preference. (This function will work with a DVD having a multi-layer menu.)

D.CALL

Pressing this key will cycle through "title elapsed", "title remain", "chapter elapsed", "chapter remain" and "display off".

PROGRAM

When playing discs, press "PROGRAM" to enter program mode. Press the digit buttons to select the program number that you want. When finished move the cursor to select "START". This will start the program playback.

SEARCH

Press "SEARCH" once to display the search menu. Use the UP/DOWN and LEFT/RIGHT cursor buttons to select the item you require. Press PLAY/ENTER to confirm.

SLOW

Press SLOW to play a disc in slow forward. Each time the SLOW button is pressed, the slow motion speed changes. Press PLAY/ENTER to resume normal playback;

Note: This function is invalid for CD and MP3.

TITLE/PBC

With some DVD discs pressing this key will display the title menu. You can then use the digit buttons to select the item you prefer.

AUDIO

Press this key can change the mode of audio. such as: Audio 1/2: AC 3 2 CH English
Audio 2/2: AC 3 5.1 CH English
Press this button to cycle between Mono Left, Mono Right, Mix-Mono and Stereo.

Note: Do not press this button continuously. Each press must have a 3 second delay.

Special Function Playback

JPEG DISC PLAYBACK

Users can record pictures from digital camera or scanner onto a CD-R or CD-RW disc using a personal computer, CD recording drive and suitable software. Be sure to use good quality recordable discs and trustworthy software with good instructions. Take care with recording settings: the disc must be recorded as data disc ISO9660 format, short file names (8 characters) are best, no multi-session and must be "finalised".

JPEG disc contains pictures in a compact file format which can be decoded by the DVD player and output for viewing and enjoyment on the television screen.

When a disc containing standard JPEG picture files is inserted into the player, a navigation menu will be displayed automatically. Use the UP and DOWN cursor buttons to select a file then press PLAY/ENTER. The slide show will commence. Press PREVIOUS or NEXT to move between pictures. Press pause to stop on the current picture. Press PLAY/ENTER to resume normal playing.

Press D.MENU to go back to folder and file view.

In the navigation menu you can open yellow folders containing files by moving the highlight onto them with the UP and DOWN buttons then pressing PLAY/ENTER.

Program button changes between folder and file list.
Some repeat functions can be used (see MP3 play).

 
Zoom functions are not included.

SCREEN SAVER FUNCTION

This unit employs a screen saver mode to help protect the tube during static video pictures. This can be turned off on the GENERAL SETUP PAGE (see Pg. 28)

DVD System Setup

DVD System Setup

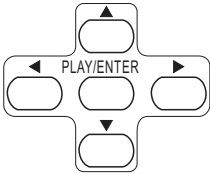


General Setup Process

1. Press the SETUP button, the General Setup Page, Preference Page will be displayed in turn.

2. Press ▲ or ▼ to select, the item, then press ► to enter the submenu.

3. Press ▲ or ▼ to select then press PLAY/ENTER to confirm.

 4. Press EXIT key or press SETUP repeatedly to exit the set-up menus.

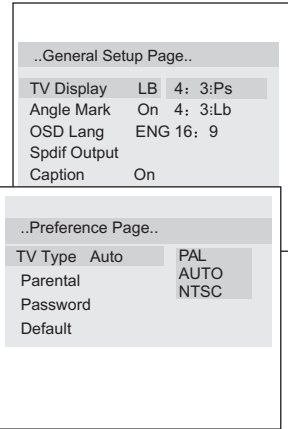

General Setup Page

ASPECT RATIO DESCRIPTION

When using the DVD with the internal TV, select 4: 3/LB.

The following information applies only when the DVD output is connected to an external TV.

- 4: 3/PS (PS = Pan and Scan)

You may select if you have a normal aspect ratio (4:3) TV, although the NORMAL/LB (letter box) is a more common choice. In PS

 
 
mode, widescreen material will fill the screen, but at the expense of chopping off extreme left and right edges of the original film picture. For this feature to work, the disc must be specially coded. Such discs are uncommon.

- 4: 3/LB (LB = Letter Box)

You may select this if you have a normal aspect ratio (4:3) TV. Widescreen material will be shown in pure unaltered form, allowing the entire picture area of the original film to be viewed without any side cropping. Black bars will appear above and below the picture.

- 16: 9

You may select this if you have a widescreen (16:9) TV. Black bars may still appear above and below the picture even if using a widescreen TV. This is because some film directors prefer to use ultra widescreen aspect ratios e.g. 2.35:1. This will normally be indicated on the DVD packaging.

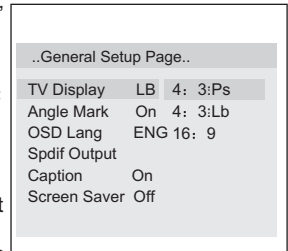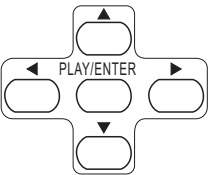

DVD System Setup(Continued)

 
DVD System Setup

General Setup Page

ANGLE MARK: Users can select a particular camera angle when playing a DVD which offers multiple angles.

This item allows you to set Angle Mark ON or OFF.


On Screen Display (OSD) Language: Users can select on-screen display language.

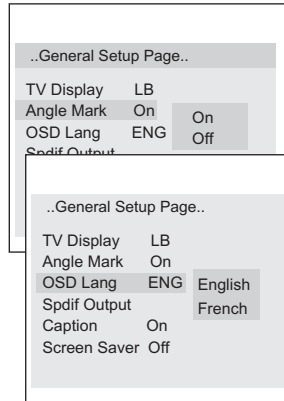


SPDIF OUTPUT MODE: Sets the audio outputs.

This DVD player includes three kinds of audio output:

 
1. **SPDIF OFF:** An analog surround sound format is output through the back-panel connections for 2-CH audio out or 5.1 CH audio out.
2. **SPDIF/RAW or SPDIF/PCM:** This surround sound format is output to a Dolby Digital/DTS decoder through the coaxial connector on the back panel of the product.

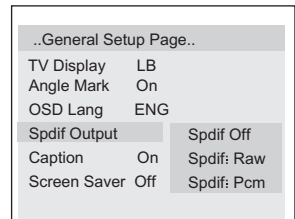

 CAPTIONS: This function allows you to display or hide the caption.


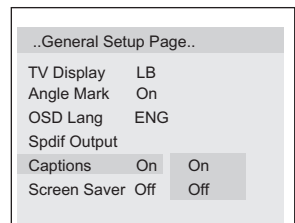


 SCREEN SAVER: If the screen saver is on, then there will be an animated picture of DVD on the screen whenever the DVD player is idle for more than 3 minutes .

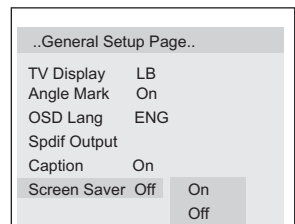

DVD System Setup(Continued)

  DVD System Setup

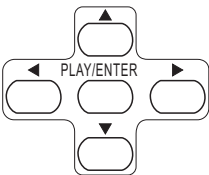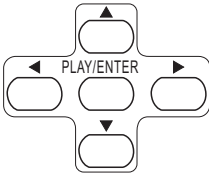

Preference Page

The Preference Page is only available when there is no disc in the player. These settings are applied consistently to all discs which are inserted and played.

TV TYPE: This player supports different TV output, including MULTI(Auto), NTSC, and PAL systems. Usually please set to MULTI.

..Preference Page..		
TV Type	Auto	PAL
Parental		AUTO
Password		NTSC
Default		

PARENTAL: The parental control function works in conjunction with the different censorship classes assigned to DVDs. These classes help to control the types of DVDs that the family watches, There are up to 8 censorship classes for DVDs.

..Preference Page..	
TV Type	Auto
Parental	1 Kid Saf
Password	2 G
Default	3 Pg
	4 Pg 13
	5 Pgr
	6 R
	7 Nc17
	8 Adult

Note:

- 1 To change this setting you must enter your password. (Initial password is 1234)
- 2 When set to OFF, all discs may be viewed.

PASSWORD CHANGE:

You can change your password by entering 4 digits. You must confirm the 4 digits before the new password can be accepted.


..Preference Page..	
TV Type	Auto
Parental	
Password	Change
Default	

Old Password	<input type="text"/>
New Password	<input type="text"/>
Confirm PWD	<input type="text"/>
	<input type="button" value="OK"/>


NOTE:If you forget your password or a password is accidentally set enter 1369 as the password. This will enable you to regain control.

DVD System Setup(Continued)

 DVD System Setup

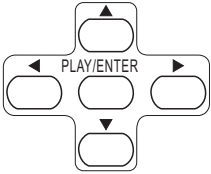

 DEFAULT: Resets all settings (except password and parental lock status) for this DVD player back to the manufacturers original settings. Press ENTER to perform the reset.

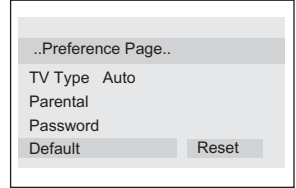




Note:

Some functions may not be available depending on the type of disc.

Playable Discs

The following discs can be played:


DISCS	LABEL	CONTENTS	DIMENSION
DVD VIDEO		Audio +Video (moving picture)	12cm
			8cm
AUDIO CD		Audio	12cm
			8cm
HDCD		Audio	12cm
			8cm
JPEG		Video(picture)	12cm
			8cm
CD-R	CD•R	Audio or Video (moving picture)	12cm
			8cm
CD-RW	CD-RW	Audio or Video (moving picture)	12cm
			8cm
CD+G	CD+G	Audio(picture)	12cm
			8cm

- You cannot play discs other than those listed above.
- You cannot play non-standard discs, even if they may be labelled as above.
- The performance of CD-R or CD-RW discs depends on the way the disc is prepared
- see under "Special function playback - JPEG disc playback".

Disc Protection and DVD Characteristics

ON HANDLING DISCS

 - Do not touch the playback side of the disc.
- Do not attach paper or tape to disc.

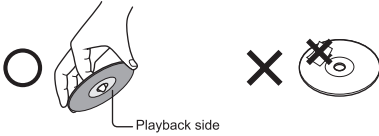

ON CLEANING DISCS

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.




- If you can not wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or anti-static spray for vinyl Lps. It may damage the disc.

ON STORING DISCS

- Do not store discs in a place subject to direct sunlight or near heat source.
- Do not store discs in place subject to moisture and dust such as a bathroom or near a humidifier.
- Store discs vertically in a case. Stacking or placing object on discs outside of their case may cause warping.

STRUCTURE OF DISC CONTENTS

Normally, DVD discs are divided into titles, and the titles are sub-divided into chapters. Audio CD are divided into tracks.

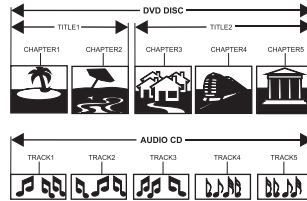

Each title, chapter, or track is assigned a number, which is called title number, chapter number or track number respectively.

There may be discs that do not have these number.


Compare DVD disc with other discs:

	DVD				LD	SVCD	VCD	CD
Encode method	Digital/MPEG II				Analog	Digital	Digital/MPEG I	Digital
Capacity	Single-side single-layer 4.7G	Double-side single-layer 8.5G	Single-side double-layer 9.4G	Double-side double-layer 17G	/	650MB	650MB	650MB
Playing Time	133 minutes	242 minutes	266 minutes	484 minutes		Single-side 60 minutes double-side 120 minutes	45 minutes	74 minutes
Disc diameter	12cm/8cm				30cm/20cm	12cm	12cm	12cm/8cm
Horizontal resolution	More than 500 line				No more than 430 line	No more than 350 line	No more than 250 line	/
Picture proportion	Multiple kinds				One kind	One kind	One kind	/
Subtitle	32 kinds				16 kinds at most	4 kinds	/	/
Language	8 kinds				4 kinds at most	4 kinds at most	2 kinds	2 kinds
Sound quality	48KHz, 96KHz/ 6, 20, 24bit				44.1KHz/ 16bit	44.1KHz/ 16bit	44.1KHz/ 16bit	44.1KHz/ 16bit

Connecting the TV set to the other video and audio equipment

Connecting to the other video and audio equipment

 - You can attach optional equipment such as another TV or other audio amplification equipment to the scart/digital coaxial sockets at the rear of the set to enjoy higher quality sound and picture.

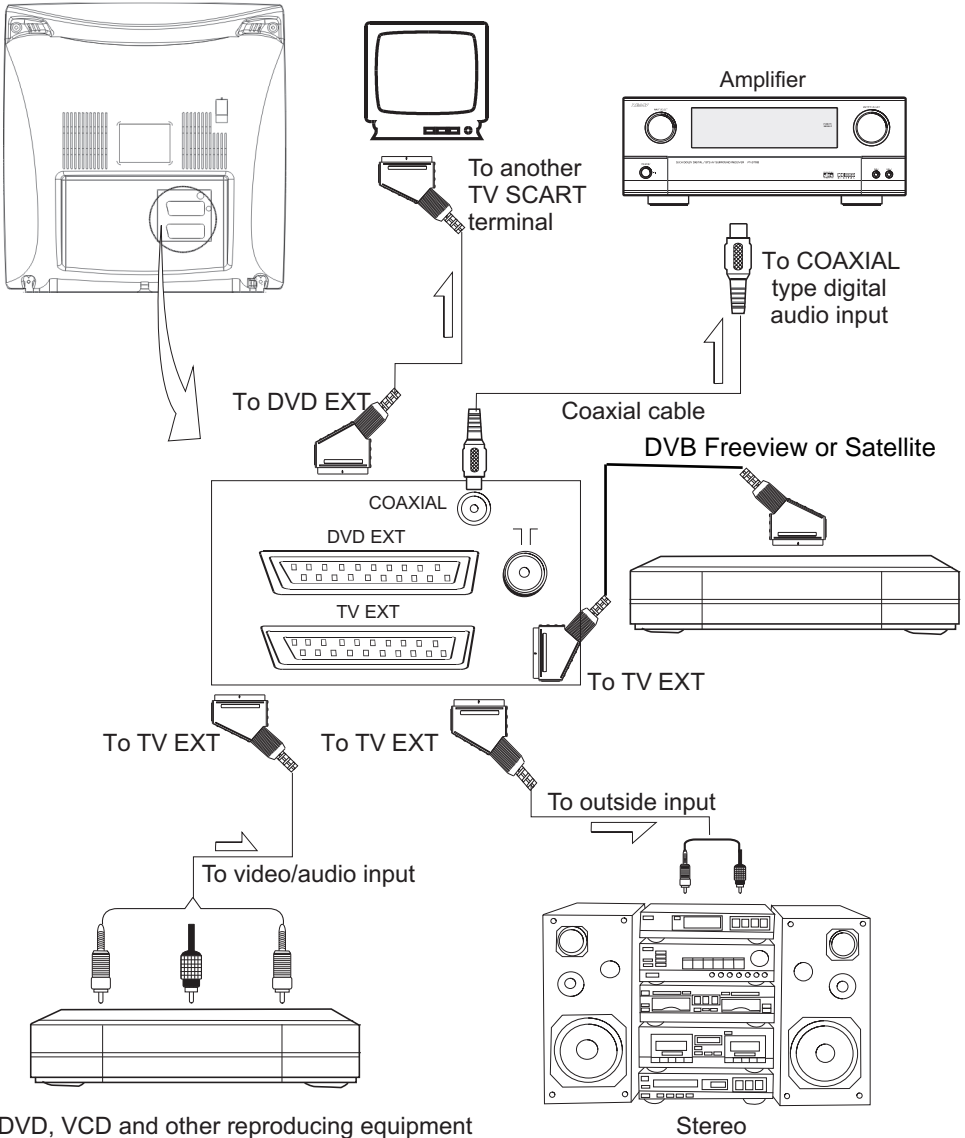

DVD, VCD and other reproducing equipment

Stereo

Trouble shooting guide

- Please read the guide below before calling the help line number shown below

Symptom	Possible Cause	Remedy
Dead. No led lit	No power to Tv	Check power connections and ensure power is switched on at socket.
		Press mains switch "in" on Tv
Screen not lit. Led RED.	Tv in standby	Press "Power" button on remote control. Led should turn to Green.
Screen lit, Noisy or no picture.	Aerial not connected.	Check aerial connections and ensure aerial is still mounted correctly. If using an indoor aerial it may be better to have an external aerial fitted
	Tv not tuned correctly	See page 9 for correct installation
Pictures Ghosting or pulling	Aerial damaged	See above
Picture Ok. No sound.	Sound "Mute" turned on	Press "Mute" button once sound should be restored
DVD not playing or showing "No disc"	Disc placed incorrectly.	Ensure disc is placed with label side facing upwards
	Damaged disc.	Scratched or cracked discs will not play, remove and inspect
DVD Pictures "freeze" or break up	Dirty or damaged disc.	Remove disc and inspect for dirt or scratches. See page 31

If you are still having difficulty please call the Technical help line. Ring 01422 203676 (Normal rates apply).
 Opening hours Mon-Fri 8 am – 8pm. Sat 9 am – 4pm. Sun 11am – 4pm "Bank holidays as Sun"

Specifications

Specifications

Model	AODV151R-S
Colour system	PAL, AV NTSC
Sound system	I
Picture tube	14" colour picture tube (33.5cm viewable)
Sound output power	2X2W (10% THD)
Power requirements	AC 240V~ 50Hz
Power consumption	≤ 70W
Dimension	368 (Width) x378 (Depth) x371 (Height) (mm)
Accessories	Remote control X1 Owner's manual X1 Battery(AAA) X2 Warranty Card X1 Quick Start Guide X1

Waste electrical products must not be disposed of with household waste. This equipment should be taken to your local recycling centre for safe treatment.



We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

akura