 

19" WIDE SCREEN LCD TV COMBI WITH DVD & DVB Freeview

Model No.: ATLDVD1930W-ID

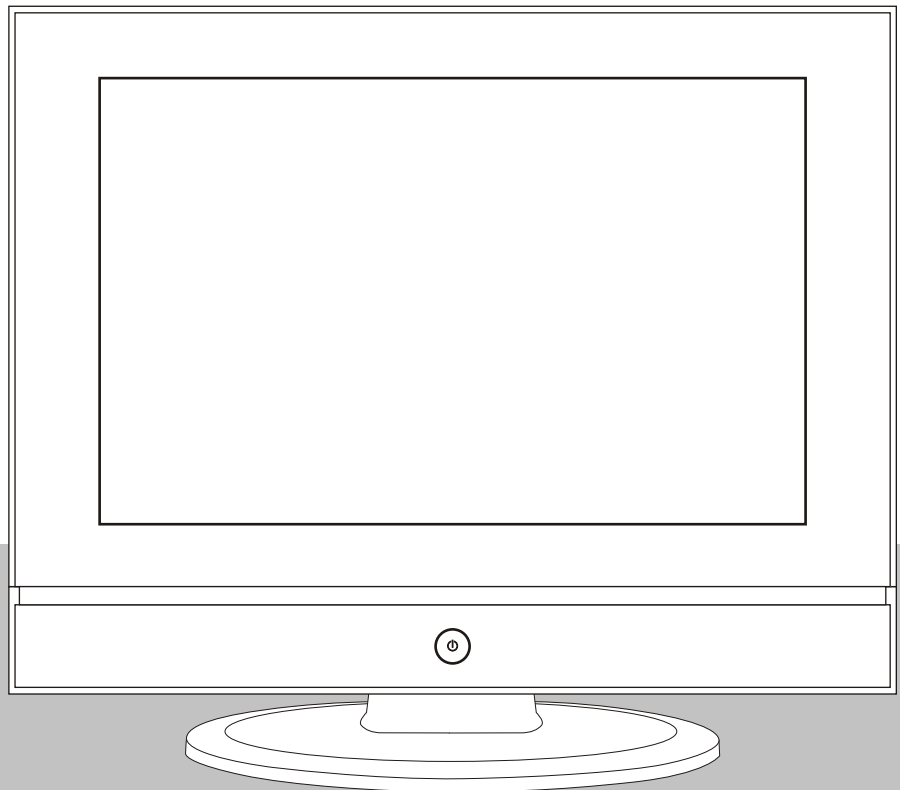

Read all of the instructions before using this TV and keep the instruction manual in a safe place for future reference.

Contents

TV-DVD

Caution	5
Safety Information	6
Electrical safety	6
Physical safety	6
In the box	7
Connecting your TV	8
Getting Started	9
The Remote Control	10
The Menus	13
Using the menus	13
The Video menu	14
The PC menu	15
The Audio menu	16
The TV menu	17
The General menu	19
DVD operation	20
System operation	25
General Steps of Setup Menu	25
Menu specification	25

DVB Operation

Display the DVB Menu 28

Channel List option.....28

Favorite List options 29

Channel Search options 29

System setting options 30

General Information

Disc Care 32

User Help Guide 33

Features 34

Specifications..... 34

Caution



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.



The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Correct disposal of this Product

(Waste Electrical & Electronic Equipment (WEEE))

The crossed out "Whee bin" is intended to show that this appliance must not be placed with ordinary household waste at the end of its useful life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please keep separate from other household waste and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where you purchased the product, or their local government office for details of where and how you can take this item for environmentally safe re-cycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product must not be mixed with other commercial wastes for disposal



This unit is a "CLASS 1" laser product. This product uses a visible laser beam which could cause hazardous radiation exposure. Ensure the recorder is operated as instructed. Do not remove any covers or look into the DVD drawer opening whilst power is applied. Do NOT modify or adjust any controls that may affect laser emissions. Should the appliance become faulty consult a qualified technician.



This appliance complies with European Safety and Electrical directives

Safety Information

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

 
Electrical safety

- The TV set should only be connected to a mains supply which matches that stated on the label on the mains adaptor
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
 - Do not place any connecting wires where they may be stepped on or tripped over.
 - Do not place heavy items, which may damage the leads, on them.
 - Hold the Mains plug, not the wires, when removing from a socket.
 - During a thunderstorm or while leaving the TV for long periods, disconnect the aerial (if outdoor) and mains adaptor from the supply.
 - Do not allow water or moisture to enter the TV or mains adaptor. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if:
 - the mains plug or cable is damaged
 - liquid is spilt onto the set, or if it is accidentally exposed to water or moisture
 - anything accidentally penetrates the ventilation slots
 - the set doesn't work normally.
 - Do NOT remove the safety covers. There are no user serviceable parts inside. You may invalidate the warranty. Qualified personnel must only service this apparatus.
 - To avoid battery leakage, remove exhausted batteries from the remote control handset, or when not using for a long period.
 - Do NOT break open or throw exhausted batteries on a fire.

Physical safety

- Do NOT block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around.
- Do NOT tap or shake the TV screen, you may damage the internal circuits. Take good care of the remote control, do not drop.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp soft cloth with dilute detergent.


In the box

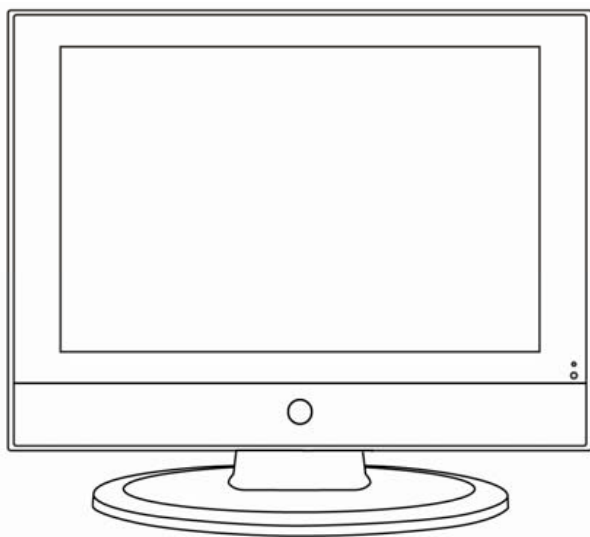


TV set



 
Remote control

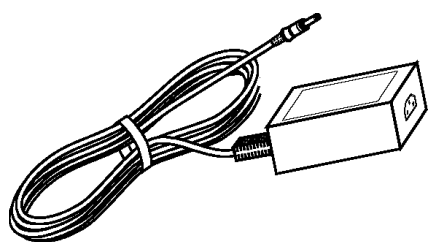

Mains adaptor

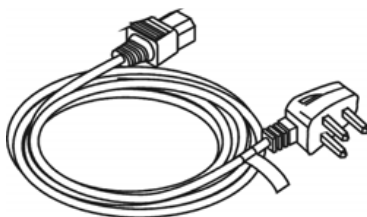 

Mains cable


 


This User Guide

If any of the accessories are missing, then contact your dealer as soon as possible. Keep all the original packaging in case you need to return the set to the dealer.

Connecting your TV

  Rear connection panel

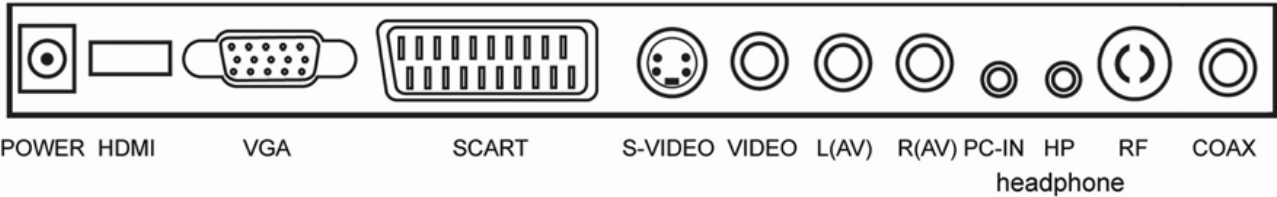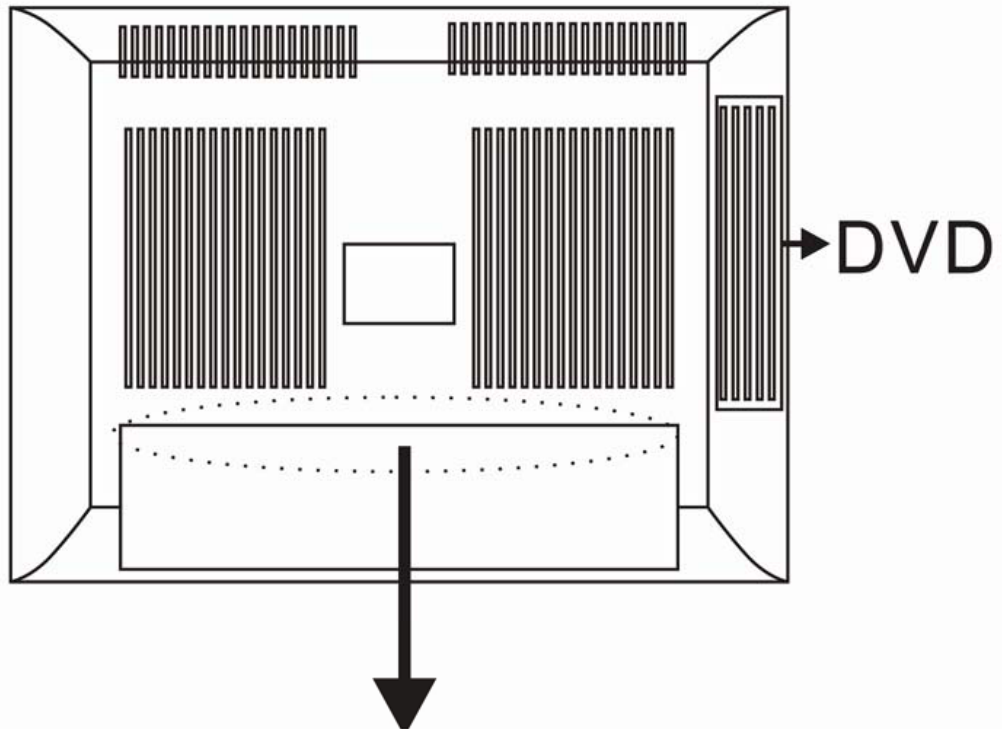

Name	Function Description
Power	Connect to Mains Adapter
HDMI	Connect to HDMI of DVD or other equipment
VGA	VGA signal from computer output
SCART	Connect to the composite terminal of your DVD/VCR
S-Video	S-Video signal input
Video	Video signal input
(AV)L (AV)R	Audio signal input for AV
PC-in	PC audio input
Headphone	Connect it to your headphone or other audio equipment
RF	Connect to antenna or cable source
COAX	Output to Audio amplifier(RF encoded)

 
Getting Started

- 1 Connect the aerial or input source to the appropriate input socket at the rear of the set. (see page 8).
- 2 Connect the small round plug on the power adaptor cable to the power input socket at the rear of the set.
- 3 Connect the mains cable between the power adaptor and the mains supply
- 4 Switch the power on, by pressing the **POWER** button on the front panel or the remote control, the **LED** will show green.
- 5 Use the **TV/AV** button on the front panel or the remote control to select which input source to use TV, SCART, AV, S-VIDEO, PC-RGB, HDMI, DVB, DVD.

You can use the front panel controls to adjust the volume or select a channel, as shown above, or you can use the remote control (see page 10).

- 6 To switch the set off for a short time, press the **POWER** button, the set will go into Standby and the **LED** will show red. If you are not going to use the set for some time, switch the power off completely by unplugging the mains cable.

Top panel controls

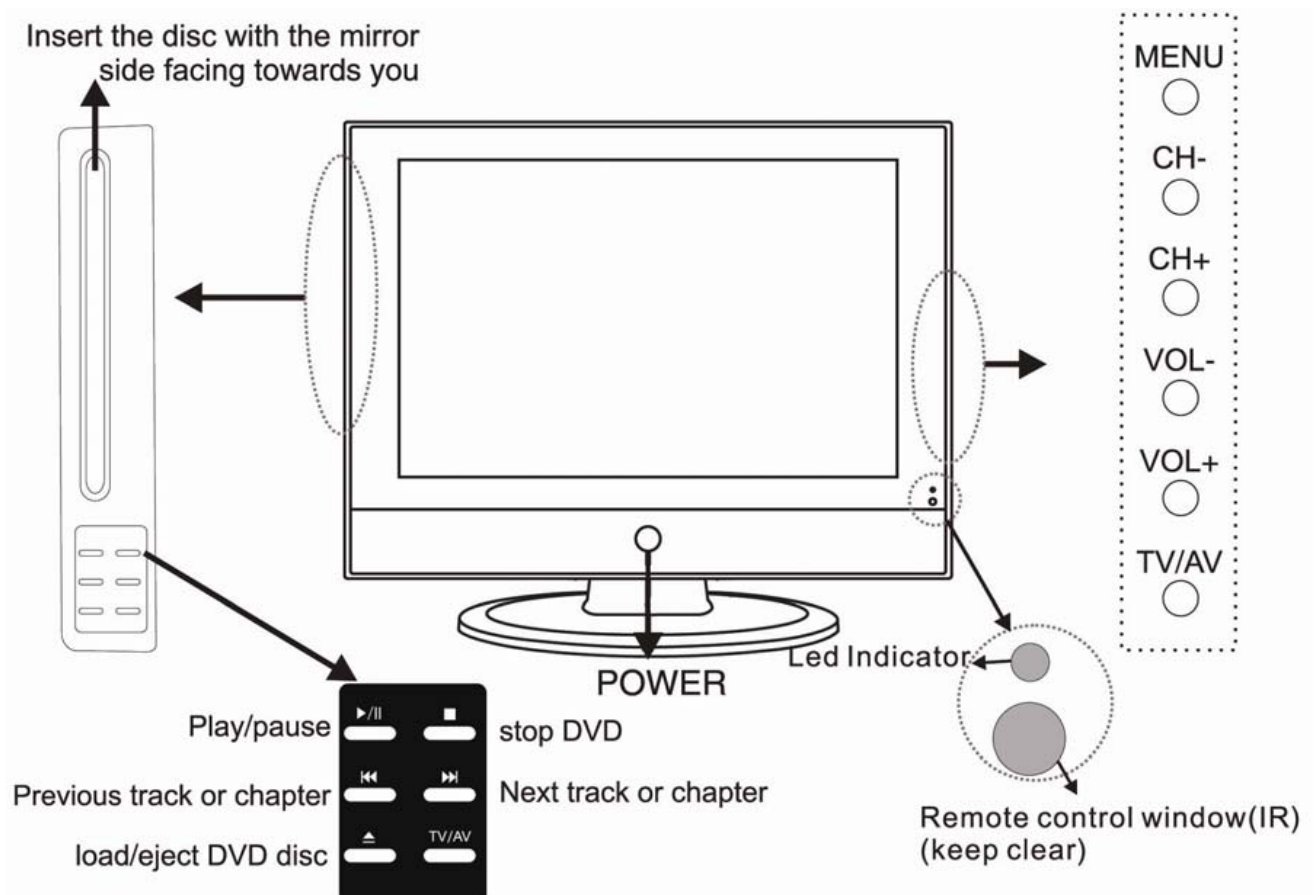


The Remote Control

Using the remote control for normal TV functions




1. Fit two AA batteries, making sure that they are the correct way round, as marked on the case.
2. Aim the remote control at the window to the right side of the screen, and keep the window clear at all times.
3. Do not press the buttons on the remote control too quickly, allow time for the set to respond.

 Battery Disposal.

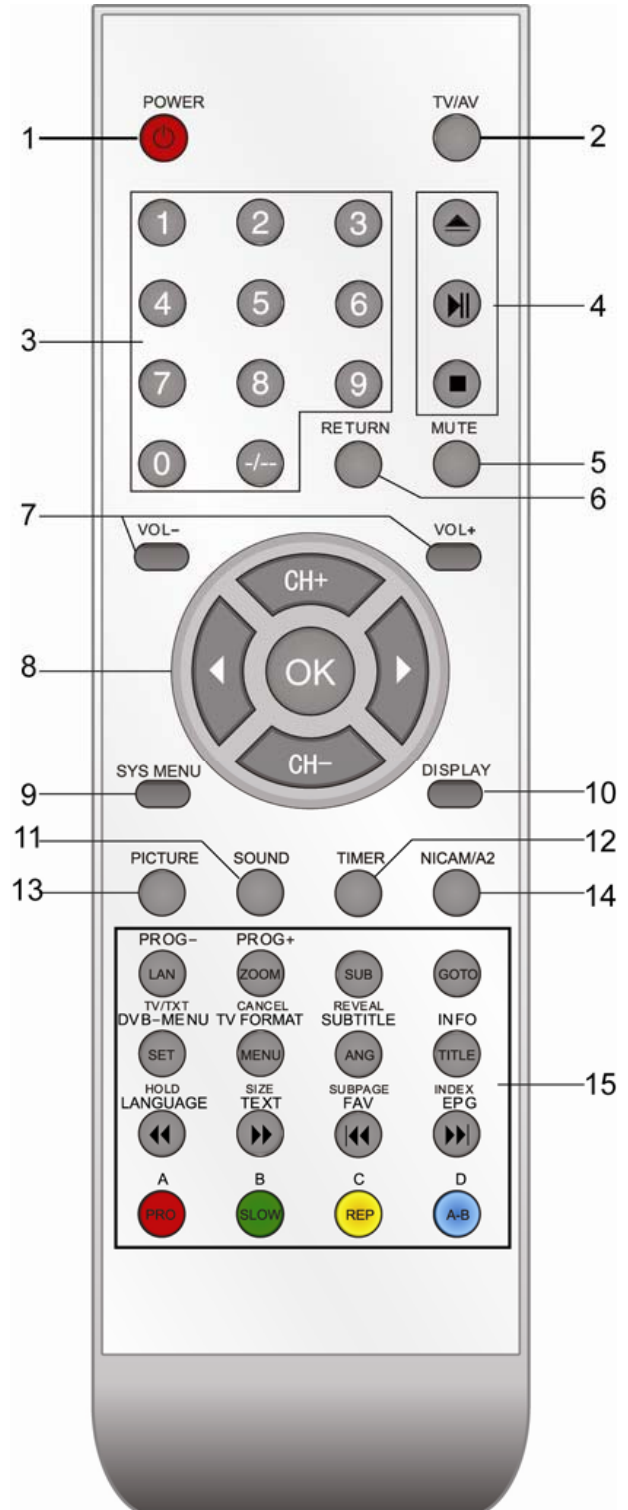When batteries are exhausted, do not break open throw on a fire or put in the general household waste. Contact your local waste authority



 
4. Buttons for DVD functions





-  : load/eject DVD disc.
-  : play/pause DVD program.
-  : stop DVD program.

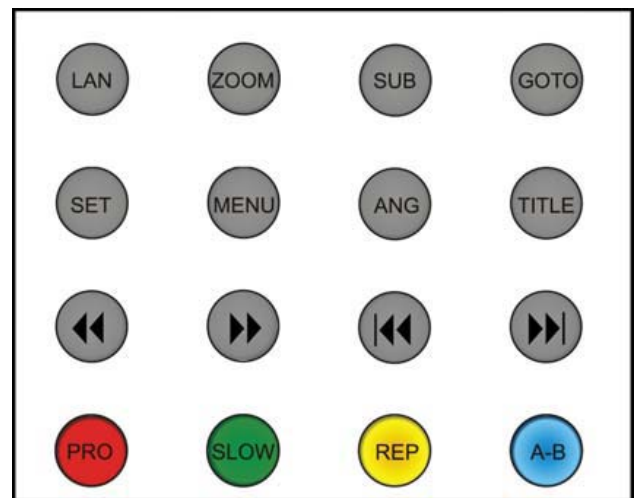

15 Buttons for DVD functions

- LAN:** select DVD disc language.
- ZOOM:** adjust picture size in DVD mode.
- SUB:** select DVD disc subtitle.
- GOTO:** play your favorite title/chapter/track.
- SET:** DVD setup menu
- MENU (PBC):** DVD play list/Disc menu
- ANG:** select DVD picture angle.
- TITLE:** DVD title.

 


-  : DVD fast forward..
-  : DVD fast reverse
-  : DVD previous chapter.
-  : DVD next chapter.

- PRO:** edit the program and play.
- SLOW:** play DVD programs at slow speed.
- REP:** repeat playing the title or chapter.
- A-B:** select and play the preferable paragraph of DVD program by pressing this key twice at the beginning and end of it.

15 Buttons for DVB function

- PROG+/-:** DVB program up/down
- DVB-MENU:** To display the main menu on the screen or return to the screen from a menu screen.
- TV FORMAT:** To change the picture mode.
- SUBTITLE:** To switch the dialog at the bottom of the screen
- INFO:** Means information, to display brief information concerning the current channel you are viewing.
- LANGUAGE:** To select audio language.

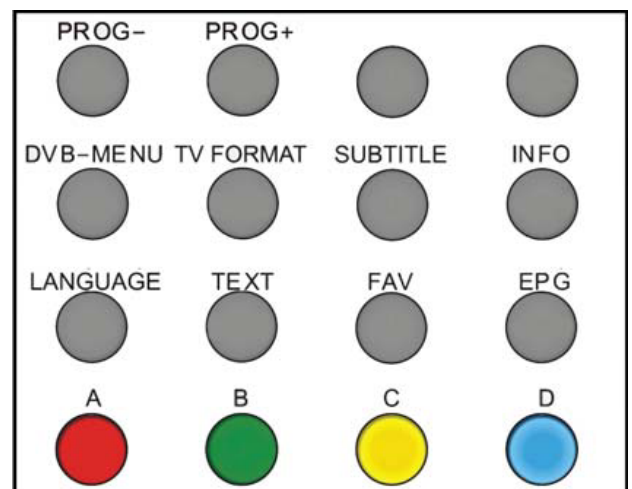

TEXT: To view the teletext broadcasting program

FAV: Means favorite, to display the favorite channel list defined by you.

EPG: To show the Electronic Program Guide during no-menu state only.

 
The Menus

Using the menus

- For all the buttons mentioned below, you can use those on the front panel, or you can use those on the remote control.
- To see the menus, press the **SYS MENU** button. The first press will show either:
 - the **VIDEO** menu, if the set is switched to TV, SCART, AV, S-VIDEO, HDMI, DVB, DVD.
 - the **PC** menu, if the set is switched to PC-RGB.

Press the **SYSMENU** button again, to see the other menus:

- another press to see the **AUDIO** menu
 - another press to see the **TV** menu (only when switched to TV)
 - another press to see the **GENERAL** menu
 - another press to turn the menus off.
- To select a menu item, for example **COLOUR**, press the **CH+** and **CH-** buttons to scroll up and down the list.
 - When a menu item is highlighted, use the ◀ ▶ buttons to change the setting.

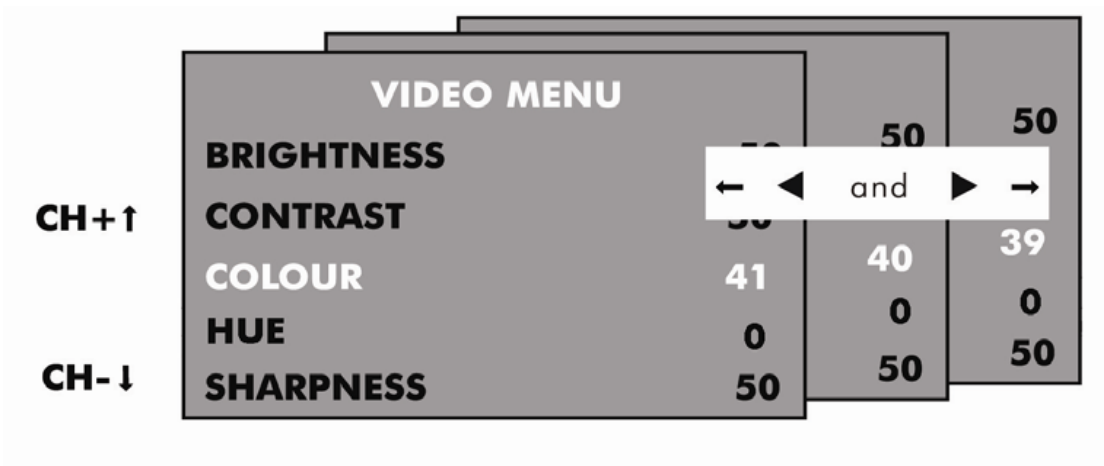

- When you have changed the settings, you can exit from the menu:
 - by waiting ten seconds without pressing any buttons
 - by pressing the **SYS MENU** button a few times until the menus turn off.

The Video menu

The first press of the **SYS MENU** button will show either:

- the **VIDEO** menu, if the set is switched to TV, SCART, AV, S-VIDEO, HDMI, DVB,DVD.
- the **PC** menu, if the set is switched to PC-RGB. (see next page)

VIDEO MENU	
BRIGHTNESS	50
CONTRAST	50
COLOUR	40
HUE	0
SHARPNESS	50

Brightness

Use the ◀ ▶ buttons to adjust the brightness of the picture.

Contrast

Use the ◀ ▶ buttons to adjust the contrast of the picture.

Colour

Use the ◀ ▶ buttons to adjust the colour of the picture.

Hue

Use the ◀ ▶ buttons to adjust the hue of the picture (only used in NTSC mode).

Sharpness

Use the ◀ ▶ buttons to adjust the sharpness of the picture.

HDMI SOURCE

VIDEO MENU	
BRIGHTNESS	50
CONTRAST	50
COLOUR	40
AUTO CONFIG	→
H-POSITION	0
V-POSITION	0

AUTO CONFIG: Press the ▶ button to have the following settings configured automatically.

H/V-POSITION: Use the ◀ ▶ buttons to adjust the position of the picture on the screen.

The PC menu

The first press of the **SYS MENU** button will show either:

- the **VIDEO** menu, if the set is switched to TV, SCART, AV, S-VIDEO, DVB, HDMI, DVD (see previous page)
- the **PC** menu, if the set is switched to PC-RGB.

PC MENU	
BRIGHTNESS	50
CONTRAST	50
COLOUR SETTING	USER
AUTO CONFIG	→
H-POSITION	0
V-POSITION	0
PHASE	0
CLOCK	0

Brightness

Use the ◀ ▶ buttons to adjust the brightness of the picture.

Contrast

Use the ◀ ▶ buttons to adjust the contrast of the picture.

Colour setting

Use the ◀ ▶ buttons to select from 6500K, 9300K or USER.

If you select USER, you can use the ◀ ▶ buttons to adjust the RED, GREEN and BLUE values individually. Press **SYS MENU** when you have finished adjusting.

Auto configuration

Press the ▶ button to have the following settings configured automatically:

Horizontal and Vertical position

Use the ◀ ▶ buttons to adjust the position of the picture on the screen.

Phase

Use the ◀ ▶ buttons to adjust the phase of the ADC sampling clock relative to the HSync signal, until a stable image is obtained.

Clock

Use the ◀ ▶ buttons to adjust the pixel clock frequency, until the image size is maximized for the screen.

The Audio menu

Press the **SYS MENU** button again to see the **AUDIO** menu.

AUDIO MENU	
VOLUME	20
BALANCE	50
AUDIO PRESET	PERSONAL
TREBLE	50
BASS	50

Volume

Use the ◀ ▶ buttons to adjust the volume of the sound.

Balance

Use the ◀ ▶ buttons to adjust the left/right balance of the sound.

Audio Preset

Use the ◀ ▶ buttons to select from PERSONAL, VOICE, MUSIC or THEATRE.

If you select PERSONAL, you can adjust the following settings:

Treble and Bass

Use the ◀ ▶ buttons to adjust the tone of the sound.

The TV menu

Press the **SYS MENU** button again, to see the TV menu, (*only if switched to TV*).
To select an item in the Menu use the CH + / CH- buttons

TV MENU	
CHANNEL	0
SYSTEM	BG
SKIP	OFF
AFC	ON
FINE TUNE	487.25MHz
SWAP	→
MANUAL SEARCH	→
AUTO SEARCH	→

Channel

Use the ◀ ▶ buttons to select a channel.

System

Use the ◀ ▶ buttons to select a sound system.

Skip

Use the ◀ ▶ buttons to turn the channel skip:

ON - this channel will be skipped when changing channel using the **CH** buttons

OFF - this channel will be included when changing channel using the **CH** buttons

Automatic Frequency Control

Use the ◀ ▶ buttons to turn AFC ON or OFF:

Fine Tune

Use the ◀ ▶ buttons to fine tune the frequency if you are having problems with a weak signal on the current channel.

The AFC will turn off if you use the Fine Tune controls.

Auto search

Press the ▶ button to start Autosearch. The TV will start searching from the lowest frequency. When it finds a station, it will automatically store this in the first location and move to the next. When Autosearch is complete, the TV will display the first station found. In most cases, the stored stations will not be in the correct order, therefore you must use the "SWAP" function to change to the correct order.

Manual Search

This may be used to add another station or accessory such as a VCR or Game console. Use the CH + / CH - button to select Channel. Use the ◀ ▶ buttons to select an unused location.

Press the CH button to select MANUAL SEARCH and press ▶ button once. Select UP or DOWN, and the TV will search for the new item. It is better to disconnect your TV aerial and ensure the accessory is turned on. When the item is found, it will be automatically stored in the selected location.

SWAP

When Auto Search has been performed, the stations will be in "received" order. To move the stations into the correct order i.e. BBC1, BBC2, ITV, ITVCh4, ITVCh5. "It is recommended that you have a current TV guide to hand".

Press the ▶ button to enter the SWAP menu. Press the ◀ ▶ buttons to select the channel number you wish to swap "FROM" e.g. (4). Press the **CH** button to select the "TO" location and press the ◀ ▶ buttons to select the location you wish to send "4" TO, e.g. "5". Press the **CH** button to select SWAP and press the ▶ button to confirm the swap. To swap another channel repeat the process until all the stations are in the correct locations.

Note: Always start at the Lowest "TO" location e.g. "1" if swapping all the locations.

The General menu

Press the **SYS MENU** button again to see the **GENERAL** menu.

GENERAL MENU	
LANGUAGE	ENGLISH
BLUE SCREEN	ON
NOISE REDUCE	OFF
INPUT SOURCE	TV
TXT LANGUAGE	Pan European
TXT EAST/WEST	WEST
ZOOM	16:9
RESET	→

Language

Use the ◀ ▶ buttons to select from a number of European languages.

Blue Screen

Use the ◀ ▶ buttons to turn the blue screen:

ON - the screen will turn blue when the signal strength is very poor

OFF - the picture and sound will be noisy when the signal is very poor

(use *this if reception cannot be improved, to stop the screen from turning blue*)

Noise Reduce

Use the ◀ ▶ buttons to select: OFF, LOW, MID, HIGH.

Input Source

Use the ◀ ▶ buttons to select which input source to use:

TV, SCART, AV, S-VIDEO, PC-RGB, HDMI, DVD, DVB.

TXT LANGUAGE

Use the ◀ ▶ buttons to select the Teletext language.

TXT EAST/WEST

Use the ◀ ▶ buttons to select the area of Teletext.

ZOOM

Use the ◀ ▶ buttons to select the display mode of the screen.

Reset

Press the ▶ button to return the set to the factory default settings.

All the settings in the VIDEO, PC and AUDIO menus, and Blue Screen in the GENERAL menu will be returned to the settings shown in this User Guide.

DVD OPERATION


Press the Power button on the TV or the remote control, then press the TV/AV button to select DVD mode. If there is no disc in the DVD player the screen will show "NO DISC".

Place a disc

Insert a disc with the mirror side facing towards you. If the disc is double sided, place the title you want to play facing you.

Do not touch the playing surface.

Hold the disc around the outside with your fingers and place the disc into the slot. The player will automatically draw the disc into the player.

To "Eject" the disc, press the  button on the TV or remote control.

Play

The contents of each disc vary, as to how the disc was authored and what features are included. Some discs start playing as soon as they have been read, some need "Play" selecting in the Menu. Different play modes are offered, such as Menu Play, Sequence Play and other modes.

Menu Play

1. Compatible with DVD, SVCD or VCD2.0.
2. If the disc is a DVD, ROOT MENU will appear on the screen. If it is SVCD or VCD 2.0, please press the MENU button to see the menu.
3. When a DVD disc is loaded, press the Arrows buttons to highlight the menu item you want to choose. With SVCD or VCD 2.0, press the numeric buttons to select a track to play.
4. Return to Menu when Playing: When playing a DVD disc press the Menu button to return to the "ROOT" menu. When playing a SVCD or VCD, and PBC is "on" press the Menu or Return button to return to the disc menu.

Title Play

1. Compatible with DVD discs only.
2. During DVD playback, press TITLE button to display the DVD title content.
3. Press the Arrow buttons to highlight the title you want to choose, and press OK; also you can press numeric buttons to choose.
4. The DVD player begins with the chapter 1 of the chosen title.

Sequence Play

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. When a SVCD or VCD disc is loaded and PBC is "on", press the MENU button once switches the PBC "off". The player can now playback in sequence mode. To turn the PBC back on press the MENU button again.
3. Except for SVCD or VCD discs, when in stop state, press the Play button, the player will play in the "Sequence" mode. This is for all compatible discs.

Program Play

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. The Program Playback option allows you to enter the order in which you want chapters or tracks to play, maximum to 16.
3. Program Menu:
If PBC is on, this operation will turn PBC off while the chapters / tracks play in programmed order.
4. According to the highlight, use the Numeric buttons to enter the chapters / tracks in the order you want them to play. Then press Play or use Arrow buttons to highlight the "PLAY" item and press OK. The chapters /tracks will play in the programmed order. You can program maximum 16 titles / chapters / tracks.
5. According to the Direction Indicator on the menu, you can press Arrow buttons to highlight where you want to enter.
6. During Program Playback, if program button is repressed, the program order and the contents will be displayed on the screen, and the Program Playback will be stopped; also you can press Stop and Play to resume normal playback.
7. Notes:
To clear the program order, use Arrow buttons to highlight the "CLEAR" item, then press OK.
To modify the program order, use Arrow buttons to highlight the item you are changing and enter the new chapter / track you want to program directly.
8. The program indicator in the screen and the playing chapter / track illuminate.

Additional operation

Selecting Tracks

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. When playing a DVD disc, press Numeric buttons on the menu or title page to select tracks; During DVD playback, you can input desired title numbers directly.
3. During sequence playback of a SVCD or VCD disk, press the numeric buttons to select tracks. (During Program Playback and when the PBC is on, you can only press Prev / Next button to select)
4. As for CD, HD-CD, discs, press Numeric buttons directly to select tracks.
5. When playing WMA, DIGITAL AUDIO DISC /JPEG discs, press Numeric buttons to select different tracks on current track list.

Skipping Tracks

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. To skip forward to the beginning of the next title / chapter / track on a disc, press Next on the remote or the right side of the player.
3. To skip backward to the beginning of the preceding title / chapter/track on a disc, press Prev on the remote or the right side of the player.

Multispeed Fast/Slow Motion Play

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.

2. Press the Multispeed Fast/Slow button on the remote during play to search through a disc. Multispeed Fast/Slow has four speeds: x2, x4, x8, x20.
With each consecutive press of the button, the search speed increases. If you press the button five times, Fast Multispeed Fast/Slow cycles back to normal play.
3. During DVD play, when Multispeed Fast/Slow gets to the beginning of the next title / chapter, it resumes normal play; During SVCD or VCD play with PBC on, when Fast Forward Play gets to the beginning of the next track, it resumes normal play.

Multiphase Slow Motion Play

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, DIGITAL AUDIO DISC/JPEG discs.
2. Multiphase Slow has six speeds: 1/2, 1/3, 1/4, 1/5, 1/6, 1/7 of the normal Speed play when pressing the "SLOW" button consecutively when playing discs.
3. When you press Play or the "Slow" button 7 times the player returns to normal play.

Freeze Frame

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, DIGITAL AUDIO DISC/JPEG discs.
2. During CD, HD-CD, WMA or DIGITAL AUDIO DISC / JPEG playback, press Pause once to freeze playback; Press the button again to resume normal playback.

Using the Repeat Feature

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. While a disc is playing, press REPEAT button once and the repeat banner appears to show current repeat mode.
 - a) In SVCD, VCD, CD, HD-CD, WMA, or DIGITAL AUDIO DISC/JPEG sequence playback mode. Press REPEAT button again to turn on repeat mode. Press the button again on the remote to turn to the next repeat mode. There are three repeat options: Off, Track Repeat and Disc Repeat. With each consecutive press of the button, the repeat mode switches. If you press the button four times, repeat mode cycles back to Off.
 - b) In DVD playback, press Repeat button again to turn on repeat mode. There are three repeat options: Off, Chapter Repeat and Title Repeat. With each consecutive press of the button, the repeat mode switches. If you press the button four times, repeat mode cycles back to Off.
 - c) In WMA, DIGITAL AUDIO DISC /JPEG playback, press Repeat button again to turn on repeat mode.

There are four repeat options: Off, Track Repeat, Directory Repeat, and Disc Repeat. With each consecutive press of the button, the repeat mode switches. If you press the button five times, repeat mode cycles back to Off.

Using the Display Feature

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc
2. Loading and playing DVDs (two pages)
 - Press DISPLAY button once to show the first page:
 - "Disc Type, Title * / * (the playing title / total titles), Chapter * / * (the playing chapter / total chapters), Elapsed Time of the Disc".
 - Press the button again to show the second page:
 - "Language */* (the serial number of playing language / the amount of optional

languages) or Off, Language Type, Audio Type, Subtitle * / * (the serial number of playing subtitle /the amount of optional subtitles) or Off, Angle * / * (the serial number of playing angle / the amount of optional angles) or Off".

- Press the button for the third time, the display menu fades out.

3. Loading and playing SVCD discs (two pages)

- Press Display button once to show the first page:

- "Disc Type, Track * / * (the playing track / total tracks), Mute, PBC, Repeat Mode, Elapsed Time of the Playing Track".

- Press the button again to show the second page:

- "Language * / * (the serial number of playing language/ the amount of optional languages) or Off, Language Type, Audio Type, Subtitle * / * (the serial number of playing subtitle / the amount of optional subtitles) or Off".

- Press the button for the third time, the display menu fades out.

4. Loading and playing VCD

- Press Display button once to show the first page:

- "Disc Type, Track * / * (the playing track / total tracks), Mute, PBC, Repeat Mode, Elapsed Time of the Playing Track".

- Press the button again, the display menu fades out.

5. Loading and playing CD, HD-CD, WMA, DIGITAL AUDIO DISC / JPEG discs

- Press Display button once to show the first page:

- "Disc Type, Track * / * (the playing track / total tracks), Mute, Repeat Mode, Elapsed Time of the Playing Track".

- Press the button again, the display menu fades out.

Using the Search Feature

1. Compatible with DVD, SVCD, VCD, CD, HD-CD discs.

2. You can use Search feature to select a title/ chapter/track number or go to a specific point in a title. First, press GOTO button on the remote controller to bring up the search menu and enter the edit state. Secondly, press Arrow buttons to highlight the title / chapter/ track number or the time option; Thirdly, use Numeric buttons to enter the title / chapter/ track you want to play or the elapsed time you want to go to in that title. At last, press OK button to start playback.

For example, entering 01:23:56 will start playback one hour, twenty-three minutes and fifty-six seconds into the title.

3. Notes

a) This feature does not work in Program Play mode.

b) If PBC is on, it will turn off automatically when Search Playback starts.

c) When playing WMA, DIGITAL AUDIO DISC / JPEG discs, Search Feature does not work.

Changing the Soundtrack or Language

1. Compatible with DVD SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.

2. Press the LANGUAGE button to display current soundtrack.

a) Press the button to switch soundtracks.

b) Press the button again on the remote to turn to next soundtrack.

3. When playing a SVCD or VCD disc, there are five soundtracks: Stereo (L/R), L/L, R/R, L/L Auto A/D Detect, and R/R Auto A/D Detect. With each consecutive press of the button, the soundtrack switches. If you press the button six times, soundtrack cycles

back to Stereo.

4. When playing a CD, HD-CD, WMA, or DIGITAL AUDIO DISC disc, there are three: Stereo (L/R), L/L, and R/R.
5. When playing a DVD or SVCD disc, press LANGUAGE button to display current language, press the button again to turn to next language if the disc has different languages.

Subtitles

1. Compatible with DVD, SVCD discs.
2. Press the SUBTITLE button on the remote once, and the subtitle info banner appears
3. When a DVD or SVCD is recorded with subtitles, you can use the Subtitle feature to view the subtitles on-screen. By default, subtitles are off. The info banner will display Subtitle Off.
4. To display subtitles, press the SUBTITLE button again. The default language with its responding serial number will be displayed in the info banner and subtitles will be displayed in that language. With each consecutive press of the SUBTITLE button, the subtitle switches.

For example, "Language Icon: [1 English DTS 6CH] or [Off]" (the availability of the subtitles are disc-dependent). To turn subtitles off, press the Subtitle button until Subtitle Off is displayed.

Mute the Audio Output

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. Pressing the Mute button allows you to reduce sound to an inaudible level, and the icon of "MUTE" will be displayed on screen. Press the button again or press the Vol +/- button to return to the normal condition.
3. If the player has no sound, check that the "Mute" is not on.

Zoom In the Video Image

1. Compatible with DVD, SVCD, VCD, JPEG discs.
2. The Zoom Function allows you to enlarge the video image.
3. Press Zoom repeatedly to activate the function and choose the required zoom factor: Zoom 1, Zoom 2, Zoom 3, Zoom 4, Zoom 1 /2, Zoom 1 /3, Zoom 1/4, Zoom Off.

Repeat a Specific Segment on the Disc that You Define

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc.
2. During normal or fast playback, press the A-B button once. REPEAT "A" appears on the screen. This indicates the start point of the loop.
3. Press A-B again, REPEAT A-B will be shown, this indicates the end point of the loop.
4. The segment will now be repeated until you press the "REPEAT" button again to turn off the feature.
5. Press A-B again to cancel the loop points.
6. When playing a SVCD, VCD, or CD disc, you can repeat a specific segment only in one track. When the next track begins, A-B Repeat turns off automatically.
7. When playing a DVD disc, you can repeat a specific segment only in one title.

Digital Audio Disc

1. Compatible with Digital Audio discs
2. The player will search the disc directory automatically and display the contents on screen.

 
3. The player will then start to play the first track, of the selected directory.
4. To change directories use the direction buttons.

System operation

System operation will define the setting of the set; these definitions will be stored until you change them again.

General Steps of Setup Menu

1. Pause or Stop the player. Press **SETUP** on the remote control. The main menu will be shown, as below.

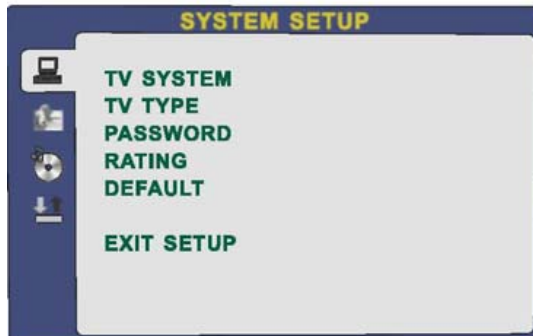


2. Press the **CH + / CH-** buttons to select the Icon of the desired section, e.g. "TV System" and press **▶** to open that section.
3. Press **CH + / CH -** to select the desired feature and again press **▶** to open that section.
4. Press **CH + / CH -** to select the desired feature and then press "OK" to select the new setting.
5. To exit the menu, press "SETUP" or **CH -** to select **EXIT SETUP** and then press "OK". When launching the setup routine, the pressing of the following buttons will turn off the setup menu, while the choices that have been changed will be saved.

Menu specification

1. SYSTEM SETUP

 The system setup options are illustrated below:

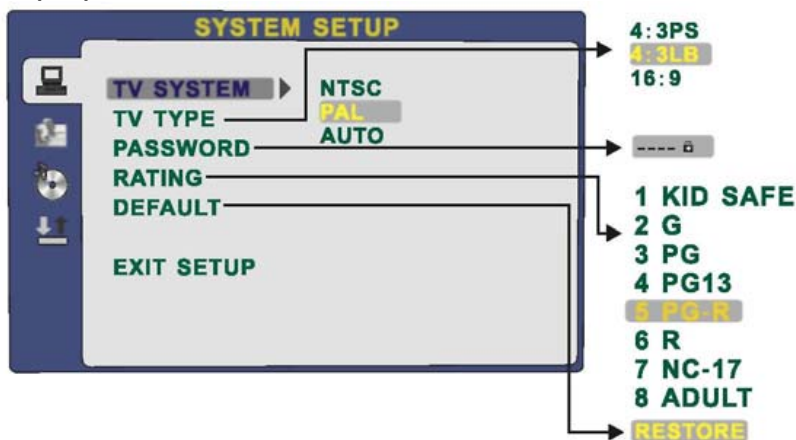

TV SYSTEM

According to the Colour system of your TV, normally this is set to either AUTO or PAL.

PASSWORD

The password option is initialized as locked. You cannot set the ratings limit or change the password. To enable these features you must unlock the Password. The default password is "0000". Using the CH button, move the highlight to "PASSWORD", press the ► button and enter "0000". You will see the padlock symbol open. You may now change the RATING or put in a new password number.

 
If the Lock symbol is BLUE you must press the ► button to enter the lock field, the lock symbol will change to YELLOW, you may now enter a new 4 digit number. Please remember or write down the new Password and keep safe.

RATING

The Rating feature is a rating limit feature, like movie ratings. This helps you to control what DVD the family watches. There are 8 levels of selection, from KIDS SAFE to ADULT. Adult is the "play all" selection.

2. LANGUAGE SETUP


The language setup options are illustrated below:

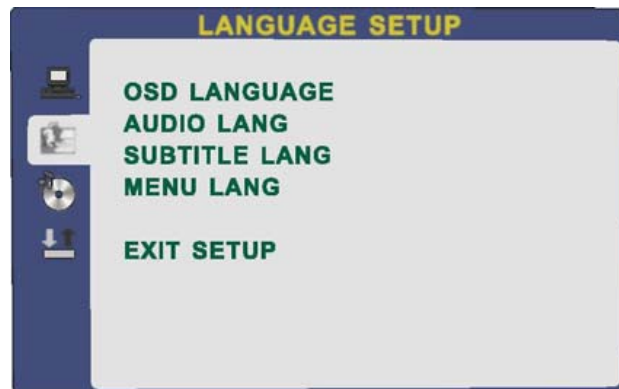

- **OSD LANGUAGE:** The OSD will display in the language you choose.
- **AUDIO LANG:** If the disc you are playing has the language you choose, it will output audio in that language.
- **SUBTITLE LANG:** If the disc you are playing has the language you require you may select this either in the Menu or using the "SUBTITLE" button on the Remote control. You may also switch this OFF.
- **MENU LANG:** If the disc you are playing has the language you require you may select this.

3. AUDIO SETUP

 The audio setup options are illustrated below:

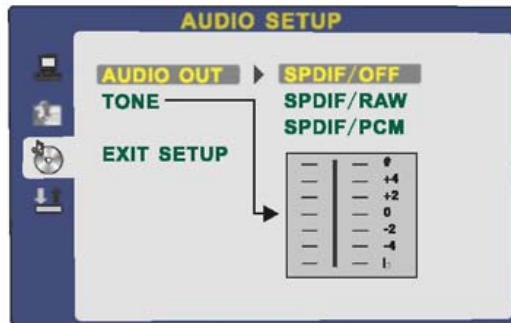

- Highlight the AUDIO OUT option, and press the Arrow buttons to choose the audio output mode you prefer. Press OK to confirm; There are 3 optional audio output modes: SPDIF /OFF, SPDIF / RAW, and SPDIF/ PCM.

SPDIF/ RAW is for amplifiers with a built in digital decoder. SPDIF/PCM is selected for amplifiers with no built in digital decoder.

 
- **TONE:** Use the CH+/- button to move the scroll and adjust the tone.

4. DIGITAL SETUP

The video setup options are illustrated below:

- **DYNAMIC RANGE:** Use the CH+/- button to move the scroll and adjust the dynamic range.
- **DUAL MONO:** Choose the mode of the audio output.

There are four modes:
STEREO, MONO L, MONO R, MIX MONO.

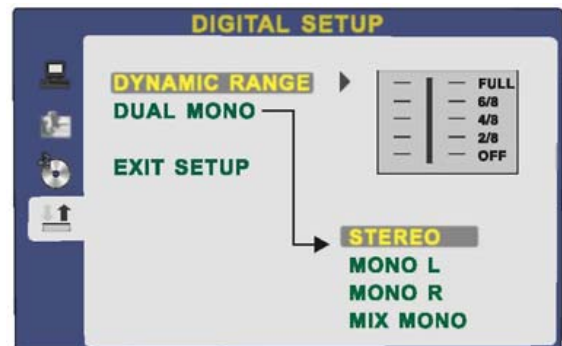

DVB operation

Display the DVB menu

Press **DVB-MENU** to display the main menu in DVB mode as below:



Press **▲ ▼** button to select the option that you want to adjust and then use the **OK** button to confirm it.

Press **DVB-MENU** again to exit the main menu.

 
Channel List option




In this menu, you can delete or lock the channel which you select.

Press **▲ ▼** button to select the channel on the channel list, then press the yellow button on the remote control to delete it.

Press **▲ ▼** button to select the channel on the channel list, press the blue button on the remote control to lock it, it will display a pin code menu on the screen as below, the channel will be locked when you enter the correct pin code and press **OK** button.

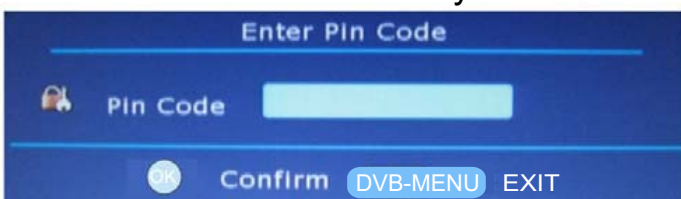

 The default pin code is 888888, you can change it in the system setting menu. If the pin code is not correct, the system will prompt you as below:

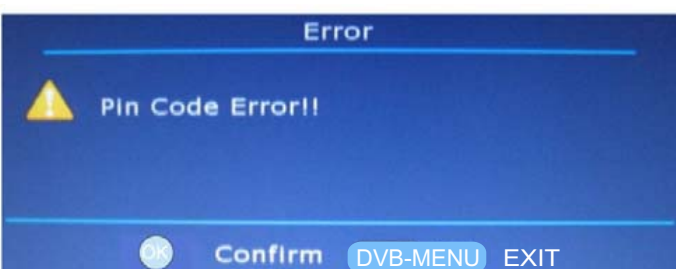


Favourite List options



In this menu, you can remove or add the channel you require to the favourite list
Press ▲ ▼ button to select the one on the list.
Press the red button to switch to the favourite list.
Press the **OK** button to remove or add the channel and press **DVB-MENU** to exit.

Channel Search options

 Press ◀ / ▶ button to select the search type manual scan or auto scan.

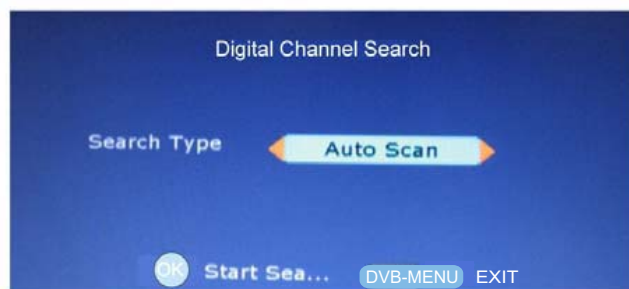


Manual Scan(see picture left)


when you select “Manual Scan”, press ▲ ▼ button to move to “Channel No”, press
◀ / ▶ button or numeric button to select the channel No., press **OK** button to start
Manual scan and press **DVB-MENU** button to exit it.

Auto Scan(see picture right)

 when you select “Auto Scan”, press **OK** button to start Auto scan and press
DVB-MENU button to exit it.

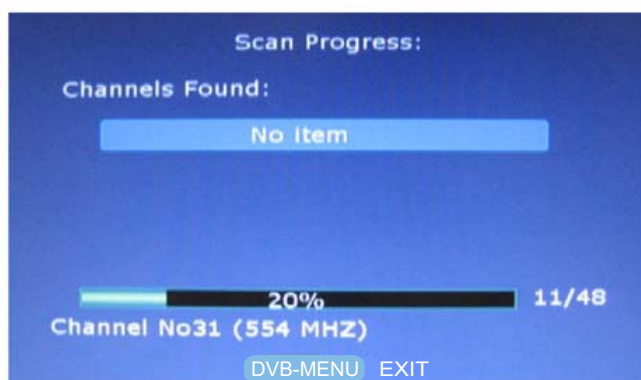


System setting options

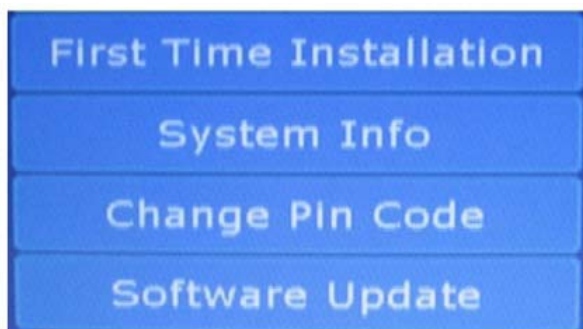 


Press ▲ ▼ button to select the option that you want to adjust and then use the **OK** button to confirm it.

 
First Time Installation

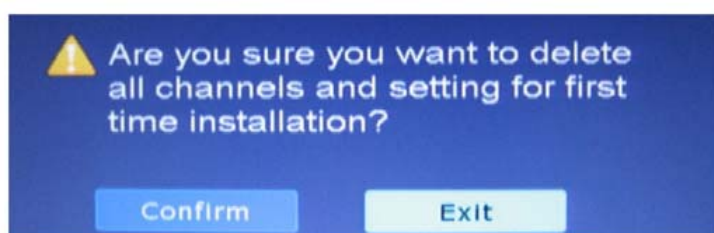

System Information

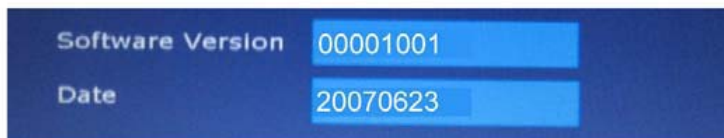 


Change Pin Code

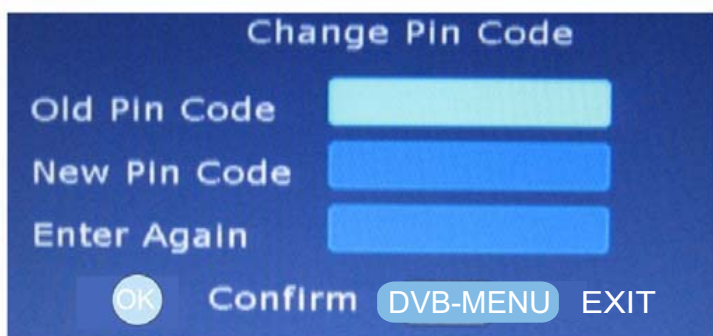 


Press digital button on the remote control to enter the pin code. Enter the new code again (Twice) press **OK** button to confirm it.

 Software Upgrade

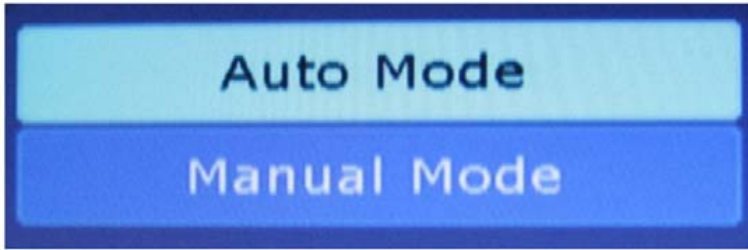


 There are two types of upgrade auto mode and manual mode, you can press ▲ ▼ to select one of it

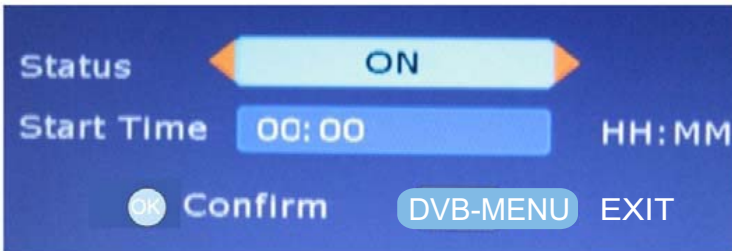

Manual mode

 
Press ◀ / ▶ to select ON or OFF and then press **OK** to confirm it

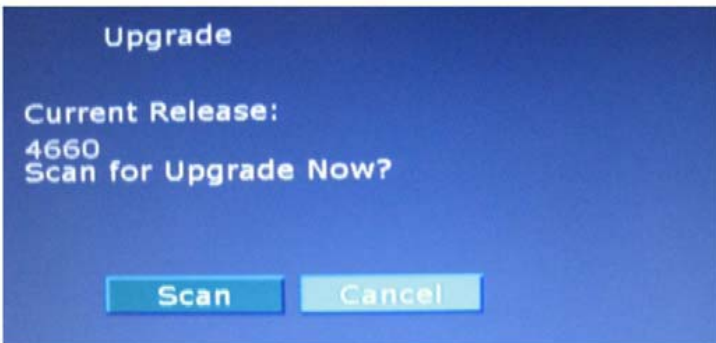

use ◀ / ▶ to start scan or cancel it

EPG menu

 Use the EPG button on the remote control to display the EPG menu directly as below:

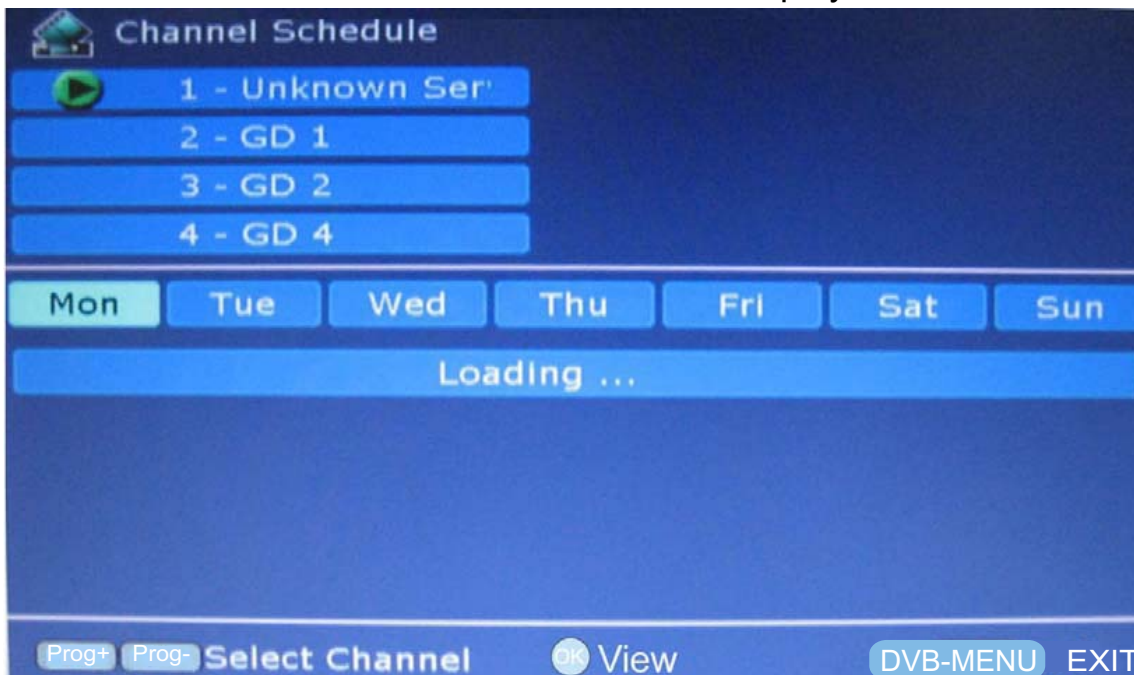

Disc Care

About Disc Terms

Title

Generally, pictures or music compressed on a DVD are divided into several sections, "title"

Chapter

The smaller section unit of picture or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching, but some discs may not have a recording chapter.

 
 
 
Track

A segment of picture or music on a CD, Each track is numbered for searching.

Care of Disc

Video disc contains high-density compressed data that needs proper handling.

1. Hold the disc with fingers by outer edge and/or the center spindle hole. Do not touch the discs surface.
2. Do not bend or press the disc.

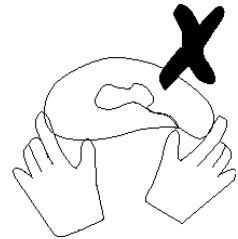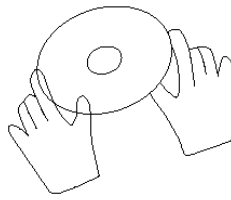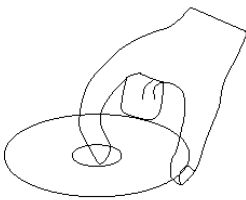

3. Do not expose the disc to direct sunlight or heating sources, Store discs in cabinet vertically, and in dry condition.

Prevent exposure to:

Direct sunlight

Heat or exhaust from a heating device

Extreme humidity

Clean the disc surface with a soft, dry cleaning cloth, Wipe the disc surface gently and radially from center toward the outer edge.

Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.

User Help Guide

Should you experience problems, please consult the guide below before calling the Customer Help line.

SYMPTOM	POSSIBLE CAUSE	REMEDY
---------	----------------	--------

GENERAL

Dead. No LED Lit	No power to the TV.	Check all connections to the TV including the DC jack, Mains lead and Mains socket
Dead. Led lit red	Set still in standby	Press either the Power button or the Standby button on the Remote control
Blue screen.	No signal	TV not tuned in. Aerial not connected.
	Incorrect source selected	Press TV/AV button to select correct source.
Noisy, snowy, ghosting picture (TV)	Poor aerial signal	If using an indoor aerial, try moving the aerial. Check aerial connections Have an out door aerial fitted.
No sound.	Incorrect sound system	Check "System" select in "TV Menu" see page 17.
	Sound "Mute"	Turn sound "Mute" OFF
	Volume set too low	Check volume settings
	External leads not connected "if used"	Check all external leads are connected
Bright dot/s on screen	Pixel turned on fully.	Occasionally one or two pixels may fail, this is normal as the screen ages or suffers a violent impact. This is not a fault covered by warranty

DVD

Will not accept disc	DVD not selected	Select DVD with TV/AV button
Screen shows "NO DISC"	Disc placed incorrectly	Disc must have mirror side facing you if single sided.
	Disc damaged or dirty	Inspect disc. If damaged you must discard. If dirty see "Disc care" page 32
Picture "Freezes" or breaks up	Disc damaged or dirty.	See "Disc care" page 32
Certain disc functions not highlighted	Disc may not support required feature	Read disc information

PC Monitor

Unstable picture	Monitor may not be set to PC correctly.	Enter PC Menu and select "AUTO" see page 15
Unstable picture	No connection from PC.	Check PC/Monitor connecting lead.
	PC Screen refresh rate is set too high.	Enter PC Screen setup and set refresh rate at 60Hz

Features

- High quality display
- VGA, RF Video, DVB, S-Video, DVD, SCART, HDMI.
- Stereo audio inputs
- Automatic or manual channel search
- Auto-shutdown to save power when no signal input

Specifications

TV

TV System	PAL BG/DK/I SECAM BG/DK
Screen size	19"(diagonal)
Resolution	1440x900 pixels (RGB)
Aerial input	75 Ω (unbalanced)
Audio output power	2x3 W
Mains power	12V 5 A
Power consumption	60W

Remote control


Type	infrared
Control distance	5 m
Control angle	30° (horizontal)
Batteries	2 x 1.5 V, size AA
Dimensions	48 x 168 x24 mm
Weight	70 g (without battery)

Mains Plug Wiring Diagram

For your own safety read following instruction before attempting to connect this unit to the mains supply

MAINS (AC) OPERATION

 The wires in the main lead are coloured in accordance with the following code:

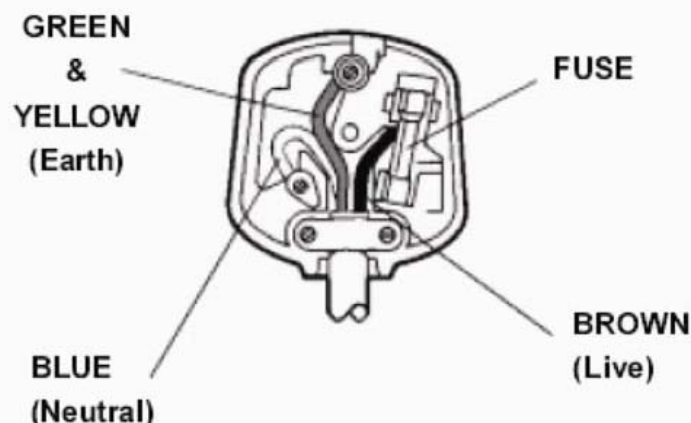

IMPORTANT

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter E, or by the earth symbol, or coloured green or green and yellow.

The wire which is coloured blue or black must be connected to the terminal which is marked with the letter N or coloured Black.

The wire which is coloured brown or red must be connected to the terminal which is marked with the letter L or coloured Red.

For continued protection against risk of fire, replace only with same type and rating of fuse (ASTA Approved 3A 250VAC fuse)

If your product is fitted with a moulded plug which requires replacement please unplug and dispose of safely, then rewire as shown above.

Wall Mounting

The Tv is provided with mounting holes for a VESA approved wall mounting bracket (NOT SUPPLIED). Remove the Two Posi screws holding the base to the base bracket and lift the base away (do not remove the base mounting bracket). Mount the VESA bracket using 4x M4 x 10 Iso metric threaded screws (not supplied). Do NOT use screws longer than 10mm, damage will occur to the internal parts. Fit the wall bracket securely following the manufacturers instructions. Akura accept no responsibility for damage caused by faulty bracket installation.