



OPERATING INSTRUCTIONS

AV1506LCD

If you experience any difficulty in setting up or operating this product please contact the Help line on 01422203676 (standard rates apply).

 
15" LCD TV COLOUR TELEVISION

Contents

Preparation	2
Safety Precautions	2
Before Switching On Your TV	3
Remote Control Buttons	4
LCD TV	4
Switching The TV ON/OFF	5
Navigating the Menu System	5
Menu Map	6
Menu System	7
Other Features	10
Teletext	11
Connect Peripheral Equipment	12
Specifications	13
Connect Peripheral Equipment	14
Peripheral Equipment Connections	14
Important Instruction	15

Preparation

For ventilation, leave a space of at least 10 cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set.

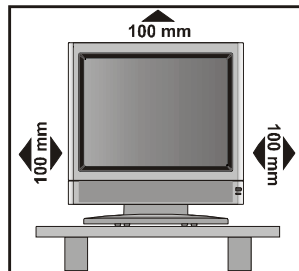

Use this apparatus in tropical and/or moderate climates.

Features

- Remote controlled colour television.
- 100 programmes from VHF, UHF bands or cable channels can be preset.
- It can tune cable channels.
- Controlling the TV is very easy by its menu driven system.
- It has a Scart socket for external devices (such as video, video games, audio set, etc.)
- Stereo sound system (German+Nicam).
- Full function Teletext .
Fastext (7 Pages), TOP text.
- Favorite Channel
- Channel Lock
- Headphone connection.
- A.P.S. (Automatic Programming System).
- All programmes can be named.
- Forward or backward automatic tuning.
- Sleep timer.
- Child Lock.
- Automatic sound mute when no transmission.
- NTSC Playback.
- AV in and S-Video are available.
- AVL (Automatic Volume Limiting)
- When no valid signal is detected, after 5 minutes the TV switches itself automatically to stand-by mode.
- PLL (Frequency Search)
- Audio Line Out

Safety Precautions

Please read the following recommended safety precautions carefully for your safety.

1. Power

- Always use the provided AC adaptor.
- Operate only from the power source specified on the AC adaptor.
- In using, the AC adaptor gets heat on the surface of the case. It is normal, not defective.
- Do not cover the case of AC adaptor with any material while it is in operation. Leave 15 cm space (minimum) around the AC adaptor.
- The rating information and safety caution of the AC adaptor are on its case.

Warning: When the device is not in use for a long time, disconnect from power.

2. Power Cord

Do not place the set, a piece of furniture, etc. on the power cord (mains lead) or pinch the cord. Handle the power cord by the plug Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock Never make a knot in the cord or tie it with other cords. The power cords should be placed in such a way that they are not likely to be stepped on A damaged power cord can cause fire or give you an electric shock. When it is damaged and need to be changed, it should be done by qualified personnel.

3. Moisture and Water

Do not use this equipment in a humid and damp place (avoid the bathroom, the sink in the kitchen, and near the washing machine). Do not expose this equipment to rain or water, as this may be dangerous and do not place objects filled with liquids, such as flower vases, on top of the set. Avoid from dripping or splashing. If any solid object or liquid falls into the cabinet, unplug the set and have it checked by qualified personnel before operating it any further.

4. Cleaning

Before cleaning, unplug the adaptor from the wall outlet. Do not use liquid or aerosol cleaners. Use soft and dry cloth.

5. Ventilation

The slots and openings on the back cover are intended for ventilation and to ensure reliable operation. To prevent overheating, these openings must not be blocked or covered in anyway.

6. Heat and Flames

The set should not be placed near to naked flames and sources of intense heat, such as an electric

heater. Ensure that no naked flame sources, such as lighted candles, are placed on top of the set.

7. Lightning

In case of Lightning a Thunderstorm or when going on holiday. Disconnect the mains supply and aerial (if external).

8. Replacement Parts

 
When replacement parts are required, be sure the service technician has used replacement parts which are specified by the manufacturer or have the same specifications as the original one. Unauthorised substitutions may result in fire, electrical shock, or other hazards.

9. Servicing

Please refer all servicing to qualified personnel. Do not remove the cover yourself as this may result in an electric shock.

Instructions for waste disposal:

- *Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children.*
- *Battery, including those which is heavy metal-free, should not be disposed of with household waste. Please dispose of used battery in an environmentally sound manner. Find out about the legal regulations which apply in your area.*
- *Cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury, please follow local ordinates or regulations for disposal.*

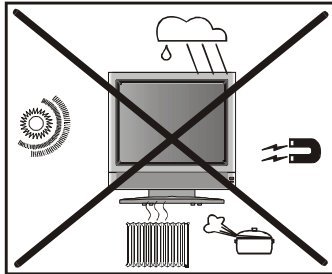

“The mains plug of the power supply is used as disconnect device and therefore shall remain readily operable.”

Warning: To prevent injury, this device must be se-

curely attached to the floor/wall in accordance with the installation instructions.

“The LCD panel is very high technology product with about a million thin film transistors, giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.”

“DO NOT LEAVE YOUR TV AT STAND-BY OR OPERATING WHEN YOU LEAVE YOUR HOUSE”

 
Before Switching On Your TV

Power Connection

IMPORTANT : The TV set is designed to operate on 100-240V AC. For this, an adaptor is used which gives an output voltage of 12V DC.

Connections To The Aerial Input Socket

- Connect the aerial plug to the Aerial input socket located at the rear of the Tv. You may also connect other apparatus such as VCR's DVB's and games to this socket.

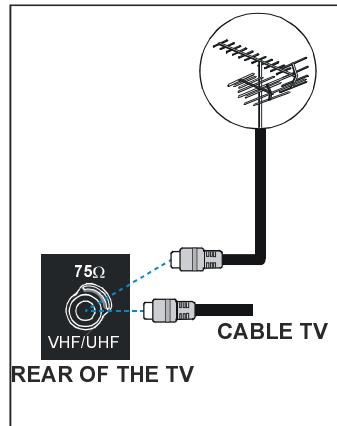

Inserting Batteries In The Remote Control Handset

 
WARNING : Remote control is battery included. A plastic protector is used to disconnect the batteries in order to prevent the battery life from reducing. Please remove the plastic protector before the first use.



IMPORTANT. THIS APPERATUS HAS A CLASS ONE POWER SUPPLY. ENSURE THAT IT IS PROPERLY EARTHED. ONLY USE THE MAINS LEAD SUPPLIED.


Remote Control Buttons

- ① = Stand By
- ② 0 - 9 = Direct Programme
- ③ = Menu
- ④ -- = Double Digit
- ⑤ = Volume +/-
- ⑥ = Programme +/-
- ⑦ = Cursor Up
- ⑧ = Cursor Right
- ⑨ = Cursor Left
- ⑩ OK = Okay (Store)

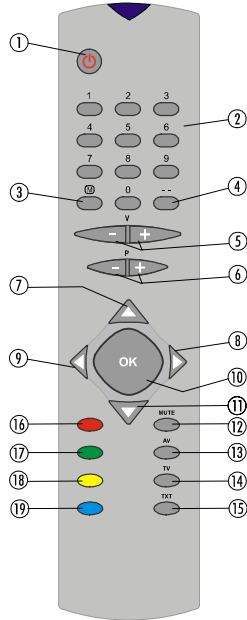


- ⑪ = Cursor Down
- ⑫ **MUTE**: Mute
- ⑬ **AV** = External Source (TV, EXT1, EXT2, SVHS)
- ⑭ **TV** = TV / Quit Menu
- ⑮ **TXT** = Teletext
- ⑯ Red button = Sound
- ⑰ Green button = Picture
- ⑱ Yellow button = Feature
- ⑲ Blue button = Install

 LCD TV

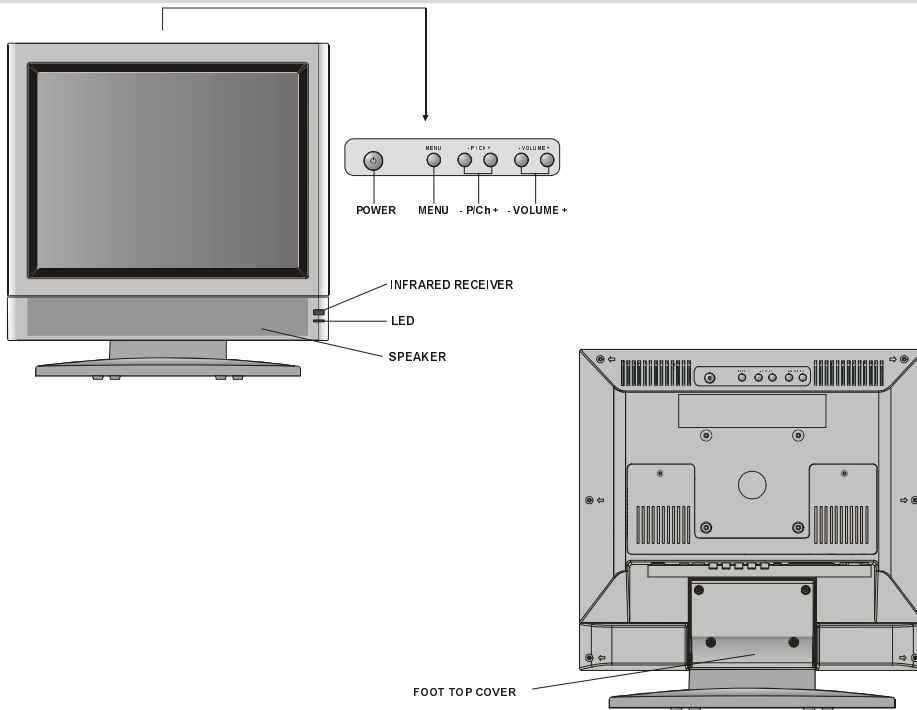

Inserting The Battery In The Remote Control Handset

 - Remove the battery cover located on the back of the handset by gently pulling backwards from the indicated part.
- Insert two AA/R03 or equivalent type batteries inside. Place the batteries in the right directions.
- Replace the battery cover.

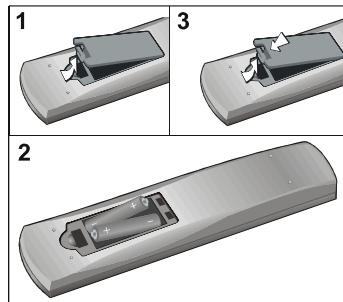

Note: Remove the battery from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of battery.

 
Switching The TV ON/OFF

To switch the TV on:

Your TV will switch on in two steps:

- 1- Connect the power supply cord to the system. Press Power On/Off button. Then the TV switches itself to stand-by mode (Optional).
- 2- To switch on the TV from stand-by mode either: Press a digit button on the remote control so that a programme number is selected, or Press the "-P/CH" or "P/CH+" button on the TV or press the "P-" or "P+" button on the remote control, so that last mode switched off is selected.

By either method the TV will switch on. When the TV is operated for the first time, the following screen appears:

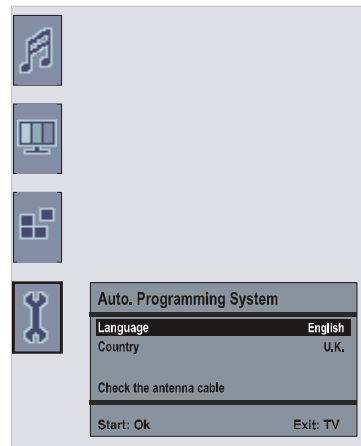

For more information on this process, see "Install Menu" section.

 
To switch the TV off:

- Press the "⏻" (stand-by) button on the remote control or On/Off switch on the TV, so the TV will switch to stand-by mode.

To power down the TV completely, press Power On/Off button or unplug the power cord from the mains socket.

Navigating the Menu System


For displaying menu options

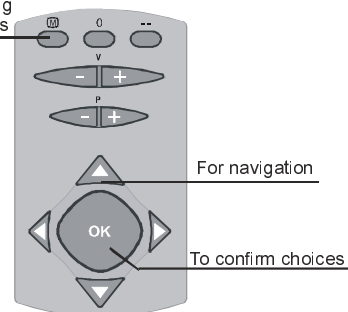

- 1- Press **M** to display the menu.
- 2- Press "▼" or "▲" button to select an icon. Press "▶" for more options.
- 3- Use "▼" or "▲" button to highlight.
- 4- Press "◀" or "▶" buttons to change the settings. Press **OK** to set as default.
- 5- To exit the menu or return from sub-menu screen, press **M**.

You can select the all option in the menu system. To select options, use "Navigating The Menu System".

 Menu Map

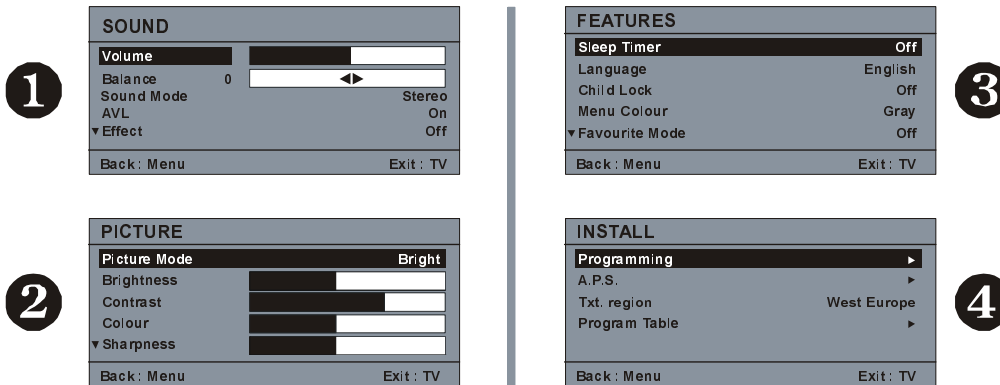

1 SOUND MENU

- Volume
- Balance
- Sound Mode
- AVL
- Effect
- Equalizer
- Mode
- Store

2 PICTURE MENU

- Picture Mode
- Brightness
- Contrast
- Colour
- Sharpness
- Colour Temp
- Room Lightning
- Picture zoom
- Store

3 FEATURES MENU

- Sleep Timer
- Language
- Childlock
- Menu Colour
- Favorite Mode

4 INSTALL MENU

- Programming
- Programme
- Band
- Channel
- Standard
- Colour System
- Search
- VCR Mode
- Decoder
- Store
- APS
- Auto Programming System
- Txt. Region
- Program Table

A menu map is provided above. For details of the items, refer to relevant explanations in the "MENU SYSTEM".

Menu System

Sound Menu



Volume

- By pressing ▲ / ▼ select **Volume**.
- Press ◀ / ▶ button to change the level of the volume.

Balance

- By pressing ▲ / ▼ select **Balance**.
- Press ◀ / ▶ button to change the level of the balance. Balance level can be adjusted between -32 and 32.

Sound Mode

- By pressing ▲ / ▼ select **Sound Mode**.
- Press ◀ / ▶ button, you can select Mono, Stereo, Dual I or Dual II mode, only if the selected channel supports that mode.

AVL

- By pressing ▲ / ▼ select **AVL**.
- Press ◀ / ▶ button to set the AVL as on or off.

Effect

- By pressing ▲ / ▼ select **Effect**.
- Press ◀ / ▶ button to set Effect as on or off.

Equalizer

 
- By pressing ▲ / ▼ select **Equalizer**.
- Press ◀ / ▶ button to change the Equalizer setting. In equalizer menu, the mode can be changed to **Flat**, **Speech**, **Music**, **Personal** and **Jazz**. Select the desired frequency by ▲ / ▼ button and increase or decrease the frequency gain by pressing ◀ / ▶ button.

Note: Equalizer menu settings can be altered only when the Sound Mode is in Personal.

Store Program

- By pressing ▲ / ▼ button, select **Store**.
- Press ▶ or "OK" button to store the adjustments. "Stored" will be displayed on the screen.

Picture Menu

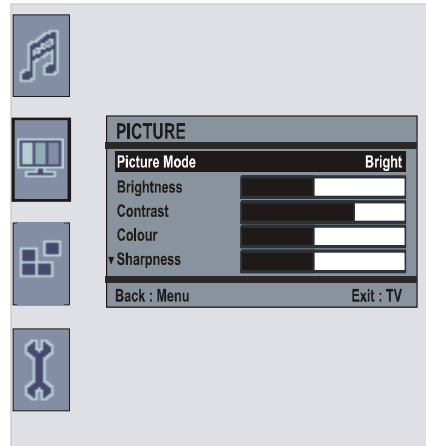

Picture Mode

- By pressing ▲ / ▼ button, select **Picture Mode**.
- Press ◀ / ▶ button to choose from one of these options: **Bright**, **Standart**, **Soft** and **Manual**.

Brightness/Contrast/Colour/Sharpness/Tint

- By pressing ▲ / ▼ button, select the desired Option.
- Press ◀ / ▶ button to set the level.

Hint: Tint (Hue) is displayed in picture menu when the TV receives an NTSC signal.

Colour Temp

- By pressing ▲ / ▼ button select **Colour Temp**.
- Press ◀ / ▶ to choose from one of these options: **Cool**, **Normal** and **Warm**.

Room Lightning

- By pressing ▲ / ▼ button select **Room Lightning**.
- By pressing ◀ / ▶ button, you can select one of these options: **Normal**, **Bright** and **Movie**.

Picture Zoom

- By pressing ▲ / ▼ button select **Picture Zoom**.
- Use ◀ / ▶ buttons, to change picture zoom to **Auto**, **4:3** and **Wide**.

Store Program

- By pressing ▲ / ▼ button select **Store**.
- Press ▶ or "OK" button to store the adjustments. "Stored" will be displayed on the screen.

Features Menu



Sleep Timer

- By pressing ▲ / ▼ select **"Sleep Timer"**.
- Press ◀ / ▶ button to set the Sleep Timer.

The timer can be programmed between Off and 120 minutes in steps of 10 minutes.

Language

- By pressing ▲ / ▼ button, select **Language**.
- Use ◀ / ▶ button to select the language.

Child Lock

- By pressing ▲ / ▼ select **Child Lock**.
- Press ◀ / ▶ button to set the Child Lock on or off. When on is selected, the TV can only be controlled by the remote control handset. In this case the control panel buttons, except the Standby button, will not work. Hence, if one of these buttons is pressed, "Child Lock On" will be displayed on the screen.

 
Menu Colour

- By pressing ▲ / ▼ select **Menu Colour**.
- Use ◀ / ▶ button to change menu background to **Transparent** or **Gray**.

Favourite Mode


- By pressing ▲ / ▼ select **Favourite Mode**.
- Use ◀ / ▶ button to set Favourite mode on or off (See Channel List menu Favourites).

Install Menu

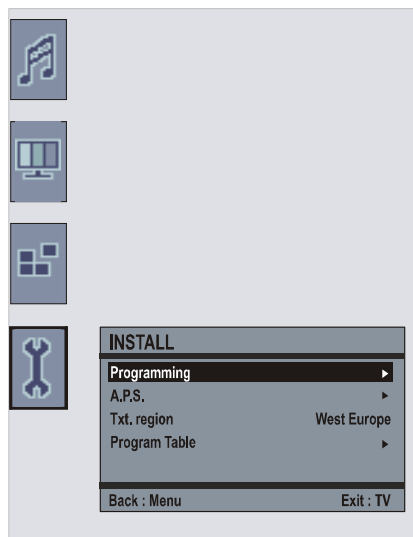

Programming

 - By pressing ▲ / ▼ select **Programming**.
- After pressing "▶" button, programming menu appears on the screen.

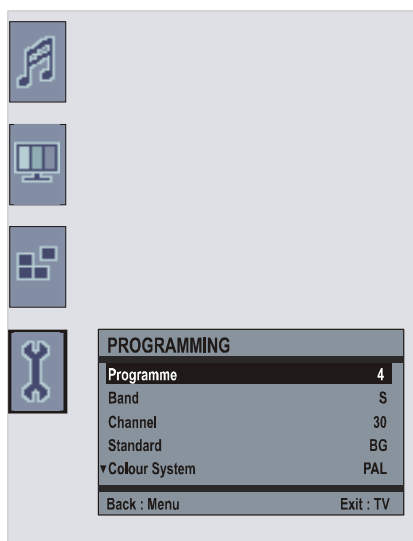

Programme

- By pressing ▲ / ▼ select **Programme**.
- By pressing "◀" / "▶" button, you can select the program number. You can also enter a number via digit buttons on the remote control. There are 100 program storage between 0 and 99.

Band

- By pressing ▲ / ▼ select **Band**.
- By pressing “◀” / “▶” button, you can change the channel type to **C** or **S**.

Channel

- By pressing ▲ / ▼ select **Channel**.
- Use “◀” / “▶” buttons to change the channel number. You can also enter a number via digit buttons on the remote control.

Standard

- By pressing ▲ / ▼ select **Standart**.
- Use “◀” / “▶” button to change the standard to **B/G**, **D/K**, **I** or **L/L**.

Colour System

- By pressing ▲ / ▼ select **Colour System**.
- Use ◀ / ▶ button to change the colour system to **PAL**, **SECAM** or **AUTO**.

Search

- By pressing ▲ / ▼ select **Search**.
- Press ◀ / ▶ button to start search. The search will stop when a signal is found.

Note: If you press the buttons with one-step moves, a frequency of 0.25 Mhz will be advanced. However if you press the buttons all at once, it will advance automatically. To stop searching at a certain time, you may press ▲ / ▼ buttons.

VCR Mode

- By pressing ▲ / ▼ select **VCR mode**.
- Use ◀ / ▶ buttons to set VCR Mode on or off.

Hint: If you want to watch a DVD, then you have to set this item as “off”.

Decoder

You can use this mode to connect any decoder to your TV.

- By pressing ▲ / ▼ select **Decoder**
- Press the ◀ / ▶ buttons to turn it ON or OFF.

When you switch the Decoder setting to OFF, EXT1 output will be muted. In this case, EXT1 output will not be available to display video. If it is switched ON, the EXT-1 output will be the selected video source. Any decoder can be connected to EXT1 to unscramble required video signal.

Hint: Decoder setting should be stored separately for each programme.

Store

- By pressing ▲ / ▼ button select **Store**.
- Press ▶ or “OK” button to store the adjustments. “**Stored**” will be displayed on the screen.

A.P.S.

 
- By pressing ▲ / ▼ button select **A.P.S.**
- Press “▶” button to enter the A.P.S. menu. A.P.S. menu appears on the screen.



A.P.S. (Auto Programming System) Country

Press ◀ / ▶ button to select your country. If you want to exit from A.P.S. function, press the “TV” button. For going back, press “M”.

When you press OK button for starting APS, all stored programs will be erased and the following screen will be displayed.

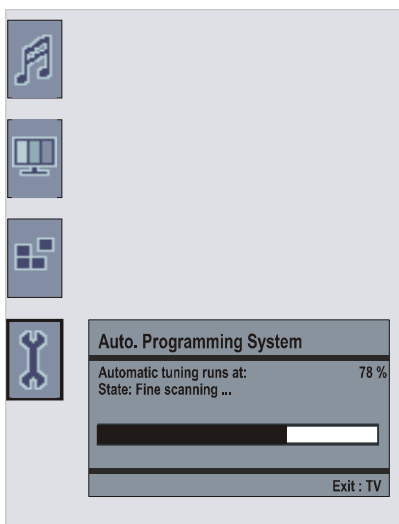

Whenever you press the “TV” button, A.P.S. function stops and Channel table appears on the screen.

 
If you wait until the end of A.P.S., Channel table is displayed with the programmes found and located.

Teletext Region

- By pressing ▲ / ▼ button select **Teletext Region**.
- Using ◀ / ▶ buttons in the Install menu, select your Teletext region. There are five options to select : **West Europe, East Europe, Turk/Gre, Cyrillic** and **Arabic/Hebrew**.


Install menu in AV modes

The following screen appears in the install menu:

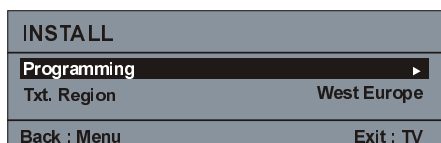

Programming

 
- By pressing ▲ / ▼ select **Programming Mode**.
- After pressing “▶” button, programming menu appears on the screen.

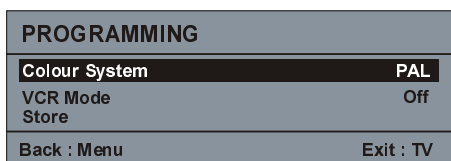

Colour System

- By pressing ▲ / ▼ select **Colour System**.
- By pressing “◀” / “▶” button, you can change the colour system to **PAL, SECAM** or **AUTO**.

 Program Table

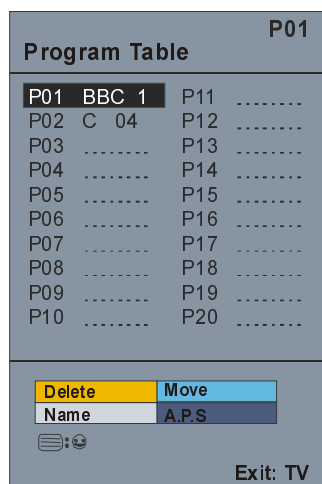

By moving the cursor in four directions you can reach

20 programmes in the same page. You can scroll the pages up or down by pressing the navigation buttons to see all the programmes in TV mode (except the AV mode). By cursor action, programme selection is done automatically.

Name:

To change the name of a programme, select the programme and press the YELLOW button.

The first letter of the selected name will be highlighted. Press ▲ / ▼ button to change that letter and ◀ / ▶ button to select the other letters. By pressing the YELLOW button, you can store the name.

Move:

Select the programme that you want to insert by navigation buttons. Press the GREEN button. By navigation buttons, move the selected programme to the decided programme space and press the GREEN button again.

Delete:

To delete a programme, press the RED button. Pressing the RED button again erases the selected programme from the programme list, and the programmes below shift one up.

APS (Auto Programming System)

When you press the BLUE button for APS, Auto Programming System Menu will appear on the Screen.

Favourite Mode:

You can set various channels as favourites so that only the favourites are navigated. To set a favourite, use navigation buttons to select a channel and then press the “TXT” item. The channel selected as a favourite appears in the Program Table with a

favourites icon (☺) against the channel name. For removing a favourite, carry out the same operation. To exit, press MENU.

Other Features

TV Status

Programme Number, Programme Name, Sound Indicator and **Zoom Mode** are displayed on the screen when a new programme is entered.

Mute Indicator

It is placed in the upper side of the screen when enabled.



To cancel mute, there are two alternatives; the first one is pressing the MUTE button and the second one is increasing/decreasing the volume level.

 
AV Modes

By pressing the AV button you can switch your TV to AV modes (except being in teletext). Pressing this button consecutively will switch the TV in one of the optional AV modes: **TV**, **EXT1**, **EXT2**, **SVHS**. To remove source osd from screen press "TV" or "**M**" button. In order to quit the AV Mode, press the **TV** or the "**P+**, **P-**" button.

Personal Preference

By pressing this button, you may adopt the previous settings that you had stored before.

Menu System in AV Modes

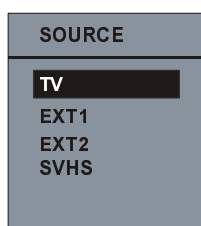

Sound/Picture/Features/Install Menu

The items in these menus are described at **Sound**, **Picture**, **Features and Install Menu** explained in "Menu System".

Teletext

(This information only applies if your TV is equipped to receive TELETEXT) (optional)

 
Teletext is an information system that displays text on your TV screen. Using the Teletext information system you can view a page of information on a subject that is available in the list of contents (index).

On screen display is not available in text mode.

Contrast, brightness or colour control is not available, but volume control is available in text mode.

To operate Teletext


- Select a TV station on which Teletext is being transmitted.
- Press (TELETEXT) "TXT" button. Usually the list of contents (index) is displayed on the screen.

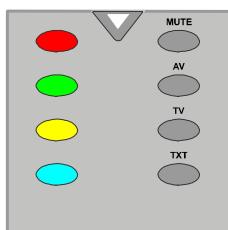

To select a page of Teletext

- Press the appropriate digit buttons for the required Teletext page number.

 The selected page number is displayed at the top left corner of the screen. The Teletext page counter searches until the selected page number is located, so that the desired page is displayed on the screen.

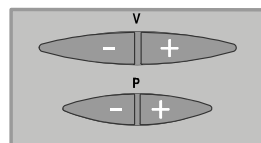

- Press "**P+**" button to move the Teletext screen forward one page at a time.
- Press "**P-**" button to move the Teletext screen backward one page at a time.

Fasttext

Your TV supports the 7 page Teletext system. When the page number of any of the 7 pages in memory is entered, the system will not search for the requested page; instead it will display the page automatically. If the requested page is not in memory, the system will search for the requested page number and save the 7 pages including the requested page into memory after finding it.

- Press the **▲** button to move the Teletext screen forward one page at a time.
- Press the **▼** button to move the Teletext screen backward one page at a time.

For Fasttext

The subject-heading for the information may have a particular colour.

- Press an appropriate **RED**, **GREEN**, **YELLOW** or **BLUE** button in order to reach the relevant page quickly.

TOP text

TOP text mode of operation will be activated automatically according to the transmission.

- If TOP text transmission is present, colour coded buttons will appear in status row.
- If TOP text transmission is not present, status row will not appear.

The subject-heading for information may be located in colored box.

In Top mode the "**P-**" or "**P+**" commands will request the next or previous page respectively. If TOP text transmission is not available, in case of operation of these commands, wraparound occurs. For example page 100 appears to be one greater than page 199.

Connect Peripheral Equipment

Via The Scart

The TV has a Scart sockets. If you want to connect peripherals (e.g. video, decoder, etc.) which have Scart sockets to the TV, you can use SCART socket of the TV.

Note: *If an external device is connected via the Scart sockets, the TV will automatically switch to AV mode.*

Via Aerial Input

If the device you want to connect does not have a Scart socket, you should connect it to the Aerial input of the TV.

If the VCR is connected via Aerial input, it is suggested to use Programme 0.

Decoder

If you are subscribed to cable TV offers, the organisation will supply you a corresponding decoder unit to allow the programmes to be unscrambled.

For further information consult your dealer.

Connect a decoder with an aerial socket to the TV

- Connect the aerial cable.

Connect a decoder without an aerial socket to the TV

- Connect the decoder to the EXTERNAL socket of TV with a RCA cable. Through the SCART/RCA socket of the decoder, you may attain a better display resolution.

TV And Video Recorder

- Connect the aerial cables.

Better picture quality can be obtained if you also connect a Scart cable to SCART sockets.

Playback NTSC

- Connect NTSC VCR player to a Scart socket of the TV.

Then, press the "AV" button to select EXT1.

Camera And Camcorder

To Connect To AV Input

Connect your camera or camcorder to EXT2 input of the TV.

- Connect your equipment to the TV via VIDEO (yellow), AUDIO R (red) and AUDIO L (white) inputs. You must connect the jacks into the input with the same colour.

Connection to S-Video Input.

Connect your camera or Camcorder to the S-Video input of the Tv.

Connect the video to the S- Video input and the sound to the AV audio input.

Connect The Decoder To The Video Recorder

Some video recorders have a special Scart socket for decoder.

- Connect a Scart cable to the Scart socket of your decoder and to the special Scart socket of your video recorder. Refer to the booklet of your video recorder.

Connecting Headphones

Use the stereo headphone socket of the TV, to connect headphones.

Note: *If you want to connect more equipment to your TV, consult your dealer.)*

Audio Lineout

To connect the external speakers to your TV, use the Line Out of the TV.

Care Of The Screen

Clean the screen with a slightly damp, soft cloth. Do not use aprasive solvents as they may damage the TV screen coating layer.

Information for users applicable in European Union countries



This symbol on the product or on its packaging means that your electrical and electronic equipment should be disposed at the end of life separately from your household wastes. There are separate collection systems for recycling in EU. For more information, please contact the local authority or the dealer where you purchased the product.

Help Guide

Should you have problems or the Tv malfunction, please consult the guide below before calling the Customer Help Line.

Symptom	Possible Cause	Remedy
Dead. No led lit	No power to the Tv.	Check all connections and ensure the mains supply is turned on and the TV power button is turned on.
No Picture. Led is Red.	Tv in standby.	Use the P+ P- buttons on the Tv or the Remote control or use a numeric button.
No Picture Led is Green.	Incorrect input selected.	Select Tv if Tv is required or AV if an external input is being used.
		Ensure the external apparatus is turned on.
Picture Ok. No sound	Volume set low	Turn the Volume up with the V+ button
	Mute is ON	Turn Mute OFF with the remote control
	Incorrect sound system selected.	In the UK "I" must be selected
Picture is noisy or ghosting	Poor aerial signal	Check all aerial connections. If using an indoor aerial, you may need an outdoor aerial
Teletext freezing or breaking up	As above	As above
No or intermittent Remote control functions	Battery exhausted	Replace battery in handset

If you are still having difficulty please call the Technical help line. Ring 01422 203676 (Normal rates apply).
Opening hours Mon-Fri 8 am – 8pm. Sat 9 am – 4pm. Sun 11am – 4pm "Bank holidays as Sun"

Specifications

TV BROADCASTING
PAL/SECAM B/G D/K K' I/I' L/L'

RECEIVING CHANNELS
VHF (BAND I/II)
UHF (BAND U)
HYPERBAND
CABLE TV (S1-S20/ S21-S41)

NUMBER OF PRESET CHANNELS
100

CHANNEL INDICATOR
On Screen Display

RF AERIAL INPUT
75 Ohm (unbalanced)

OPERATING VOLTAGE
12V DC.

AUDIO
German+Nicam Stereo

AUDIO OUTPUT POWER (W_{RMS}) (%10 THD)
2 x 2


POWER CONSUMPTION (W)
40W
0,6 W (Stand-by)

PANEL
4:3 display, 15" Screen Size


DIMENSIONS (mm)



DIMENSIONS (mm)				
D	L	H	Weight (kg)	
170	390	378	5,2	With foot
73	304	462	3,7	Without foot

 Connect Peripheral Equipment

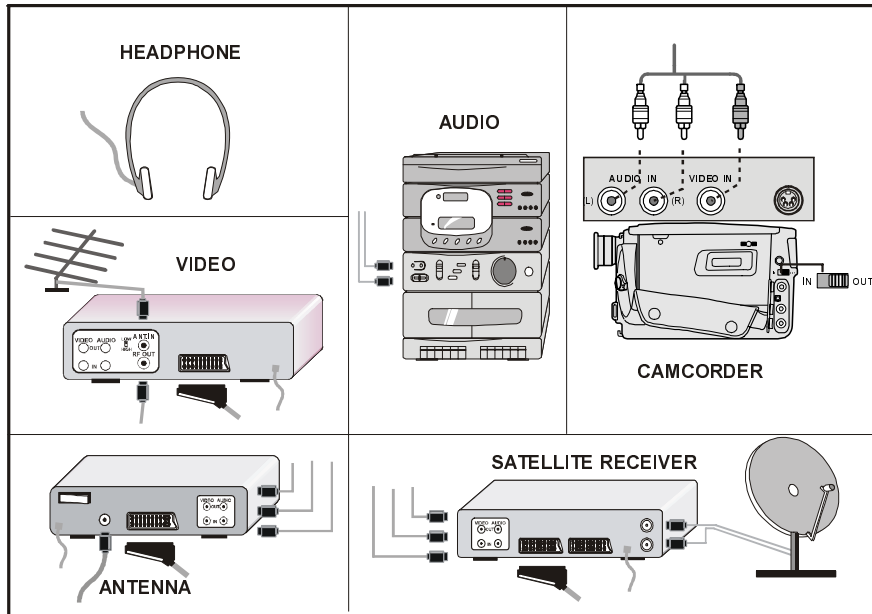

Peripheral Equipment Connections

   - Ⓐ DC 12 V 
- Ⓑ VIDEO INPUT
- Ⓒ AUDIO INPUT (L, R)
- Ⓓ S-VIDEO
- Ⓔ HEADPHONE
- Ⓕ SCART
- Ⓖ ANTENNA
- Ⓗ LINE OUT (L, R)

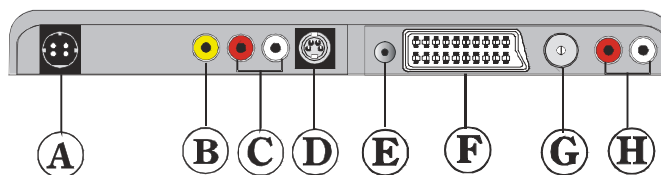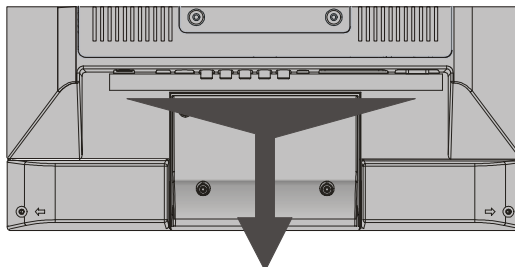


Important Instruction

For your own safety read following instruction carefully before attempting to connect this unit to the mains supply.

MAINS (AC) OPERATION

 The wires in the mains lead are coloured in accordance with the following code :

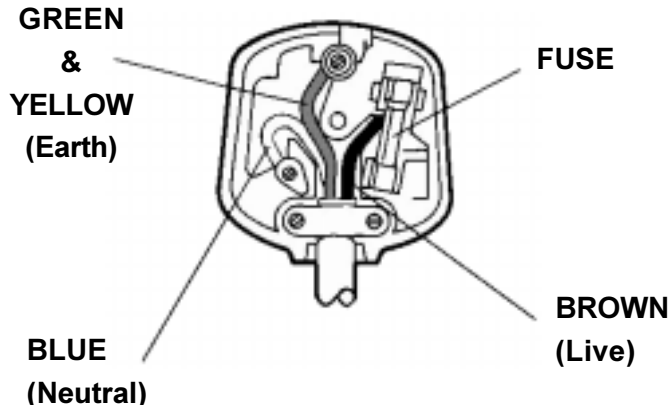

**GREEN
&
YELLOW
(Earth)**

**BLUE
(Neutral)**

FUSE

**BROWN
(Live)**

IMPORTANT

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter E, or by the earth symbol, or coloured green or green and yellow.

The wire which is coloured blue or black must be connected to the terminal which is marked with the letter N or coloured Black.

The wire which is coloured brown or red must be connected to the terminal which is marked with the letter L or coloured Red.

For continued protection against risk of fire, replace only with same type and rating of fuse (ASTA approved 5A 250VAC fuse).

If your product is fitted with a moulded plug which requires replacement please cut off and dispose of safely, then rewire as shown above.

CAUTION

TO PREVENT ELECTRIC SHOCK DISCONNECT FROM THE MAINS BEFORE REMOVING COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

SAFETY PRECAUTION

THIS EQUIPMENT MUST BE DISCONNECTED FROM THE MAINS WHEN NOT IN USE. DO NOT ALLOW THIS UNIT TO BE EXPOSED TO RAIN OR MOISTURE.