



AKURA

OPERATING INSTRUCTIONS

AVLCD37700-HDS

32" LCD TV COLOUR TELEVISION

HDMI[™]
HIGH DEFINITION MULTIMEDIA INTERFACE



Contents

| | | | |
|---------------------------------------------|-----------|-------------------------------------------|-----------|
| Safety Precautions | 2 | Teletext | 19 |
| Features | 4 | To Operate Teletext | 19 |
| Preparation | 5 | To Select A Page Of Teletext | 19 |
| Installation Of The TFT TV To | | To Select Index Page | 19 |
| The Wall (optional) | 5 | To Select Teletext With A TV Programme . | 19 |
| Brick Wall | 5 | To Select Double Height Text | 19 |
| Composite walls | 5 | To Reveal "Concealed" Information ... | 19 |
| LCD TV | 7 | To Stop Automatic Page Change | 19 |
| Remote Control Buttons | 9 | To Select A Subcode Page | 19 |
| Before Switching On Your TV | 10 | To Exit Teletext | 20 |
| Power Connection | 10 | To Display The Time | 20 |
| Connections To The Aerial Input Socket . | 10 | Fastext | 20 |
| How To Connect Other Devices | 10 | Connect Peripheral Equipment | 20 |
| Inserting Batteries In The Remote | | High Definition | 20 |
| Control Handset | 10 | Via The Scart | 20 |
| Switching The TV ON/OFF | 10 | Via Aerial Input | 20 |
| To switch the TV on: | 10 | Decoder | 21 |
| To switch the TV off: | 10 | TV And Video Recorder | 21 |
| Initial Settings | 11 | Playback NTSC | 21 |
| Initial APS (Automatic | | Copy Facility | 21 |
| Programming System) | 11 | Search For And Store The Test | |
| Operating The TV | 11 | Signal Of The Video Recorder | 21 |
| Operating with the buttons on the TV set .. | 11 | Camera And Camcorder | 21 |
| Operating With Remote Control | 11 | To Connect to S-Video Input | 21 |
| Menu System | 12 | Connect The Decoder To The Video | |
| Picture menu | 12 | Recorder | 21 |
| Sound menu | 13 | Connecting Headphones | 21 |
| Feature menu | 14 | Aerial Connection | 22 |
| Install menu | 15 | Specifications | 24 |
| Program menu | 16 | Important Instruction | 25 |
| Source menu | 17 | | |
| Other Features | 17 | | |
| TV Status | 17 | | |
| Mute Indicator | 17 | | |
| Freeze Picture | 17 | | |
| Zoom Modes | 18 | | |

Safety Precautions

Please read the following recommended safety precautions carefully for your safety

1. Power Source

The set should be operated only from a **230-240V AC, 50 Hz.** outlet. Ensure you select the correct voltage setting for your convenience.

2. Power Cord

Do not place the set, a piece of furniture, etc. on the power cord (mains lead) or pinch the cord. Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Never make a knot in the cord or tie it with other cord. The power cord should be placed in such a way that they are not likely to be stepped on.

A damaged power cord can cause fire or give you an electric shock. When it is damaged and needs to be changed, it should be done by qualified personnel.

3. Moisture and Water

Do not use this equipment in a humid and damp place (avoid the bathroom, the sink in the kitchen, and near the washing machine). Do not expose this equipment to rain or water, as this may be dangerous and do not place objects filled with liquids, such as flower vases on top of the set. Avoid from dripping or splashing.

If any solid object or liquid falls into the cabinet, unplug the set and have it checked by qualified personnel before operating it any further.

4. Cleaning

Before cleaning, disconnect the mains supply. Do not use chemical cleaning agents. Use a dry duster. For sticky stains, use a damp cloth with a mild detergent.

5. Ventilation

The slots and openings on the back cover are intended for ventilation and to ensure reliable operation. To prevent overheating, these openings must not be blocked or covered in anyway.

6. Heat and Flames

In the case of a Thunderstorm, or when leaving the Tv for long periods, disconnect the Aerial lead (if outdoor) and the mains supply to prevent power surges damaging the Tv.

7. Lightning

In case of storm and lightning or when going on holiday, disconnect the power cord from the wall outlet.

8. Replacement Part

When replacement parts are required, be sure the service technician has used replacement parts which are specified by the manufacturer or have the same specifications as the original one. Unauthorised substitutions may result in fire, electrical shock, or other hazards.

9. Servicing

Please refer all servicing to qualified personnel. Do not remove the cover yourself as this may result in an electric shock.

WARNING: When the device is not in use for a long time, disconnect from power.

Instructions for waste disposal:

- **Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children.**


Remote Control Batteries

When batteries are exhausted do not throw in the domestic waste. Contact the local waste authority.

Do NOT break open or throw on a fire, they may cause injury or damage.

- **Cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury, please follow local ordinances or regulations for disposal.**
- **The mains plug is used to disconnect the TV from the mains and therefore it shall remain readily operable.**

Warning: To prevent injury, this device must be securely attached to the floor/wall in accordance with the installation instructions.

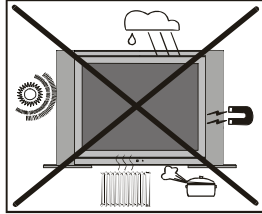

"The LCD panel is very high technology product with about a million thin film transistors, giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product."

Correct disposal of this Product

(Waste Electrical & Electronic Equipment (WEEE))



The crossed out "Wheele bin" is intended to show that this appliance must not be placed with ordinary household waste at the end of its useful life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please keep separate from other household waste and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where you purchased the product, or their local government office for details of where and how you can take this item for environmentally safe re-cycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product must not be mixed with other commercial wastes for disposal



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.



The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Be sure to ground the connection properly.

Connect the ground terminal of TV with the ground terminal provided at the power outlet using the enclosed power cord. If the provided plug does not fit your outlet, consult an electrician for replacement of the obsolete outlet.



Surely connect the ground wire.

Features


- Remote controlled colour television.
- 100 programmes from VHF, UHF bands or cable channels can be preset.
- It can tune cable channels.
- Controlling the TV is very easy by its menu driven system.
- It has 2 Scart sockets for external devices (such as video, video games, audio set, etc.)
- Stereo sound system (German+Nicam).
- Full function Teletext .
Fastext (1000 Pages), TOP text.
- Headphone connection.
- Direct channel access.
- A.P.S. (Automatic Programming System).
- All programmes can be named.
- Forward or backward automatic tuning.
- Sleep timer.
- Child Lock.
- Automatic sound mute when no transmission.
- NTSC Playback.
- AV in and S-VHS in are available.
- It has an HDMI connector for Digital Video and Audio. This connection is also designed to accept High Definition signals.
- AVL (Automatic Volume Limiting)
- When no valid signal is detected, after 5 minutes the TV switches itself automatically to stand-by mode.
- Stereo PC Audio Input
- PLL (Frequency Search)
- 3D Comb Filter

Preparation

Install Display on solid horizontal surface such as a table or desk.

For ventilation, leave a space of at least 10 cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set.

This apparatus can be used in tropical and/or moderate climates.

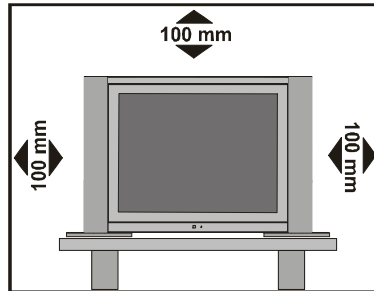

Installation Of The TFT TV To The Wall (optional)

1- To install the TFT TV on the wall, first of all, foot assembly should be removed. (Figure 1). Unscrew the 3 screws (M4 x 6) that attach the foot assembly to the TFT panel and remove the foot assembly from the TFT panel.

2- Place the 4 Plastic stepped spacers "smaller diameter towards the TV" in the holes and attach with (6 x 23mm) screws.

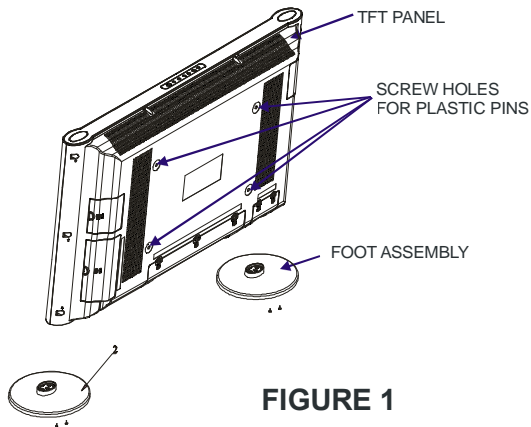


FIGURE 1

Brick Wall

1- Decide where you want to place the Tv. Fix the stencil to the wall and level using a spirit level or other tool.

2- Mark the mounting holes carefully, and drill the holes with a small masonry pilot drill.

3- Now drill the correct size holes for the wall plugs.

4- Place the frame to the wall and fix with 8 4 x 30mm screws.

5- Place the Tv onto the frame and ensure it is fixed firmly. **Note Do NOT walk away from the TV until you are sure it is held firmly.**

Composite walls

Because the support uprights in the composite wall will not be aligned with the holes in the mounting frame, it is wise to seek professional help. Do NOT rely on Plastic wall plugs.

Akura do NOT accept responsibility for damage caused to person or property by poorly fitted wall mountings.


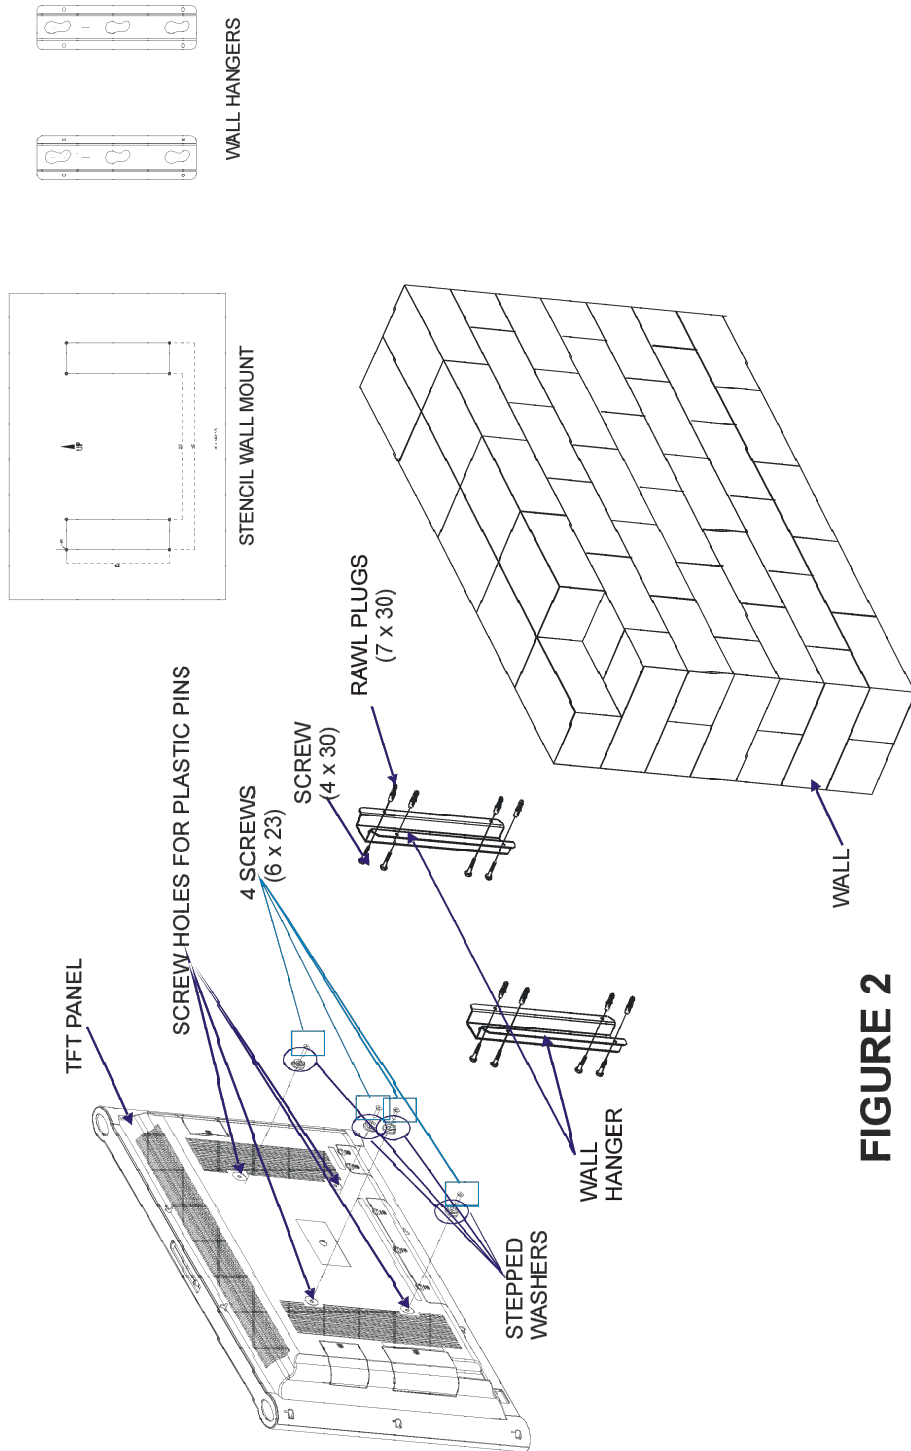



FIGURE 2


LCD TV

FRONT VIEW



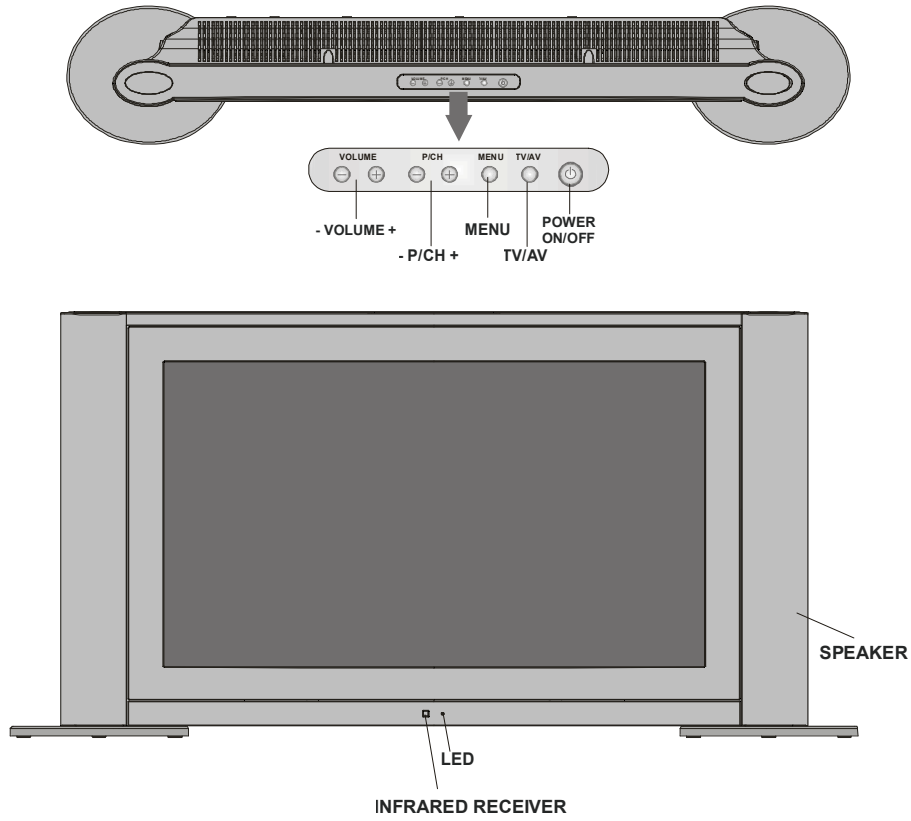

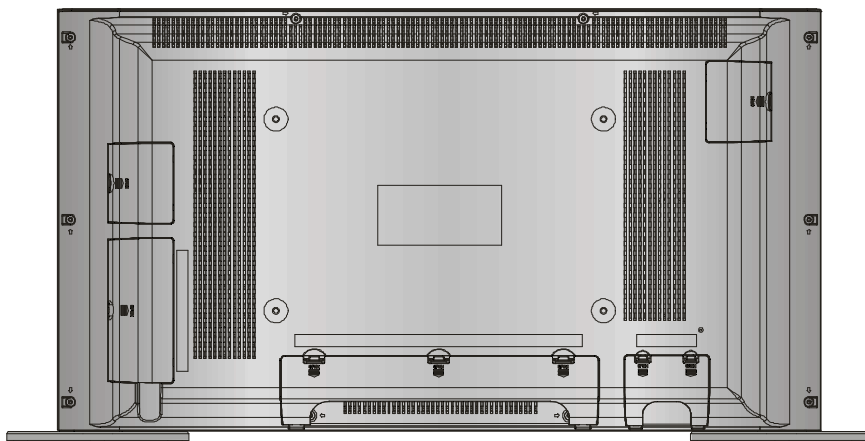

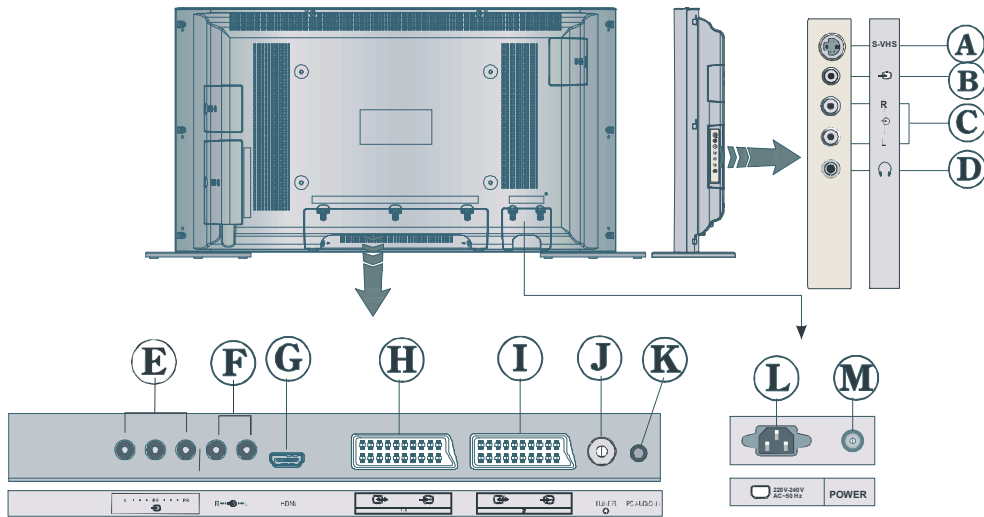









REAR VIEW






- Ⓐ S-Video Input EXT-4S
- Ⓑ Video Input ———— EXT-4
- Ⓒ Audio Inputs ———— EXT-4
- Ⓓ Headphone
- Ⓔ Component Video (YPbPr) Inputs ———— EXT-3
- Ⓕ Component Audio Inputs ———— EXT-3
- Ⓖ HDMI Input (EXT-5)
- Ⓗ Scart 1 (EXT-1)
- Ⓘ Scart 2 (EXT-2)
- Ⓙ Aerial
- Ⓚ PC Audio Input
- Ⓛ Power cord input
- Ⓜ Power On/Off switch

Remote Control Buttons

- ① Signal Indicator
- ② ▲ = Cursor Up
- ③ ⏻ = Stand By
- ④ ► = Cursor Right
- ⑤ **OK** = Okay, Still Picture
- ⑥ ▼ = Cursor Down
- ⑦ **0 - 9** = Direct Programme
- ⑧ **-/- / EXIT** = No Function
- ⑨ **P +** = Programme Up
- ⑩ **P -** = Programme Down
- ⑪ **I-II** = Mono/Stereo - Dual A-B
- ⑫ **TV /  TV** = TV / Quit Menu
- ⑬ **AV** = Source Select
- ⑭ ** / ** = Time / Subpage
- ⑮ ** / ** = Mix / No Function
- ⑯ ** / ** = Update / No Function
- ⑰ ** / **GUIDE** = Index Page**
- ⑱ ** / **PC** = Reveal / No Function**
- ⑲ **BLUE / **INSTALL** = Install Menu**
- ⑳ **YELLOW / **FEATURE** = Feature Menu**
- ㉑ **GREEN / **PICTURE** = Picture Menu**
- ㉒ **RED / **SOUND** = Sound Menu**
- ㉓ ** / **WIDE** / **** = Wide (Zoom Modes) / Expand**
- ㉔ **** = Hold
- ㉕ **** = Teletext
- ㉖ **PP** = Picture Mode Selection (Natural, Cinema, Dynamic)
- ㉗ **V -** = Volume Down
- ㉘ **V+** = Volume Up
- ㉙ **P<P** = Previous Programme
- ㉚ **M** = Main Menu
- ㉛ ◀ = Cursor Left
- ㉜ **** = Mute

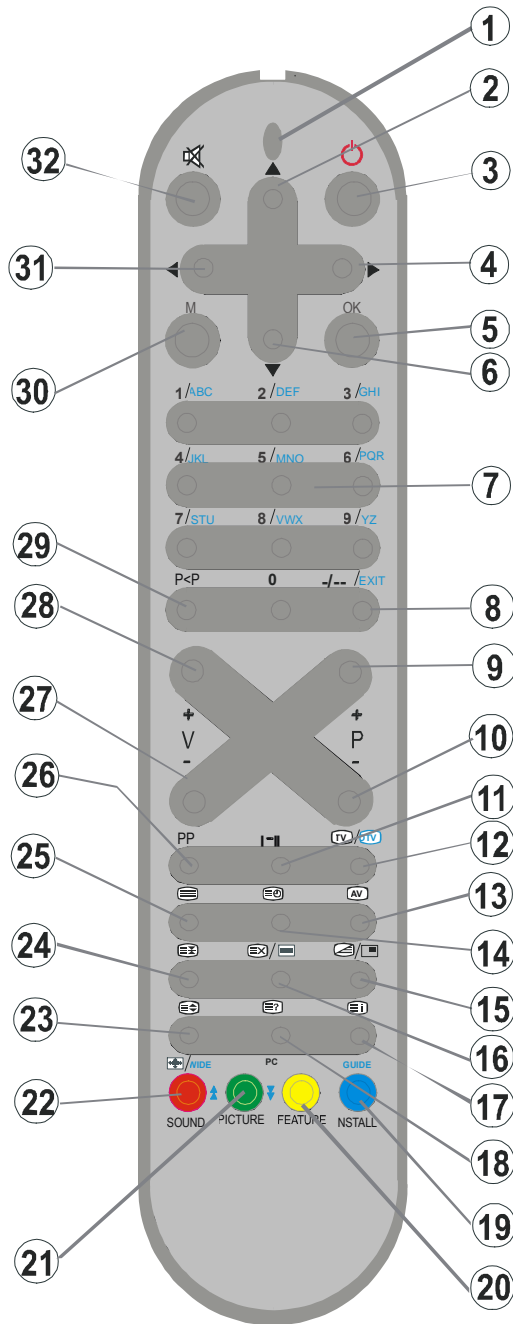


Before Switching On Your TV

Power Connection

IMPORTANT: The TV set is designed to operate on **230-240V AC, 50 Hz.**

- After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains.

Connections To The Aerial Input Socket

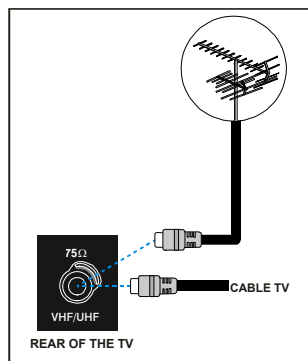

- Connect the aerial to the aerial socket on the TV, you may also connect a VCR or other box at the same time.


How To Connect Other Devices

IMPORTANT: Switch off the TV before connecting any external device.

Sockets for external connections are at the rear side of the TV. For connection of other devices via Scart refer to the manuals of the related devices.

Inserting Batteries In The Remote Control Handset

- Remove the battery cover located on the back of the handset by gently pulling downwards from the indicated part.
- Insert two **AA/R6** or equivalent type batteries inside. Place the batteries in the right directions.
- Replace the battery cover.

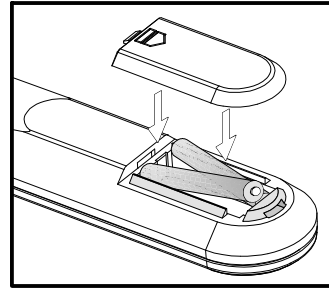

NOTE: Remove the batteries from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of batteries.

Switching The TV ON/OFF

To switch the TV on:

Your TV will switch on in two steps:

- 1- Connect the power supply cord to the system. Press Power On/Off switch "⏻" located by the mains input socket. Then the TV switches itself to stand-by mode and the LED on the front of the TV becomes RED.
- 2- To switch on the TV from stand-by mode either:

Press a digit button on the remote control so that a programme number is selected, or,

Press "⏻", "+P/CH" or "P/CH-" button at the top of the TV or press the "⏻", "- P" or "P +" button on the remote control, so that last mode switched off is selected.

By either method the TV will switch on and the LED is GREEN.

To switch the TV off:

- Press the "⏻ (stand-by)" button on the remote control, so the TV will switch to stand-by mode and the LED will become RED.

To power down the TV completely, press On/Off switch "⏻",


or,

Unplug the power cord from the mains socket.


Initial Settings

Initial APS (Automatic Programming System)

The following menu will be displayed on the screen when you turn your TV on for the first time. APS, searches and sorts all channels and stores them automatically on your TV, according to the transmission of programme systems in your area.

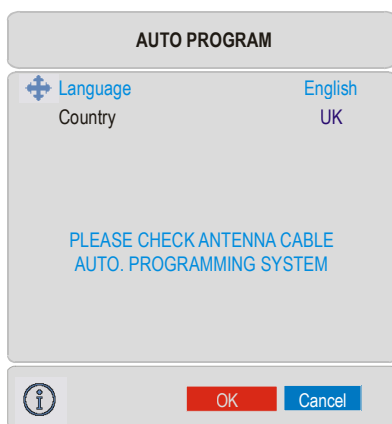

First of all choose **Language** and **Country** by using \blacktriangle / \blacktriangledown and \blacktriangleleft / \blacktriangleright buttons. This will affect the sort process in APS. To start APS, press the **RED** or "**OK**" button.

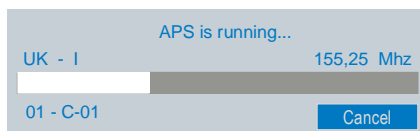

After APS is finalized, the programme table will appear on the screen. In the programme table you will see the programme numbers and names assigned to the programmes.

If you do not accept the locations and / or the programme names of programmes, you can change them from the Program Menu. (See page 15)

Operating The TV

You can operate your TV using both the remote control handset and the buttons on the set.

Operating with the buttons on the TV set

Volume setting and programme selection can be made by using the buttons on the control panel at the top of the TV.

Volume Setting

Press the "**VOLUME -**" button to decrease volume or the "**+ VOLUME**" button to increase volume, so a volume level scale (slider) will be displayed at the bottom of the screen.

Programme Selecting

Press the "**+P/CH**" button to select the next programme or the "**P/CH-**" button to select the previous programme.

Entering The Menu

Press the "**MENU**" button on the control panel at the top of the TV to enter the menu.

"**+P/CH**" / "**PCH-**" and "**VOLUME -**" / "**+ VOLUME**" buttons on the TV are used as navigation buttons in the menu.

AV Mode

Press the "**TV / AV**" button on the control panel at the top of the TV to switch your TV to EXT modes.

Operating With Remote Control

The remote control handset of your TV is designed to control all the functions of your TV. The functions will be described in accordance with the menu system of your TV.

Functions of the menu system are described in Menu System section.

Volume Setting

Press the "**V +**" button to increase volume. Press the "**- V**" button to decrease volume. A volume level scale (slider) will be displayed at the bottom of the screen.

Programme Selecting

(Previous or next programme)

- Press the "**- P**" button to select the previous programme.

- Press the “P +” button to select the next programme.

Programme Selecting (direct access):

Press digit buttons on the remote control handset to select programmes between 0 and 9. The TV will switch to the selected programme after a short delay.

- For a two digit programme number enter the second digit after pressing the first digit within 2 seconds.

Menu System

Your TV has been designed with a menu system to provide easy manipulation of a multifunction system.

Press the “M” button to enter the menu. Press ◀ / ▶ button to select a menu title and then ▲ / ▼ button to select a menu item and ◀ / ▶ or “OK” button to enter the menu item.


You can access the menus directly by pressing the coloured buttons on the remote control:

| | |
|---------------|--------------|
| Red Button | Sound Menu |
| Green Button | Picture Menu |
| Yellow Button | Feature Menu |
| Blue Button | Install Menu |

- Press the “M” or  button to return to the previous menu.

Picture menu

By pressing ◀ / ▶ button, select the first icon. Picture menu appears on the screen.

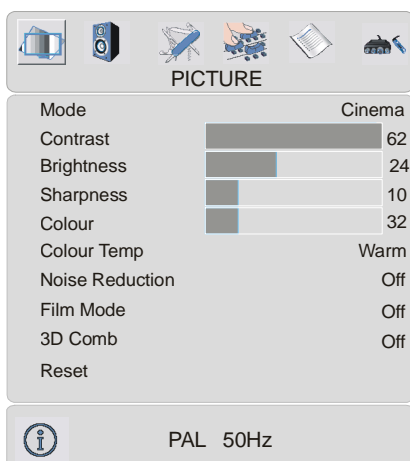

Mode

By pressing ▲ / ▼ button, select **Mode**. Press ◀ / ▶ button to choose one of these options: **Natural**, **Cinema** and **Dynamic**.

Contrast

By pressing ▲ / ▼ button, select **Contrast**. Press ▶ button to increase contrast. Press ◀ button to decrease contrast. Contrast level can be adjusted between 0 and 63.

Brightness

By pressing ▲ / ▼ button, select **Brightness**. Press ▶ button to increase brightness. Press ◀ button to decrease brightness. Brightness level can be adjusted between 0 and 63.

Sharpness

By pressing ▲ / ▼ button, select **Sharpness**. Press ▶ button to increase sharpness. Press ◀ button to decrease sharpness. Sharpness level can be adjusted between 0 and 31.

Colour

By pressing ▲ / ▼ button, select **Colour**. Press ▶ button to increase colour. Press ◀ button to decrease colour. Colour level can be adjusted between 0 and 99.

Hue

This item is displayed in picture menu when the TV receives an NTSC signal. By pressing ▲ / ▼ button, select **Hue**. Press ▶ button to increase hue level. Press ◀ button to decrease hue level. Hue level can be adjusted between -31 and 31.

Colour Temp

By pressing ▲ / ▼ button, select **Colour Temp**. Press ◀ / ▶ button to choose one of these options: **Cool**, **Normal** and **Warm**.

Noise Reduction

This item is used to reduce the image noise and improve the picture quality at weak signals.

By pressing ▲ / ▼ button, select **Noise Reduction**. Press ◀ / ▶ button to set **Noise reduction** level to **Off**, **Low**, **Medium** or **High**.

Film Mode

Films are recorded at a different number of frames per second to normal television programmes.

By pressing \blacktriangle / \blacktriangledown button, select **Film Mode**. Press \blacktriangleleft / \blacktriangleright button to set this feature On or Off. Turn this feature on when you are watching films to see the fast motion scenes clearly.

3D Comb

3D Comb is used to improve colour transitions and colour quality of pictures.


By pressing \blacktriangle / \blacktriangledown button, select **3D Comb**. Press \blacktriangleleft / \blacktriangleright button to set this feature On or Off.

Reset

By pressing \blacktriangle / \blacktriangledown button, select **Reset**. Press \blacktriangleleft / \blacktriangleright or "OK" button to reset the picture modes to factory default settings.

Sound menu

By pressing \blacktriangleleft / \blacktriangleright button, select the second icon. Sound menu appears on the screen.

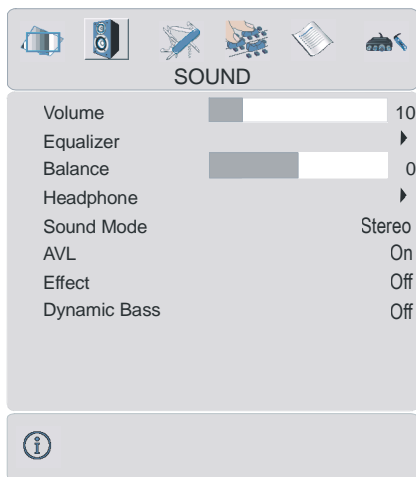


Volume

By pressing \blacktriangle / \blacktriangledown button, select **Volume**. Press \blacktriangleright button to increase volume level. Press \blacktriangleleft button to decrease volume level. Volume level can be adjusted between 0 and 63.

Equalizer

By pressing \blacktriangle / \blacktriangledown button, select **Equalizer**. Press \blacktriangleleft / \blacktriangleright or "OK" button to enter equalizer menu.

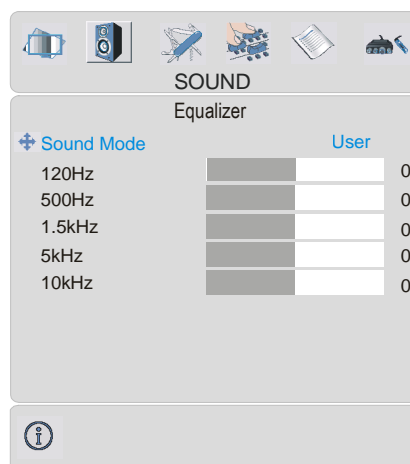

In equalizer menu the sound mode can be changed to **User, Pop, Rock, Jazz, Flat** and **Classic** by pressing \blacktriangleleft / \blacktriangleright button. Equalizer menu settings can be changed only when **Sound Mode** is **User**. Select the desired frequency by \blacktriangle / \blacktriangledown button and increase or decrease the frequency gain by pressing \blacktriangleleft / \blacktriangleright button.


Press the "M" button to return to the previous menu.

Balance

By pressing \blacktriangle / \blacktriangledown button, select **Balance**. Press \blacktriangleright button to increase balance to the right. Press \blacktriangleleft button to increase balance to the left. Balance level can be adjusted between -31 and 31.

Headphone

By pressing \blacktriangle / \blacktriangledown button, select **Headphone**. Press \blacktriangleleft / \blacktriangleright or "OK" button to enter headphone menu.

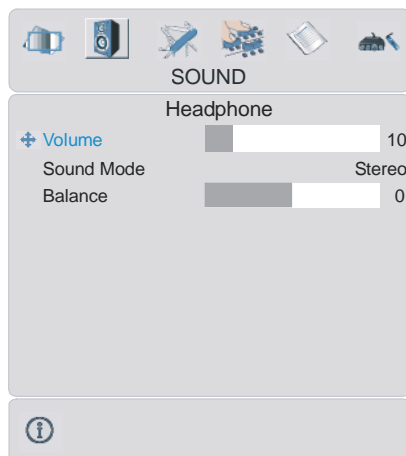

volume

By pressing ▲ / ▼ button, select **Volume**. Press ► button to increase hp volume level. Press ◀ button to decrease hp volume level. Headphone volume level can be adjusted between 0 and 63.

sound mode

By pressing ▲ / ▼ button, select **Sound Mode**. Press ◀/► button to change sound mode. Sound mode is used to identify sound mode of the headphone and can be set to **mono**, **stereo**, **dual a** or **dual b** according to the transmission.

balance

By pressing ▲ / ▼ button, select **Balance**. Press ► button to increase balance to the right. Press ◀ button to decrease balance to the left. Balance level can be adjusted between -31 and 31.

Press the “M” button to return to the previous menu.

Sound Mode

By pressing ▲ / ▼ button, select **Sound Mode**. Press ◀/► button to change the mode.

You can select **Mono**, **Stereo**, **Dual A** or **Dual B** mode, only if the selected channel supports that mode.

In case of bilingual broadcast (Dual Sound), you can select original or dubbed language using mode option.

AVL

Automatic Volume Limiting (AVL) function adjusts the sound to obtain fixed output level between programs, having different sound levels.

Pressing ◀/► button will turn this feature on or off.

Effect

You can use this feature to switch the sound effect on or off. If the current sound system is Mono and the sound effect is switched on, then the sound will be heard as if it is Stereo. If the current sound system is Stereo, switching this effect on will give a more spatial effect.

Pressing ◀/► button will turn this feature on or off.


Dynamic Bass

Dynamic Bass is used to increase bass effect of the TV set.

By pressing ▲ / ▼ button, select **Dynamic Bass**. By pressing ◀/► button set Dynamic bass to Low, High or Off. It is not recommended to select High if listening at high volume levels.

Feature menu

By pressing ◀/► button, select the third icon. Feature menu appears on the screen.

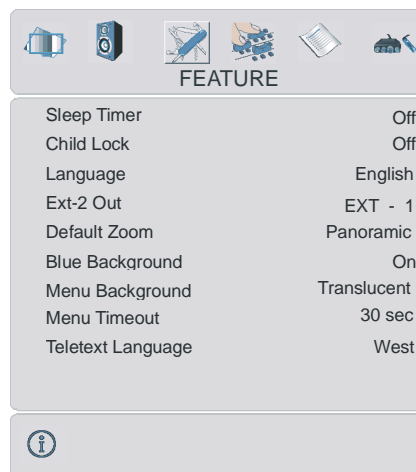

Sleep Timer

By pressing ▲ / ▼ button, select **Sleep Timer**. The timer can be programmed between Off and 2 hours in steps of 10 minutes by pressing ◀ / ▶ button. If sleep timer is activated, at the end of the selected time, the TV automatically goes into stand-by mode.

Child Lock

You can use this feature to prevent children from turning the TV on or changing programmes or adjustments etc. without remote control.

The child lock feature can be set by ◀ / ▶ button to either **On** or **Off**. When **Off** is selected, there will be no difference in the operation of your TV. When **On** is selected, the TV can only be controlled by the remote control handset. In this case the control panel buttons, except the Power on/off button, at the rear side of the TV will not work. If one of these buttons is pressed, "Child Lock On" will be displayed on the screen.

Language

By pressing ▲ / ▼ button, select **Language**. By pressing ◀ / ▶ button, you can select the language.

Ext-2 Out

By pressing ▲ / ▼ button, select **Ext-2 Out**. You can set **Ext-2 Out** to **TV**, **EXT-1**, **EXT-3**, **EXT-4** or **EXT-5** by pressing ◀ / ▶ button.

Note: Only audio output is available for EXT-3 and EXT-5. The other options have both audio and video outputs.

Default Zoom

By pressing ▲ / ▼ button, select **Default Zoom**. You can set **Default Zoom** to **Panoramic**, **4:3** or **14:9 Zoom** by pressing ◀ / ▶ button.

If there is no WSS or aspect ratio (picture size) information and zoom mode is selected as **Auto** by pressing the "WIDE" button, then the zoom mode will automatically change to Default Zoom setting. See also Zoom Modes on page 17.

Blue Background

You can set the TV to automatically change to a blue screen if the signal is weak or absent, or when there is no input from an external device.

The **Blue Background** feature can be turned on or off by pressing ◀ / ▶ button.

Menu Background

By pressing ▲ / ▼ button, select **Menu Background**. You can change menu background to **Translucent** or **Opaque** by pressing ◀ / ▶ button.

Menu Timeout


By pressing ▲ / ▼ button, select **Menu Timeout**. Press ◀ / ▶ button to change menu timeout to **15 sec**, **30 sec** or **60 sec**.

Teletext Language

By pressing ▲ / ▼ button, select **Teletext Language**. Press ◀ / ▶ button to change Teletext Language to **West**, **East**, **Cyrillic**, **Turk/Gre** or **Arabic**. This will normally be set to West for Western Europe.

Install menu

By pressing ◀ / ▶ button, select the fourth icon. Install menu appears on the screen.

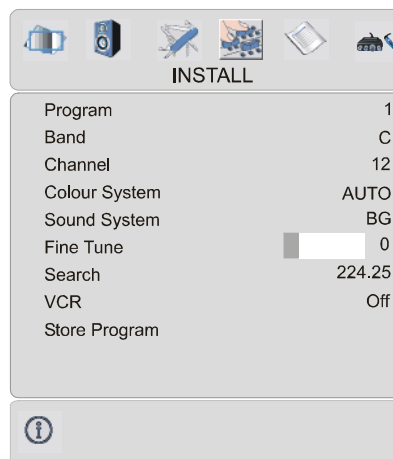

Program

By pressing ▲ / ▼ button, select **Program**. Press ◀ / ▶ button to select the program number. You can also enter a number via

digit buttons on the remote control. There are 100 program storage between 0 and 99.

Band

Band can be selected either "C" or "S" using the \blacktriangleright / \blacktriangleleft buttons. "C" is used for "Off Air" signals. "S" is used for cable connections.

Channel

Channel can be changed by \blacktriangleleft / \blacktriangleright button or Digit Buttons.

Colour System

By pressing \blacktriangleup / \blacktriangledown button, select **Colour System**. Press \blacktriangleleft / \blacktriangleright button to change the colour system to **PAL, SECAM, PAL60** or **AUTO**.

If Sound System is set to **I, SECAM** is not available for the Colour System.

Note: In EXT mode, you can choose NTSC 3.58 and NTSC 4.43 as well.

Sound System

By pressing the \blacktriangleup / \blacktriangledown buttons, select **Sound System**. Press the \blacktriangleleft / \blacktriangleright buttons to select the Sound system. BG "Western Europe", DK "Eastern Europe", I "UK only" L and LP "France".

Fine Tune

By pressing \blacktriangleup / \blacktriangledown button, select **Fine Tune**. Press \blacktriangleleft / \blacktriangleright button to adjust the tuning.

Search

By pressing \blacktriangleup / \blacktriangledown button, select **Search**. Press \blacktriangleleft / \blacktriangleright button to start program searching. The searching will stop when a signal is found. You can also enter a frequency value directly by pressing the digit buttons.

VCR (Video Cassette Recorder)

- This item can be seen in **all modes except EXT-3 and EXT-5**.
- If you want to watch a **VCR** source from one of these modes, then it will be better to set **VCR** mode "on". For this, while the cursor is on this item press the \blacktriangleleft / \blacktriangleright buttons to set it "On".

- If you want to watch a **DVD**, then you must set this item "Off".

Store Program

By pressing \blacktriangleup / \blacktriangledown button, select **Store Program**. Press \blacktriangleleft / \blacktriangleright or "OK" button to store the adjustments. "Program Stored" will be displayed on the screen.

Program menu

By pressing \blacktriangleleft / \blacktriangleright button, select the fifth icon. Program menu appears on the screen.



By moving the cursor in four directions you can reach 20 programmes in the same page. You can scroll the pages up or down by pressing the navigation buttons to see all the programmes in TV mode (except the AV mode).

By cursor action, programme selection is done automatically.

Name:

To change the name of a decided programme, select the programme and press the RED button.

The first letter of the selected name starts to blink. Press \blacktriangleup / \blacktriangledown button to change that letter and \blacktriangleleft / \blacktriangleright button to select the other letters. By pressing the RED button, you can store the name.

Insert:


Select the programme which you want to insert by navigation buttons. Press the GREEN button. By navigation buttons move the selected programme to the decided programme space and press the GREEN button again.

Delete:

To delete a programme, press the YELLOW button. Pressing the YELLOW button again erases the selected programme from the programme list, and the programmes below shift one up.


APS (Automatic Programming System)

When you press the BLUE button for APS, the following warning screen will be displayed.

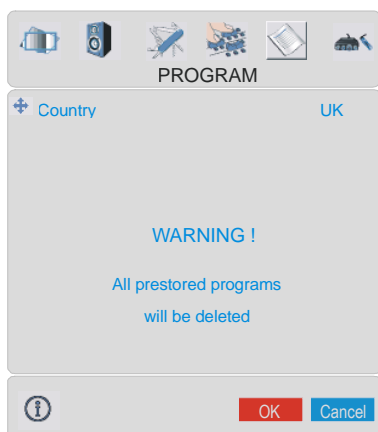

Press the BLUE button to cancel APS if you do not want to delete your existing programme list.


To continue APS, first select the country by pressing ◀ / ▶ button and then press the RED or "OK" button.

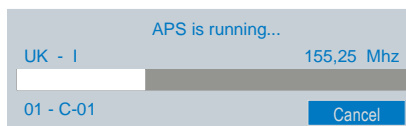

After APS is finalized, the programme table will appear on the screen.

Source menu


By pressing ◀ / ▶ button, select the sixth icon. Source menu appears on the screen.

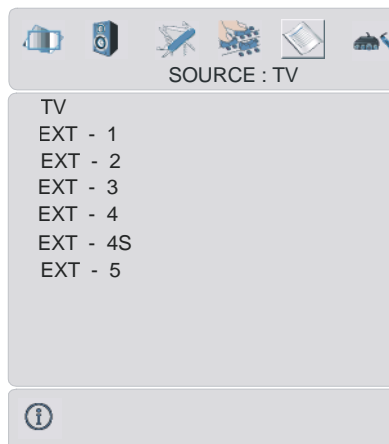

In source menu, highlight a source by pressing ▲ / ▼ button and switch to that mode by pressing ◀ / ▶ or "OK" button.

Other Features


TV Status

Programme Number, Programme Name, Sound Indicator and **Zoom Mode** are displayed on the upper right side of the screen when a new programme is entered,  button is pressed.

Mute Indicator

It is placed in the upper left side of the screen when enabled.



To cancel mute, there are two alternatives; the first one is pressing the  button and the second one is increasing/decreasing the volume level.

Freeze Picture

You can freeze the picture on the screen by pressing the OK button.

Zoom Modes

Zoom mode can be changed by pressing the **WIDE** button. You can change the screen size according to the picture aspect ratio. Select the optimum one from the following **ZOOM** modes.

 
Auto:

When a **WSS (Wide Screen Signalling)** signal, which shows the aspect ratio of the picture, is included in the broadcast signal or the signal from an external device, the TV automatically changes the **ZOOM** mode according to the **WSS** signal.

- When the **AUTO** mode does not function correctly due to poor **WSS** signal quality or when you want to change the **ZOOM** mode, change to another **ZOOM** mode manually.

Full:


This uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen.



- For 16:9 aspect ratio pictures that have been squeezed into a normal picture (4:3 aspect ratio), use the **Full** mode to restore the picture to its original shape.

Cinema:

 This zooms up the wide picture (16:9 aspect ratio) to the full screen.



16:9 Subtitle:

 
This zooms up the wide picture (16:9 aspect ratio) with subtitles to the full screen.



“Default Zoom” Modes:


4:3

Use to view a normal picture (4:3 aspect ratio) as this is its original shape.




14:9 Zoom:

This zooms up the wide picture (14:9 aspect ratio) to the upper and lower limits of the screen.

 

Panoramic:

 This stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the screen, without making the picture appear unnatural.



The top and bottom of the picture are slightly cut off.


Note :


If using the HDMI input you cannot force the screen aspect ratio. The picture size is controlled by the programme suppliers.

Teletext

Teletext is an information system that displays text on your TV screen. Using the Teletext information system you can view a page of information on a subject that is available in the list of contents (index).

To Operate Teletext

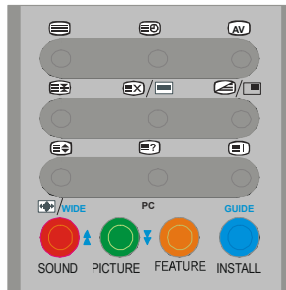

- Select a TV station where Teletext is being transmitted.
- Press the  button. Usually the list of contents (index) is displayed on the screen.



 
To Select A Page Of Teletext

- Press the appropriate digit buttons for the required Teletext page number.



The selected page number is displayed in the top left corner of the screen. The Teletext page counter searches until the selected page number is located, the desired page is then displayed on the screen.

- Press the  or "P +" button to move the Teletext screen forward one page at a time.
- Press the  or "P-" button to move the Teletext screen backward one page at a time.




To Select Index Page

  - To select the page number of the index (generally page 100), press the  button.



To Select Teletext With A TV Programme

 - Press the  button. The text is now superimposed over the programme on the screen.
- Press the  button again to return to the Teletext page.

To Select Double Height Text



- Press the  button for the top half of the information page to be displayed in double height text.
- Press the  button again for the bottom half of the information page to be displayed in double height text.
- Press the  button once more for the full page of normal height text.

  To Reveal "Concealed" Information

 - Pressing the  button once will reveal answers on a quiz or games page.
- Pressing the  button again will conceal the revealed answers.


 
 
To Stop Automatic Page Change

The teletext page you have selected may contain more information than what is on the screen; the rest of the information will be displayed after a period of time.


- Press the  button to stop the automatic page change.
- Press the  button again to allow the next page to be displayed.

To Select A Subcode Page


Subcode pages are subsections of long Teletext pages that can only be displayed on the screen one section at a time.

- Select the required Teletext page.
- Press the  button.
- Select the required subcode page number by pressing four digit buttons (e.g. 0001).
- If the selected subcode page is not displayed in a short time, press the  button. TV programme will be displayed on the screen.
- Teletext page number will be displayed on the upper left corner of the screen when the selected page is found.
- Press the  button to display the selected Teletext page.

To Exit Teletext

 

- Press the  button. The screen will switch to TV mode.

To Display The Time

- While watching a TV programme with Teletext transmission press the  button. The current time information, captured from Teletext will be displayed on the screen.
- If the programme being watched does not have Teletext transmission, no information will be displayed.

Fasttext

Your TV supports the 1000 page Teletext system. When the page number of any of the 1000 pages in memory is entered, the system will not search for the requested page; instead it will display the page automatically. If the requested page is not in memory, the system will search for the requested page number and save the 1000 pages including the requested page into memory after finding it.

- Press the  button to move the Teletext screen forward one page at a time.
- Press the  button to move the Teletext screen backward one page at a time.

For Fasttext

The subject-heading for the information may have a particular colour.


 
- Press an appropriate **RED, GREEN, YELLOW** or **BLUE** button in order to reach the relevant page quickly.

For TOP text

TOP text mode of operation will be activated automatically according to the transmission.

- If TOP text transmission is present, colour coded buttons will appear in status row.
- If TOP text transmission is not present, status row will not appear.

The subject-heading for information may be located in coloured box.

In Top mode the  or  commands will request the next or previous page respectively.

If TOP text transmission is not available, in case of operation of these commands, wraparound occurs. For example page 100 appears to be one greater than page 199.

Connect Peripheral Equipment

There is a wide range of audio and video equipment that can be connected to your TV.

The following connection diagrams show you where the different (Optional) equipment should be connected at the rear side of the TV.

High Definition

Your LCD Television is capable of displaying High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Player. These devices must be connected via the HDMI socket (EXT-5) or Component Socket (EXT-3). These sockets can accept either 720p or 1080i signals.

Note: For proper connection of a device to HDMI input of your TV via using a DVI-to-HDMI cable, use PC Audio In input for sound connection.

Via The Scart

LCD TV has 2 Scart sockets. If you want to connect peripherals (e.g. video, decoder, etc.) which have Scart sockets to the TV, use SCART 1 or SCART 2.

If an external device is connected via the Scart sockets, the TV will be switched to AV mode automatically.

- Do not connect Digital Set Top Box devices via Scart 1. Use Scart 2.

Via Aerial Input

If you want to connect to your TV, peripherals like video recorders or decoders, but the device you want to connect does not have a Scart socket, you should connect it to the Aerial input of the TV.

If the VCR is connected via Aerial input it is suggested to use Programme 0.

Decoder

Cable TV offers you a wide choice of programmes. Most of them are free, others are to be paid for by the viewer. This means that you will need to subscribe to the broadcasting organisation whose programmes you wish to receive. This organisation will supply you a corresponding decoder unit to allow the programmes to be unscrambled.

For further information ask your dealer. See also the booklet supplied with your decoder.

Connect a decoder with an aerial socket to the TV

- Connect the aerial cable.

Connect a decoder without an aerial socket to the TV

- Connect the decoder to the TV with a Scart cable to **SCART 1**.

TV And Video Recorder

- Connect the aerial cables.

Better picture quality can be obtained if you also connect a Scart cable to **SCART** sockets.

Playback NTSC

To use this option you can;

- Connect an NTSC VCR player to a Scart socket at the rear side of the TV.
- Connect an NTSC VCR player to RCA Jacks at the side of the TV.

Then, press **AV** button to select appropriate source.

Copy Facility

Source selection for **VCR** recording.

- Select **Feature** menu.
- Select **Ext-2 Out** by pressing **◀ / ▶** button.
- Select a source to copy the picture from that source.

Search For And Store The Test Signal Of The Video Recorder

- Unplug the aerial cable from the aerial socket of your video recorder.
- Switch on your TV and put the video recorder on the test signal. (See the booklet for your video recorder.)

- Enter the **Install** menu and select **search**.
- Search for the test signal of your video recorder in the same way as you searched for and stored the TV signals. Store the test signal under programme number 0.
- Replace the aerial cable in the aerial socket of your video recorder once you have stored the test signal.

Camera And Camcorder

To Connect To AV Input

Connect your camera or camcorder to AV (EXT-4) input at the right side of the TV.

- Connect your equipment to the TV via **VIDEO** (yellow), **AUDIO R** (red) and **AUDIO L** (white) inputs. You must connect the jacks to the input using the same colour.

To Connect to S-Video Input

Connect your camera or camcorder S-Video output to the input at the rear of the TV.

Connect the equipment to the Tv via the S-Video input and audio input via the input AV-2. Use a S-Video lead and RCA (phono) lead.

Connect The Decoder To The Video Recorder

Some video recorders have a special Scart socket for decoder.


- Connect a Scart cable to the Scart socket of your decoder and to the special Scart socket of your video recorder. Refer to the booklet of your video recorder.
- To connect your video recorder to the TV, refer to the TV and Video Recorder section.

If you want to connect more equipment to your TV, consult your dealer.


Connecting Headphones

Use the stereo headphone socket at the right side of the TV, to connect headphones.

Aerial Connection

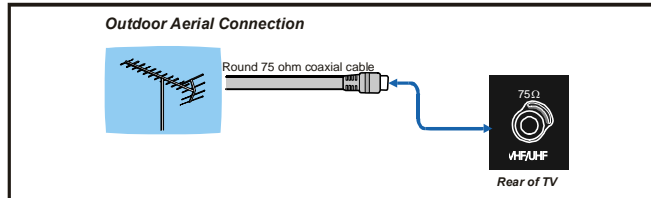

Connect Peripheral Equipment

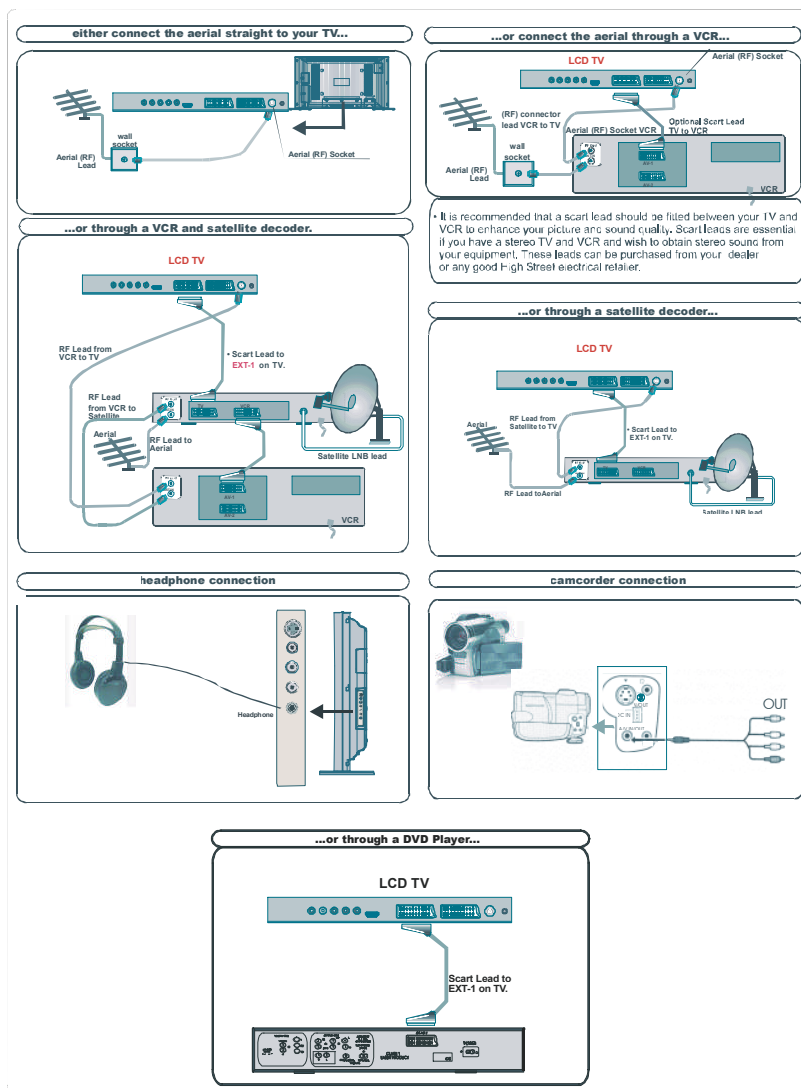

Trouble Shooting Guide

If you experience problems please consult the guide below before calling the Technical Help Line.

| Symptom | Possible cause | Remedy |
|--------------------------------------|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| Set Dead. No led lit. | Power not connected to the Tv | Ensure all connecting leads are fitted firmly and the power switch is turned on. |
| Set Dead. Standby led lit red. | Tv is in standby mode. | See page 9 |
| No picture. Standby led out. | Set switched to AV with no input. | Select TV input. Switch AV source On |
| Poor Noisy or ghosting picture | Poor aerial signal. | Check all aerial connections. If using an indoor aerial, have an external aerial fitted. Disconnect any other items using the same aerial. |
| Signal Ok but Fixed Ghost on screen. | An image may have been burn on the screen. | See page 15 "Screen Wipe" |
| No sound. | Speakers not connected | Check speaker connections |
| | Mute turned on. | Check mute is turned off |
| | External amplifier turned off | Check external amplifier settings. |
| Teletext poor | Poor signal | See advice about aerials |
| No Remote Control functions | Exhausted batteries | Replace the batteries see page 9 |
| | Objects in line of sight | Remove any objects in the path of the sensor of the Tv |

If you are still having difficulty please call the Technical help line. Ring 01422 203676 (Normal rates apply).

Opening hours Mon-Fri 8 am – 8pm. Sat 9 am – 4pm. Sun 11am – 4pm "Bank holidays as Sun"

Care of the Screen.

Do NOT use any solvents or abrasive cleaners on the screen. You may damage the invisible coating. If the screen is dirty you may use a soft cloth and mild detergent.

Specifications

TV BROADCASTING

PAL/SECAM B/G D/K K' I/I' L/L'

RECEIVING CHANNELS

VHF (BAND I/III)

UHF (BAND U)

HYPERBAND

CABLE TV (S1-S20/ S21-S41)

NUMBER OF PRESET CHANNELS 100

CHANNEL INDICATOR

On Screen Display

RF AERIAL INPUT

75 Ohm (unbalanced)

OPERATING VOLTAGE

230-240V AC, 50 Hz.

AUDIO

German + Nicam Stereo

AUDIO OUTPUT POWER (W_{RMS}) (%10 THD)

2 x 8

POWER CONSUMPTION (W)

180 W

2,3 W (Stand-by)

PANEL

16:9 display, 37" Screen Size

DIMENSIONS (mm)

| DIMENSIONS (mm) | | | | |
|-----------------|------|-----|-------------|--------------|
| D | L | H | Weight (kg) | |
| 230 | 1250 | 626 | 27.5 | With foot |
| 110 | 1073 | 615 | 23.9 | Without foot |


To improve the product, the Technical specification may be changed without notice.

Important Instruction

For your own safety read following instruction carefully before attempting to connect this unit to the mains supply.

MAINS (AC) OPERATION

The wires in the mains lead are coloured in accordance with the following code :

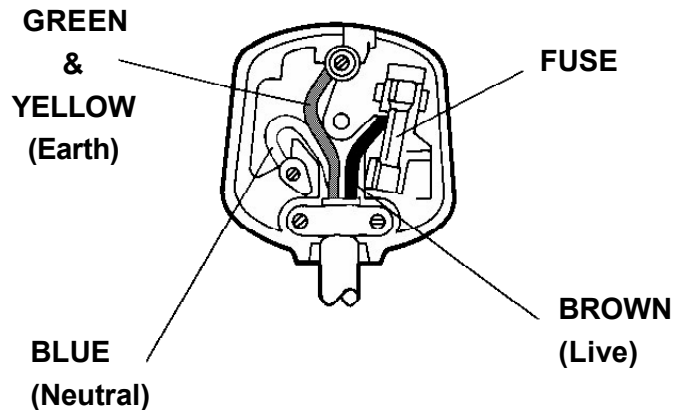

IMPORTANT

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter E, or by the earth symbol, or coloured green or green and yellow.

The wire which is coloured blue or black must be connected to the terminal which is marked with the letter N or coloured Black.

The wire which is coloured brown or red must be connected to the terminal which is marked with the letter L or coloured Red.

For continued protection against risk of fire, replace only with same type and rating of fuse (ASTA approved 5A 250VAC fuse).

(If approved by the qualified TV service personel, 13A fuse may also be used)

If your product is fitted with a moulded plug which requires replacement please cut off and dispose of safely, then rewire as shown above.

CAUTION

TO PREVENT ELECTRIC SHOCK DISCONNECT FROM THE MAINS BEFORE REMOVING COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

SAFETY PRECAUTION

THIS EQUIPMENT MUST BE DISCONNECTED FROM THE MAINS WHEN NOT IN USE. DO NOT ALLOW THIS UNIT TO BE EXPOSED TO RAIN OR MOISTURE.